




RXF18AXVJU / RXF24AXVJU

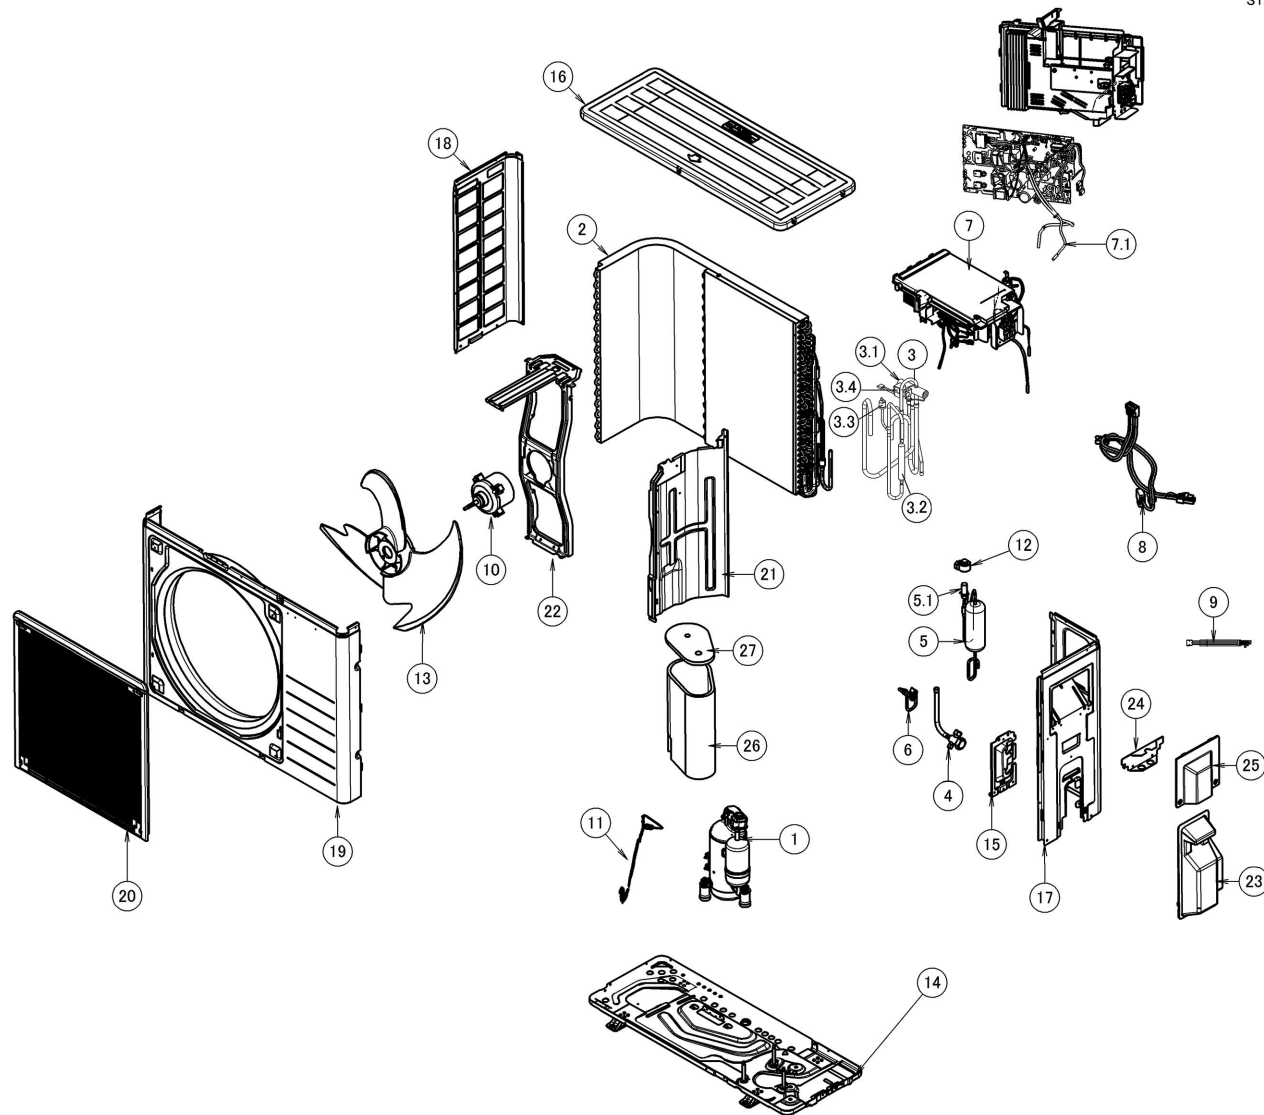

Mounting method (side cap)

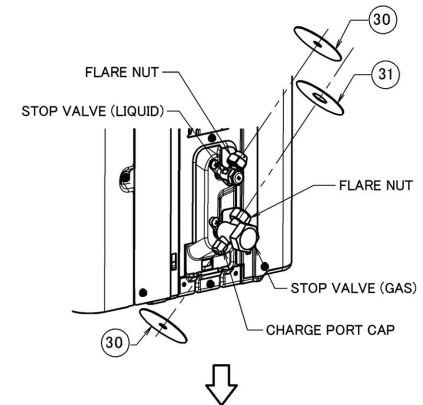

INSERT THE SIDE CAP (SERVICE PORT) AND SIDE CAP (GAS STOP VALVE) INTO THE STOP VALVE (LIQUID) AND (GAS) RESPECTIVELY, BEYOND THE FLARE NUT.

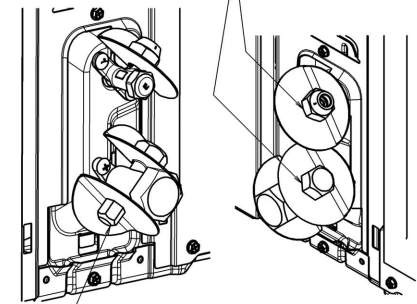

INSERT THE SIDE CAP (SERVICE PORT) INTO THE STOP VALVE (GAS) BEYOND THE CHARGE PORT CAP.

