


CENTRIFUGAL RASC-8HNPE

Pièces détachées


Main view

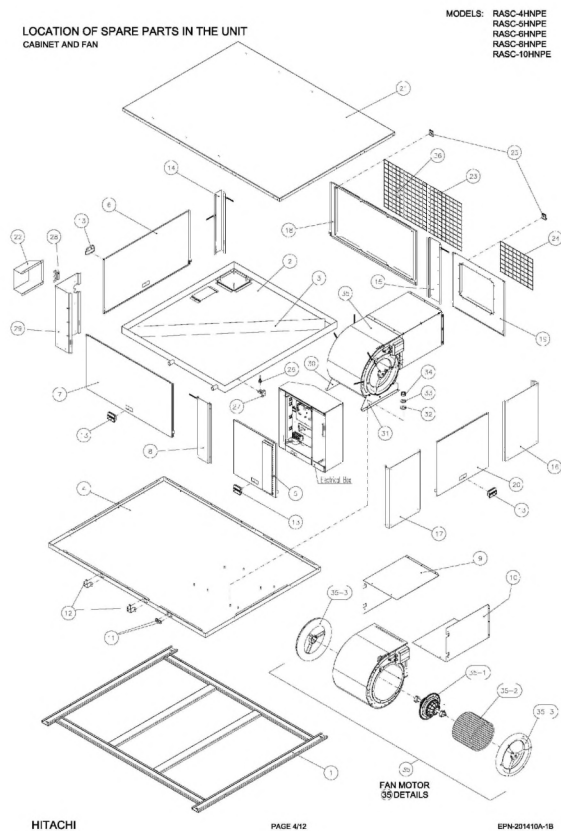

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

CENTRIFUGAL RASC-8HNPE

1	E04384	FOOT ASSY	1	Assembly
2	E04385	Drain Pan Assy	1	Assembly
3	E04386	DP GRILLE	1	Drain pan grille
4	E04387	BOTTOM BASE ASSY	1	Assembly (Plate + Insulations + 1)
5	E04388	E-BOX COVER UNIT	1	Assembly
6	E04389	RIGHT COVER ASSY	1	Assembly (Plate + Insulations)
7	E04390	RIGHT COVER ASSY	1	Assembly (Plate + Insulations)
8	E04391	BACK COVER ASSY	1	Assembly (Plate + Insulations)
9	E04392	FAN DUCT SUB ASSY	1	Assembly (Plate + Insulations)
10	E04393	FAN DUCT SUB ASSY	1	Assembly (Plate + Insulations)
11	E04408	RUBBER BUSHING	2	
12	E04409	PROTECTION PIPE STAY ASSY	2	Assembly (Pate + Insulations)
13	E03723	Handle	4	
14	E04394	RIGHT CORNER ASSY	1	Assembly (Pate + Insulations)
15	E04395	FRONT COVER ASSY	1	Assembly (Pate + Insulations)
16	E04396	LEFT CORNER ASSY	1	Assembly (Pate + Insulations)
17	E04397	LEFT BACK CORNER ASSY	1	Assembly (Pate + Insulations)
18	E04398	INLET AIR COVER ASSY	1	Assembly (Plate + Insulations)
19	E04399	OUTLET AIR FRAME ASSY	1	Assembly (Plate + Insulations)
20	E04400	LEFT COVER ASSY	1	Assembly (Plate + Insulations)
21	E04401	UPPER COVER ASSY	1	Assembly (Plate + Insulations)
22	E04402	S-VALVE PROTECTION ASSY	1	
23	E04403	INLET PROTECTOR NET	1	Inlet
24	E04404	OUTLET PROTECTOR NET	1	Outlet
25	E04410	CLAMP	12	For Inlet and Outlet Protector Net
26	E01038	FLOAT SW	1	
27	E02681	FS STAY	1	
28	E04411	PLATE VALVE ASSY	1	Assembly (Plate + Insulations)
29	E04405	RIGHT BACK CORNER ASSY	1	Assembly (Plate + Insulations)
30	E04406	FAN SUPPORT	1	
31	E04407	FAN SUPPORT	1	
32	E04466	WASHER	4	
33	E04467	WASHER	4	
34	E04468	NUT	4	
35	E03636	FAN ASSY	1	Assembly (35- 1 + 35- 2 + 35- 3)
35-1	E04476	MOTOR	1	
35-2	E04478	MOTOR	1	
35-3	E04480	MOTOR SUPPORT	1	
36	E04471	THERMISTOR	1	For outdoor ambient temperature. THM7 (Ta)

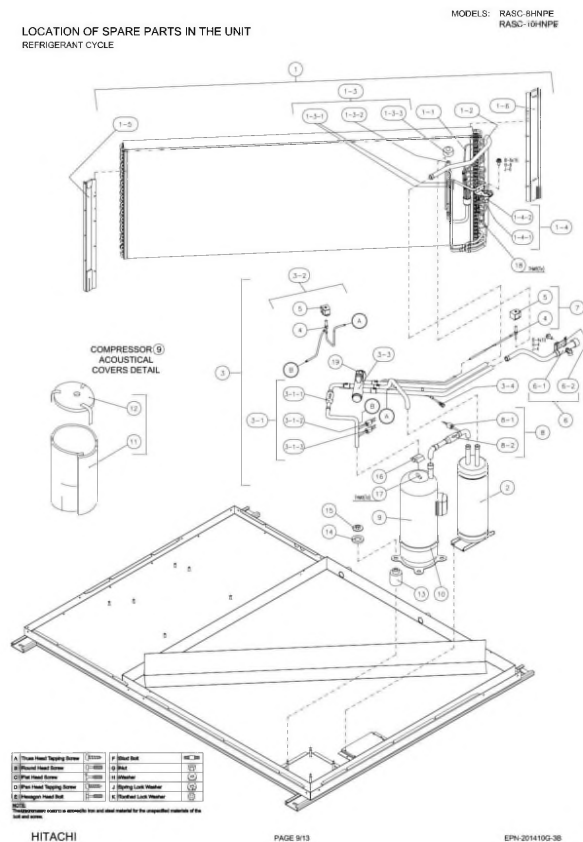

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

CENTRIFUGAL RASC-8HNPE

1	E04434	CONDENSER ASSY	1	Assembly (Heat exchanger + 1- 1 + 1- 2 + 1- 3 + 1- 4 + 1- 5 + 1- 6)
1-1	E04436	HEADER L ASSY	1	Assembly
1-2	E04437	HEADER G ASSY	1	Assembly
1-3	E04438	EVO ASSY	1	Assembly
1-3-1	P26471	STRAINER	2	
1-3-2	P26008	EXP. VALVE	1	
1-4	E04439	LIQUID VALVE ASSY	1	Assembly
1-4-1	E04427	STAY VALVE LIQUID	1	
1-4-2	P28918	STOP VALVE	1	For liquid line 3/8
1-5	E04442	CONDENSER STAY 1 ASSY	1	Assembly (Plate + Insulations + Rubber Bushing)
1-6	E04443	CONDENSER STAY 2 ASSY	1	Assembly (Plate + Insulations + Rubber Bushing)
2	E04452	ACCUMULATOR	1	Assembly
3	E04444	4-WAY VALVE ASSY	1	Assembly
3-1	E04445	D PIPE ASSY	1	Assembly
3-1-1	P28640	Check Valve	1	
3-1-2	E04446	HARNESS P-SENSOR	1	PSC (Control)
3-1-3	P25043	High Pressure Switch	1	PSH (High)
3-2	E04447	SVA ASSY	1	Assembly
3-3	P26337	4-WAY VALVE	1	RVR
3-4	E01160	CHECK JOINT	1	
4	P25246	SOLENOID VALVE	2	SVA
5	P25454	COIL FOR SOLENOID VALVE	2	Coil for Solenoid Valve
6	E04448	GAS VALVE ASSY	1	Assembly
6-1	P28926	B Valve	1	For gas line 3/4
6-2	E04425	GAS VALVE STAY	1	
7	E04450	SVC ASSY	1	
8	E04451	PIPE S ASSY	1	Assembly
8-1	E03342	Pressure Sw	1	
8-2	P24399	STRAINER	1	
9	E03450	Compressor DA50PHD-D1SE2	1	Comp DA50PHD- D1SE2
10	E03452	OIL HEATER	1	240V- 40. 8W
11	E04453	ACOUSTICAL COVER	1	
12	E04454	ACOUSTICAL COVER CAP	1	Upper Cap
13	P28639	Vibration Absorber	4	
14	P13109	VIBRATION ABSORBER	4	
15	E02000	SPECIAL NUT	4	
16	P24397	Rubber Cap	1	
17	E04455	THERMISTOR	1	For Discharge Gas Temp. THM9 (Td)
18	E04456	THERMISTOR	1	For Pipe Temp., THM8 (Te)
1-3-3	XEK12498A	EXP. COIL	1	
19	17F07262A	Coil	1	


CENTRIFUGAL RASC-8HNPE

Pièces détachées

Main view

LOCATION OF SPARE PARTS IN THE UNIT
ELECTRICAL PARTS

MODELS: RASC-8HNPE
RASC-10HNPE

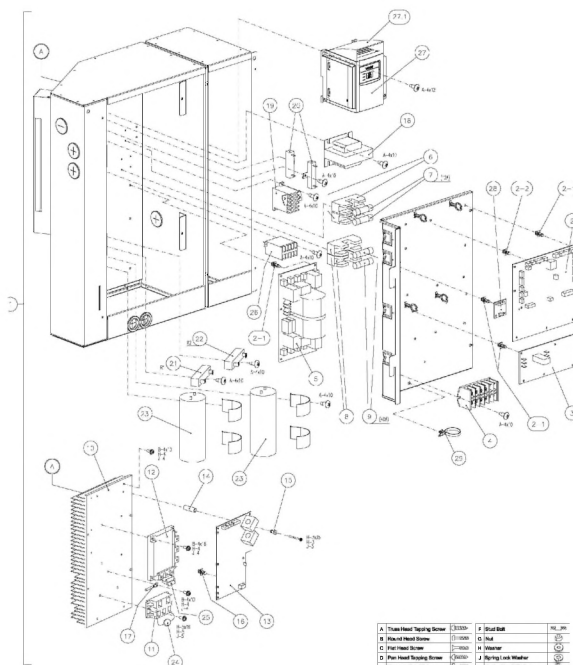

HITACHI

PAGE 12/12

EPN-201410A-08

Rep.

Référence

Description

Qté

Remarques

CENTRIFUGAL RASC-8HNPE

1	E04462	ELECTRICAL BOX	1	Assembly (Components + Harness + Steel Plates + Insulations)
2	E04346	PCB	1	PCB1, PO101B Assy
2-1	E01789	SPACER	22	For PCB1, PCB3, Noise Filter and Fan Adapter
2-2	P21189	PUSH SPACER	2	For PCB1
3	E03440	PCB	1	PCB3, PO121A Assy
4	E00705	TERMINAL BOARD	1	TB
5	P28595	FILTRE	1	NF
6	E01015	FUSE HOLDER	2	
7	E00809	FUSE	2	10A
8	P24729	Fuse Holder	2	
9	P24776	Fuse	2	40A
10	E02042	INVERTER FIN	1	
11	P27214	DIODE MODULE	1	DM
12	P27215	TRANSISTOR M	1	
13	E03160	PCB FOR INVERTER	1	PCB2, PV093 Assy
14	P20986	PLASTIC MATERIAL	4	Plastic Material
15	P26098	PLASTIC MATERIAL	4	Plastic Material
16	E01617	PUSH SPACER	1	For PCB2
17	P26474	THERMISTOR	1	Fin thermistor
18	E03443	Reactor Unit	1	DCL
19	P24721	MAGNETIC CONTACTOR	1	CMC
20	P26062	RESISTOR	2	RS1, RS2
21	P28599	RESISTOR	1	R1
22	P28600	Resistor	1	R2
23	P28597	CAPACITOR	2	CB1, CB2 (450V, 4700µ F)
24	E02121	NOISE SUPPRESSOR	1	ZNR Assy
25	E03704	Capacitor Assy	1	HRN PC301
26	E01873	MAGNETIC CONTACTOR	1	
27	E04464	VFD	1	Variable Frequency Driver
27.1	E04474	VFD TOP COVER	1	
28	E04461	FAN ADAPTER	1	
29	E02012	CLAMP	1	