 


CENTRIFUGAL RASC-6HNPE

Pièces détachées

Main view

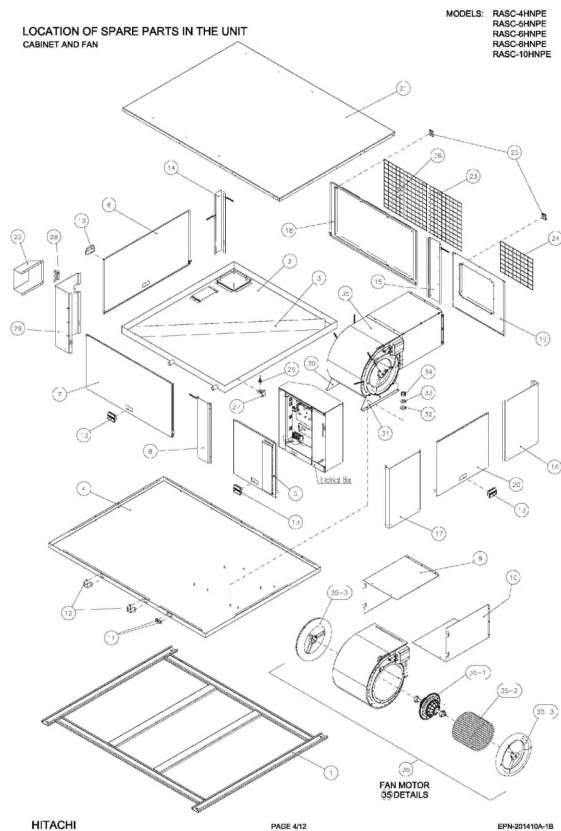

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------


CENTRIFUGAL RASC-6HNPE

1	E04359	FOOT ASSY	1	Assembly
2	E04360	Drain Pan Assy	1	Assembly
3	E04361	DP GRILLE	1	Drain pan grille
4	E04362	BOTTOM BASE ASSY	1	Assembly (Plate + Insulations + 1)
5	E04363	E-BOX COVER UNIT	1	Assembly
6	E04364	RIGHT COVER ASSY	1	Assembly (Plate + Insulations)
7	E04365	RIGHT COVER ASSY	1	Assembly (Plate + Insulations)
8	E04366	BACK COVER ASSY	1	Assembly (Plate + Insulations)
9	E04367	FAN DUCT SUB ASSY	1	Assembly (Plate + Insulations)
10	E04368	FAN DUCT SUB ASSY	1	Assembly (Plate + Insulations)
11	E04408	RUBBER BUSHING	2	
12	E04409	PROTECTION PIPE STAY ASSY	1	Assembly (Pate + Insulations)
13	E03723	Handle	4	
14	E04369	RIGHT CORNER ASSY	1	Assembly (Pate + Insulations)
15	E04370	FRONT COVER ASSY	1	Assembly (Pate + Insulations)
16	E04371	LEFT CORNER ASSY	1	Assembly (Pate + Insulations)
17	E04372	LEFT BACK CORNER ASSY	1	Assembly (Pate + Insulations)
18	E04373	INLET AIR COVER ASSY	1	Assembly (Plate + Insulations)
19	E04374	OUTLET AIR COVER ASSY	1	Assembly (Plate + Insulations)
20	E04375	LEFT COVER ASSY	1	Assembly (Plate + Insulations)
21	E04376	UPPER COVER ASSY	1	Assembly (Plate + Insulations)
22	E04377	S-VALVE PROTECTION ASSY	1	
23	E04378	INLET PROTECTOR NET	1	Inlet
24	E04379	OUTLET PROTECTOR NET	1	Outlet
25	E04410	CLAMP	10	For Inlet and Outlet Protector Net
26	E01038	FLOAT SW	1	
27	E02681	FS STAY	1	
28	E04411	PLATE VALVE ASSY	1	Assembly (Plate + Insulations)
29	E04380	RIGHT BACK CORNER ASSY	1	Assembly (Plate + Insulations)
30	E04382	FAN SUPPORT	1	
31	E04383	FAN SUPPORT	1	
32	E04466	WASHER	4	
33	E04467	WASHER	4	
34	E04468	NUT	4	
35	E04381	FAN ASSY	1	Assembly (35- 1 + 35- 2 + 35- 3)
35-1	E04475	MOTOR	1	
35-2	E04477	MOTOR	1	
35-3	E04479	MOTOR SUPPORT	1	
36	E04470	THERMISTOR	1	For outdoor ambient temperature. THM7 (Ta)

CENTRIFUGAL RASC-6HNPE

Pièces détachées

 Main view

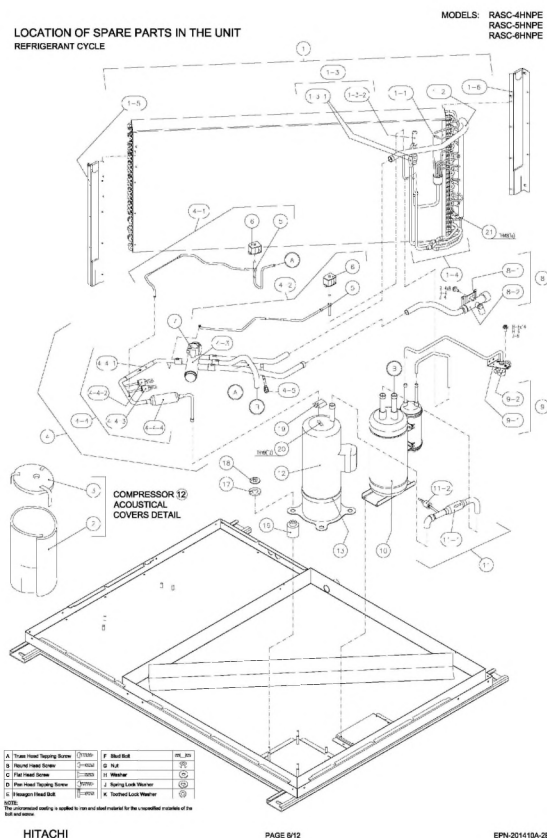

Rep. Référence

Description

Qté

Remarques

CENTRIFUGAL RASC-6HNPE

1	E04412	CONDENSER ASSY	1	Assembly (Heat exchanger + 1- 1 + 1- 2 + 1- 3 + 1- 4 + 1- 5 + 1- 6)
1-1	E04413	HEADER L ASSY	1	Assembly
1-2	E04414	HEADER G ASSY	1	Assembly
1-3	E04415	EVO ASSY	1	Assembly
1-3-1	P25037	STRAINER	2	
1-3-2	P28614	Expansion Valve	1	EVO
1-4	E04416	SUB COOLER PIPE	1	Assembly
1-5	E04417	CONDENSER STAY 1 ASSY	1	Assembly (Plate + Insulations + Rubber Bushing)
1-6	E04418	CONDENSER STAY 2 ASSY	1	Assembly (Plate + Insulations + Rubber Bushing)
2	E04430	ACOUSTICAL COVER	1	
3	E04431	ACOUSTICAL COVER	1	Upper Cover
4	E04419	4-WAY VALVE ASSY	1	Assembly
4-1	E04420	SVA ASSY	1	Assembly
4-2	E04421	SVC ASSY	1	Assembly
4-3	P26337	4-WAY VALVE	1	RVR
4-4	E04422	D PIPE ASSY	1	Assembly
4-4-1	P10777	Check Valve	1	
4-4-2	E04423	HARNESS P-SENSOR	1	PSC (Control)
4-4-3	P25043	High Pressure Switch	1	PSH (High)
4-4-4	P28629	Silencer	1	
4-5	E01160	CHECK JOINT	1	
5	P25246	SOLENOID VALVE	2	SVA / SVC
6	P25454	COIL FOR SOLENOID VALVE	2	Coil for Solenoid Valve
7	P28921	Coil	1	Coil for 4- Way Valve
8	E04424	GAS VALVE ASSY	1	Assembly
8-1	E04425	GAS VALVE STAY	1	
8-2	P28924	Stop Valve	1	For gas line 5/8
9	E04426	LIQUID VALVE ASSY	1	Assembly
9-1	E04427	STAY VALVE LIQUID	1	
9-2	P28918	STOP VALVE	1	For liquid line 3/8
10	E04428	TANK UNIT	1	Assembly (Accumulator + Liquid Tank)
11	E04429	PIPE S2 ASSY	1	Assembly
11-1	P24399	STRAINER	1	
11-2	E03342	Pressure Sw	1	For Low Pressure
12	E03352	Compressor E402HHD-36D2	1	E402HHD- 36D2
13	P29160	C-Heater	1	240V- 52W
16	P28639	Vibration Absorber	4	
17	P13109	VIBRATION ABSORBER	4	
18	E02000	SPECIAL NUT	4	
19	P24397	Rubber Cap	1	
20	E04432	THERMISTOR	1	For Discharge Gas Temp. THM9 (Td)
21	E04433	THERMISTOR	1	For Pipe Temp., THM8 (Te)
1-3-3	P26009	COIL FOR EXP. VALVE	1	Is not included in Expansion Valve Assy

CENTRIFUGAL

 
RASC-6HNPE

Pièces détachées

Main view

LOCATION OF SPARE PARTS IN THE UNIT
ELECTRICAL PARTS

MODELS: RASC-4HNPE
RASC-5HNPE
RASC-6HNPE

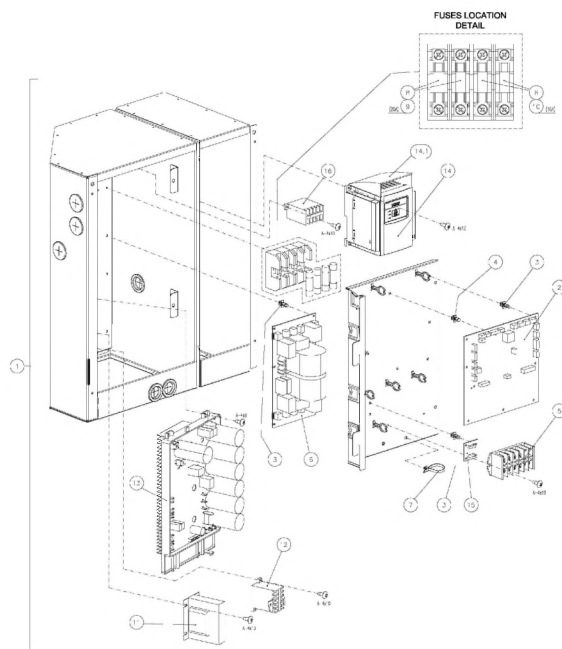

A. Three Phase Feeding Device	1	1. Main Unit
B. Main Feeding Device	2	2. Main Unit
C. Main Feeding Device	3	3. Main Unit
D. Main Feeding Device	4	4. Main Unit
E. Main Feeding Device	5	5. Main Unit
F. Main Feeding Device	6	6. Main Unit
G. Main Feeding Device	7	7. Main Unit
H. Main Feeding Device	8	8. Main Unit
I. Main Feeding Device	9	9. Main Unit
J. Main Feeding Device	10	10. Main Unit
K. Main Feeding Device	11	11. Main Unit
L. Main Feeding Device	12	12. Main Unit
M. Main Feeding Device	13	13. Main Unit
N. Main Feeding Device	14	14. Main Unit

NOTE:
The customer should refer to the unit and cable connection for the appropriate connection of the main unit.

HITACHI

PAGE 10/12

EPN-2014-0A-4B

Rep. Référence

Description

Qté

Remarques

CENTRIFUGAL RASC-6HNPE

1	E04459	ELECTRICAL BOX	1	Assembly (Components + Harness + Steel Plates + Insulations)
2	E04346	PCB	1	PCB1, PO101B Assy
3	E01789	SPACER	16	For PCB, Fan Adapter and Noise Filter
4	P21189	PUSH SPACER	2	For PCB1
5	E00705	TERMINAL BOARD	1	TB
6	P28595	FILTRE	1	NF
7	E02012	CLAMP	1	
8	E01015	FUSE HOLDER	4	
9	E00810	FUSE	2	20A
10	E00809	FUSE	2	10A
11	E03374	Reactor Unit	1	
12	P24721	MAGNETIC CONTACTOR	1	Fuji Electric, FC- 0/SP
13	E03376	INV. FIN ASSY	1	
14	E04460	VFD	1	Variable Frequency Driver
14.1	E04474	VFD TOP COVER	1	
15	E04461	FAN ADAPTER	1	
16	E01873	MAGNETIC CONTACTOR	1	For Fan