


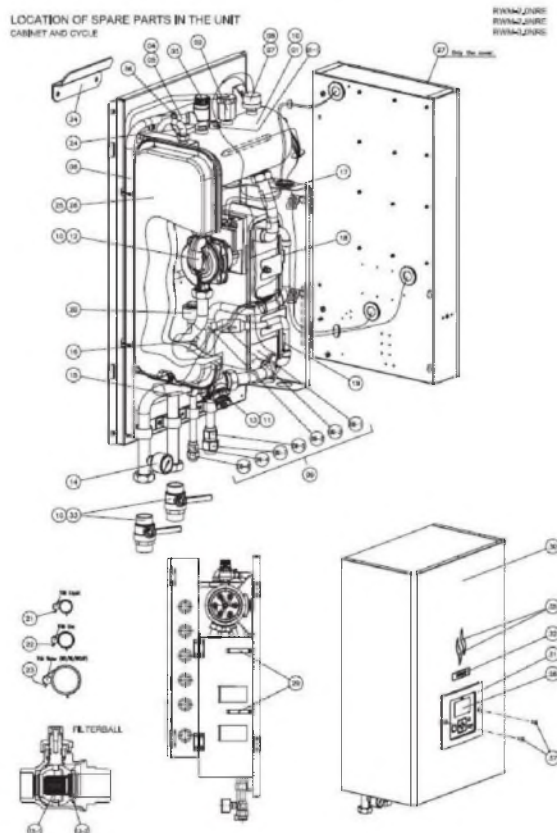

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------


MODULE HYDRAULIQUE

RWM-2.0NRE

1	E06153	ELECTRIC HEATER	1	
1-1	E06159	SURFACE THERMOSTAT	1	
2	E06307	Air Purge	1	
3	E02475	SECURITY VALVE	1	
4	E04873	GASKET	1	for Union 5 to Security Valve connection.
5	E02507	UNION	1	
6	E02546	DRAIN PIPE	1	
7	E06305	PRESSURE SWITCH	1	
8	E05017	GASKET	1	for Pressure Switch connection.
9	E04996	PHEx UNIT	1	Assembly.
9-1	E04974	INVALID COUNTRY OF ORIGIN	1	
9-2	E03076	EXPANSION VALVE	1	
9-3	P25041	STRAINER	2	
9-4	E02935	THE CAP	1	Liquid connection.
9-5	E02488	UNION	1	Gas connection
9-6	E02936	FLARE NUT	1	Liquid connection.
9-7	E02490	FLARE NUT	1	Gas connection
10	E03832	Gasket	8	for Pump, E-Heater and Shutdown Valves connections.
11	E02528	GASKET	2	for FilterBall connections.
12	E04894	CIRCULATEUR	1	
13	E04897	FILTER BALL	1	
13-1	E04898	FILTER	1	
13-2	E04899	SEEGER	1	
14	E05014	MANOMETER	1	
15	E04903	THERMISTOR ASSY 1	1	Water In THM.
16	E04904	THERMISTOR ASSY 1	1	Water Out THM.
17	E04988	THERMISTOR ASSY 1	1	Water Out PHEx THM.
18	E04930	THERMISTOR ASSY 2	1	Gas THM.
19	E04993	THERMISTOR ASSY 2	1	Liquid THM.
20	E03180	EXPANSION VALVE COIL	1	
21	E02549	P-SPRING	1	
22	E02550	P-SPRING	1	
23	E01193	P-SPRING	3	
24	E04048	FLEXIBLE PIPE	1	Vessel connection.
25	E02497	GASKET	1	Vessel connection.
26	E04893	EXPANSION VESSEL (6L)	1	
27	E05016	E-BOX COVER ASSY	1	Plate + Labels.
28	E04960	REMOTE CONTROL AS	1	
29	E02504	CLAMP	2	
30	E04999	XEK25411 A - SERVICE COVER ASSY	1	Assembly.
31	E04955	XEK12635 A - LCD FRAME	1	
32	E04944	XEK39388 A - YUTAKI FRAME	1	
33	E05019	SHUTDOWN VALVE	2	
34	E05018	WALL SUPPORT	1	
35	E04945	XEK12635 A - LCD FRAME	2	
36	E05026	CLAMP	1	
37	E02501	Screw	2	

LOCATION OF SPARE PARTS IN THE UNIT
ELECTRICAL EQUIPMENT

RWM-2.0NRE
RWM-2.0NRE
RWM-2.0NRE

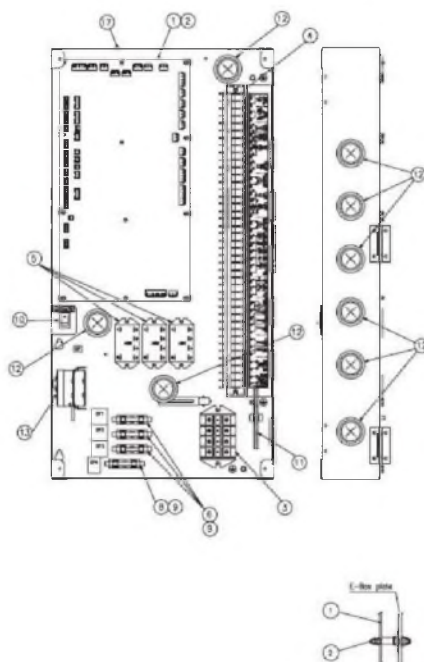

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWM-2.0NRE

1	E04665	INSTRUCTION ASSY PCB	1	
2	E01789	SPACER	12	
3	E02519	TERMINAL BOARD	1	
4	E04778	TERMINAL BOARD	1	
5	E04779	RELAY	3	
6	E04780	FUSE	3	6,3A
8	E04782	FUSE	1	20A
9	E02516	FUSE HOLDER	4	
10	E03828	Rocker Swith	1	
11	E02012	CLAMP	1	
12	E02060	RUBBER BUSH	9	
13	E04785	THERMOSTAT	1	
14	E04786	ELECTRICAL BOX	1	Assembly (Plate + Components + Harness)
17	E04791	E-BOX SUBASSY	1	Only plate (without components)