


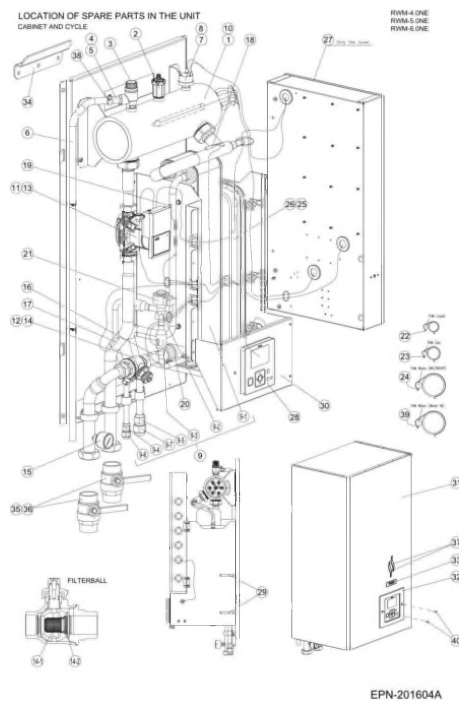

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWM-4.0NE

1	E04972	ELECTRIC HEATER	1	
1	E06155	ELECTRIC HEATER	1	
2	E04040	AIR PURGE	1	
3	E02475	SECURITY VALVE	1	
4	E04873	GASKET	1	
5	E02507	UNION	1	
6	E02546	DRAIN PIPE	1	
7	E02494	PRESSURE SW	1	
8	E05017	GASKET	1	
9	E05000	PHEx UNIT	1	
9-1	E04836	PLATE HEX	1	
9-2	E03077	EXPANSION VALVE	1	
9-3	P25041	STRAINER	2	
9-4	E02487	UNION	1	
9-5	E02488	UNION	1	
9-6	E02489	FLARE NUT	1	
9-7	E02490	FLARE NUT	1	
10	E02496	GASKET	2	
11	E03832	Gasket	2	
12	E02528	GASKET	2	
13	E04837	PUMP	1	
14	E04897	FILTER BALL	1	
14-1	E04898	FILTER	1	
14-2	E04899	SEEGER	1	
15	E05014	MANOMETER	1	
16	E04984	THERMISTOR ASSY 1	1	
17	E04986	THERMISTOR ASSY 1	1	
18	E04989	THERMISTOR ASSY 1	1	
19	E04991	THERMISTOR ASSY 2	1	
20	E04994	THERMISTOR ASSY 2	1	
21	E03180	EXPANSION VALVE COIL	1	
22	E02549	P-SPRING	1	
23	E02550	P-SPRING	1	
24	E02551	P-SPRING	4	
25	E02497	GASKET	1	
26	E04893	EXPANSION VESSEL (6L)	1	
27	E05021	E-BOX COVER ASSY	1	
28	E04960	REMOTE CONTROL AS	1	
29	E02504	CLAMP	2	
30	E05022	LCD SUPPORT	1	
31	E05004	SERVICE COVER ASSY	1	
32	E04955	XEK12635 A - LCD FRAME	1	
33	E04944	XEK39388 A - YUTAKI FRAME	1	
34	E02552	WALL SUPPORT	1	
35	E04824	GASKET	4	
36	E04846	SHUTDOWN VALVE	2	
37	E04945	XEK12635 A - LCD FRAME	2	
38	E05026	CLAMP	1	
39	E01193	P-SPRING	1	
40	E02501	Screw	2	


MODULE HYDRAULIQUE

RWM-4.0NE

Pièces détachées

Main view

LOCATION OF SPARE PARTS IN THE UNIT
ELECTRICAL EQUIPMENT

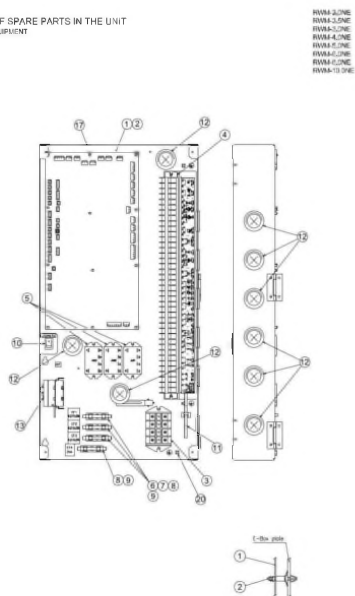

RWM-4.0NE
RWM-4.0NE
RWM-4.0NE
RWM-4.0NE
RWM-4.0NE
RWM-4.0NE
RWM-4.0NE

Rep.

Référence

Description

Qté

Remarques

MODULE HYDRAULIQUE

RWM-4.0NE

1	E04665	INSTRUCTION ASSY PCB	1	
2	E01789	SPACER	12	
3	E02519	TERMINAL BOARD	1	
4	E04778	TERMINAL BOARD	1	
5	E04779	RELAY	3	
7	E04781	FUSE	3	
8	E04782	FUSE	1	
9	E02516	FUSE HOLDER	4	
10	E03828	Rocker Swith	1	
11	E02012	CLAMP	1	
12	E02060	RUBBER BUSH	9	
13	E04785	THERMOSTAT	1	
15	E04787	ELECTRICAL BOX	1	
17	E04791	E-BOX SUBASSY	1	