


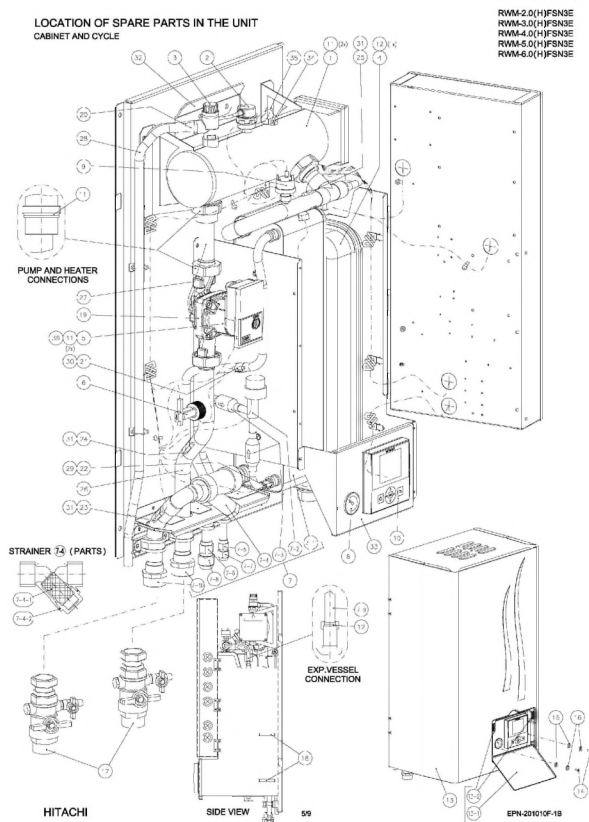

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWM-3.0HFSN3E

1	E02473	ELECTRIC HEATER ASSY	1	Gaskets 11 not included
2	E01909	PURGEUR AUTO	1	
3	E02475	SECURITY VALVE	1	
4	E02476	EXPANSION VESSEL 6L	1	Gasket 12 not included
5	E02477	POMPE	1	Gaskets 11 and Pump Insulation 19 not included. Before serial N° 4KE64806
5	E04151	PUMP	1	Gaskets 11 and Pump Insulation 19 not included. From Serial N° 4KE64806 (including S. N° 4KE63215)
6	E02479	FLOW SWITCH	1	
7	E02480	PHEx UNIT	1	Assembly (from 7- 1 to 7- 10)
7-1	E02483	PLATE HEX	1	
7-2	E00856	EXPANSION VALVE	1	
7-3	E01206	STRAINER	2	
7-4	E03830	Water Strainer Unit	1	Body + Mesh + Gasket. Before Serial N° 4KE24049
7-4	E03749	Water Strainer	1	Body + Mesh + Gasket. From Serial N° 4KE24049
7-4-1	E02946	MESH	1	A35, 8xL49 Before Serial Number 4JE05436
7-4-1	E02948	MESH	1	Ä31, 5xL46, 5 From SerialNumber 4JE05436 (4JE05436 included) to before SerialN° 4KE24049
7-4-1	E03750	Mesh	1	A36 x L43, From Serial N° 4KE24049
7-4-2	E02947	Gasket	1	A50xA42x1 Before Serial Number 4JE05436
7-4-2	E02949	GASKET	1	A43xA39xA2 From Serial Number 4JE05436 (4JE05436 included) to before Serial N° 4KE24049
7-4-2	E03751	Gasket	1	Ä41, 4 x Ä36, 2 x Ä2, 6. From Serial N° 4KE24049
7-5	E02487	UNION	1	Liquid Connection
7-6	E02488	UNION	1	Gas Connection
7-7	E02489	FLARE NUT	1	Liquid Connection
7-8	E02490	FLARE NUT	1	Gas Connection
7-9	E03668	Pipe 4	1	Vessel Connection
7-10	E02492	UNION	2	Water Connection
8	E02493	MANOMETER	1	Before Serial N° 4KE36842
8	E03800	MANOMETER	1	From Serila N° 4KE36842
9	E02494	PRESSURE SW	1	
10	E02495	CONTROL	1	Before Serial Number 4HE87914
10	E02777	CONTROL	1	From Serial Number 4HE89240 to 4JE94362
10	E03478	LCD CONTROL	1	After Serial Number 4JE94363
11	E02496	GASKET	4	for Electric Heater and Pump connections
12	E02497	GASKET	1	for Expansion Vessel connection
13	E02498	COVER ASSY	1	Assembly (Screws and Washers not included)
13-1	E02499	LCD COVER	1	Assembly (LCD Cover + Shaft + Washers)
13-2	E02500	MAGNET	2	
14	E02501	Screw	2	for Cover Assy fixing
15	E02547	NYLON WASHER	2	for Cover Assy fixing (material: nylon)
16	E02548	WASHER	2	for Cover Assy fixing (material: steel)
17	E02503	VANNE D'ISOLEMENT	2	
18	E02504	CLAMP	2	for installer wiring
19	E02505	PUMP INSULATION	1	only insulation around the Pump, Before Serial N° 4KE64806 (except S. N° 4KE63215)


MODULE HYDRAULIQUE

RWM-3.0HFSN3E

19	E04056	PUMP INSULATION	1	only insulation around the Pump. From Serial N° 4KE64806 (including S. N° 4KE63215 and 4KE63216)
20	E02507	UNION	1	for Security Valve drain connection
21	E02780	THERMISTOR ASSY	1	THM G (Gas)
22	E02782	THERMISTOR ASSY	1	THM L (Liquid)
23	E02784	THERMISTOR ASSY	1	THM WI (Water In)
24	E02786	THERMISTOR ASSY	1	THM WO (Water Out)
25	E02788	THERMISTOR ASSY	1	THMWOHP (Water Out PHEX) Before SerialNumber 4JE94362
25	E03670	Thermistor Assy	1	THMWOHP (Water Out PHEX) After Serial Number 4JE94363
26	E02513	PUMP PIPE ASSY 1	1	
27	E02514	PUMP PIPE ASSY 2	1	
28	E02546	DRAIN PIPE	1	Vinyl Tube (diameter 16mm - 1 meter length)
29	E02549	P-SPRING	1	for liquid THM fixing
30	E02550	P-SPRING	1	for gas THM fixing
31	E02551	P-SPRING	3	for water THM fixing
32	E02552	WALL SUPPORT	1	
33	E02553	CONTROL SUPPORT	1	Before Serial N° 4KE36842
33	E03801	CONTROL SUPPORT	1	From Serial N° 4KE36842
34	E02938	THERMOSTAT	1	Thermal cut- off thermostat for Electric heater. RWM- 2. 0/3. 0 FSN3E Before 4JE31999 RWM- 4. 0/5. 0/6. 0 FSN3E Before 4JE22551 From 4JE23251to 4JE24899 From 4JE27512 to 4JE28499 RWM- 8. 0/10. 0 FSN3E Before 4JE56000
34	E02980	Thermostat	1	Thermal cut- off thermostat for Electric heater (Ther. Cap included). RWM- 2. 0/3. 0 FSN3E After 4JE32000 RWM- 4. 0/5. 0/6. 0 FSN3E From 4JE22552 to 4JE23250 From 4JE24900 to 4JE27511 After 4JE28500 RWM- 8. 0/10. 0 FSN3E After 4JE56001
35	E02937	THE CAP	1	Protector Cap forThermostat 34. RWM- 2. 0/3. 0 FSN3E Before 4JE31999 RWM- 4. 0/5. 0/6. 0 FSN3E Before 4JE22551 From 4JE23251 to 4JE24899 From 4JE27512 to 4JE28499 RWM- 8. 0/10. 0 FSN3E Before 4JE56000
36	E04221	HARNESS POWER PUMP ASSY	1	From Serial N° 4KE64806

LOCATION OF SPARE PARTS IN THE UNIT
ELECTRICAL EQUIPMENT

RWM-2.0(H)FSN3E
RWM-3.0(H)FSN3E
RWM-4.0(H)FSN3E
RWM-5.0(H)FSN3E
RWM-6.0(H)FSN3E

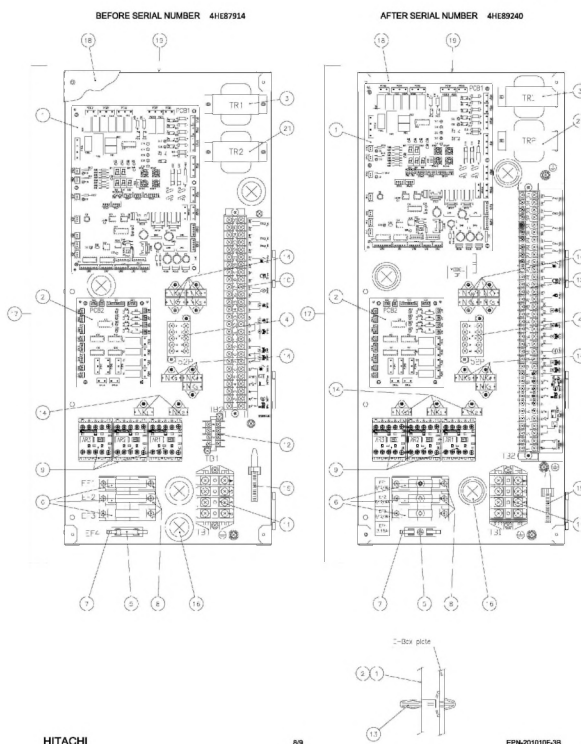

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWM-3.0HFSN3E

1	E02515	INSTRUCTION ASSY PCB	1	Before Serial Number 4HE87914
1	E02727	INSTRUCTION ASSY PCB	1	From Serial Number 4HE89240 to 4JE94362
1	E03475	Instruction PCB	1	After Serial Number 4JE94363
2	E03774	PCB	1	
3	E04076	TRANSFORMER 1	1	
4	E01873	MAGNETIC CONTACTOR	1	16 A
5	E00003	FUSE	1	3, 15 A
6	EC00035	FUSE	3	6 A
7	E02516	FUSE HOLDER	1	
8	E01015	FUSE HOLDER	3	
9	E02517	MAGNETIC CONTACTOR	3	12 A
10	E02518	TERMINAL BOARD	1	Before Serial Number 4HE87914
10	E02792	TERMINAL BOARD	1	After Serial Number 4HE89240
11	E02519	TERMINAL BOARD	1	
12	E01089	TERMINAL BOARD	1	Before Serial Number 4HE87914, (After Serial Number 4HE89240 not necessary)
13	P19112	SPACER	10	
14	P14366	SURGE ABSORBER	9	Before Serial Number 4HE87914
14	P14366	SURGE ABSORBER	10	After Serial Number 4HE89240
15	E02012	CLAMP	1	
16	E02060	RUBBER BUSH	10	
17	E02793	E-BOX	1	Assembly (Components + Harness) Before Serial N° 4KE64806 (except S. N° 4KE63215)
17	E04159	E-BOX	1	Assembly (Components + Harness) From Serial N° 4KE64806 (including S. N° 4KE63215)
18	E02554	E-BOX COVER ASSY	1	(Plate + Labels) Before Serial Number 4HE87914
18	E02796	E-BOX COVER ASSY	1	(Plate + Labels) From Serial N° 4HE89240 to before S. N° 4KE64806 (except S. N° 4KE63215 and 4KE63216)
18	E04162	E-BOX COVER ASSY	1	(Plate + Labels) From Serial N° 4KE64806 (including S. N° 4KE63215 and 4KE63216)
19	E02555	E-BOX SUBASSY	1	Only plate (without components), Before Serial Number 4HE87914
19	E02798	E-BOX SUBASSY	1	Only plate (without components), From Serial N° 4HE89240 to before 4KE64806 (except S. N° 4KE63215 and 4KE63216)
19	E04164	E-BOX SUB ASSY	1	Only plate (without components), From Serial N° 4KE64806 (including S. N° 4KE63215 and 4KE63216)
21	E04077	TRANSFORMER 2	1	