


CENTRIFUGAL RASC-10HNPE

Pièces détachées

Main view

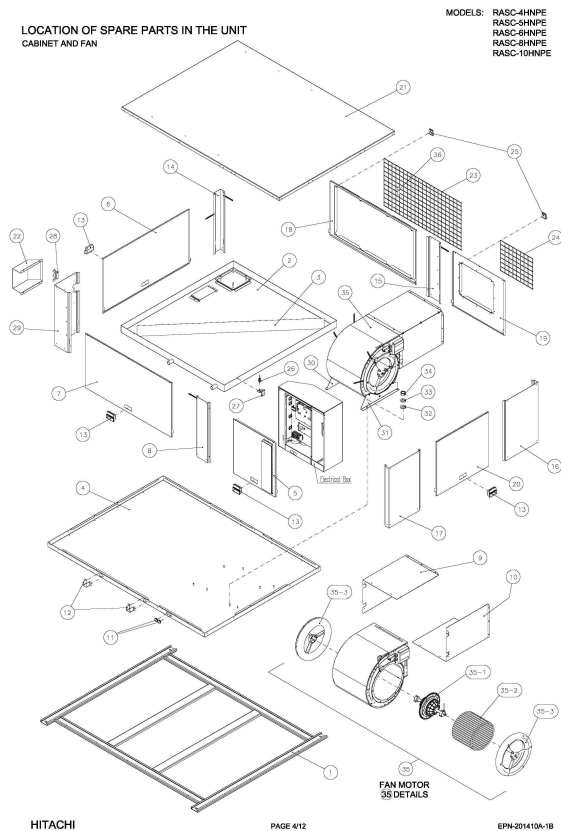

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

CENTRIFUGAL RASC-10HNPE

1	E04384	FOOT ASSY	1	Assembly
2	E04385	Drain Pan Assy	1	Assembly
3	E04386	DP GRILLE	1	Drain pan grille
4	E04387	BOTTOM BASE ASSY	1	Assembly (Plate + Insulations + 1)
5	E04388	E-BOX COVER UNIT	1	Assembly
6	E04389	RIGHT COVER ASSY	1	Assembly (Plate + Insulations)
7	E04390	RIGHT COVER ASSY	1	Assembly (Plate + Insulations)
8	E04391	BACK COVER ASSY	1	Assembly (Plate + Insulations)
9	E04392	FAN DUCT SUB ASSY	1	Assembly (Plate + Insulations)
10	E04393	FAN DUCT SUB ASSY	1	Assembly (Plate + Insulations)
11	E04408	RUBBER BUSHING	2	
12	E04409	PROTECTION PIPE STAY ASSY	2	Assembly (Plate + Insulations)
13	E03723	Handle	4	
14	E04394	RIGHT CORNER ASSY	1	Assembly (Plate + Insulations)
15	E04395	FRONT COVER ASSY	1	Assembly (Plate + Insulations)
16	E04396	LEFT CORNER ASSY	1	Assembly (Plate + Insulations)
17	E04397	LEFT BACK CORNER ASSY	1	Assembly (Plate + Insulations)
18	E04398	INLET AIR COVER ASSY	1	Assembly (Plate + Insulations)
19	E04399	OUTLET AIR FRAME ASSY	1	Assembly (Plate + Insulations)
20	E04400	LEFT COVER ASSY	1	Assembly (Plate + Insulations)
21	E04401	UPPER COVER ASSY	1	Assembly (Plate + Insulations)
22	E04402	S-VALVE PROTECTION ASSY	1	
23	E04403	INLET PROTECTOR NET	1	Inlet
24	E04404	OUTLET PROTECTOR NET	1	Outlet
25	E04410	CLAMP	12	For Inlet and Outlet Protector Net
26	E01038	FLOAT SW	1	
27	E02681	FS STAY	1	
28	E04411	PLATE VALVE ASSY	1	Assembly (Plate + Insulations)
29	E04405	RIGHT BACK CORNER ASSY	1	Assembly (Plate + Insulations)
30	E04406	FAN SUPPORT	1	
31	E04407	FAN SUPPORT	1	
32	E04466	WASHER	4	
33	E04467	WASHER	4	
34	E04468	NUT	4	
35	E03636	FAN ASSY	1	Assembly (35- 1 + 35- 2 + 35- 3)
35-1	E04476	MOTOR	1	
35-2	E04478	MOTOR	1	
35-3	E04480	MOTOR SUPPORT	1	
36	E04471	THERMISTOR	1	For outdoor ambient temperature. THM7 (Ta)