 


LOCATION OF SPARE PARTS IN THE UNIT
ELECTRICAL EQUIPMENT

RWH-4.0VNFE
RWH-4.0VNFE
RWH-5.0VNFE
RWH-5.0VNFE
RWH-6.0VNFE
RWH-6.0VNFE

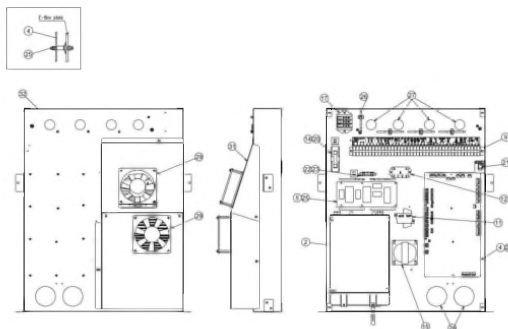


EPN-201606A

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWH-4.0VNFE

2	E03220	INV. FIN ASSY	1	
4	E04665	INSTRUCTION ASSY PCB	1	
5	P26446	NOISE FILTER	1	
9	E04778	TERMINAL BOARD	1	
11	P24721	MAGNETIC CONTACTOR	1	
12	E04779	RELAY	1	
14	P24729	Fuse Holder	1	
15	E03817	Reactor Assy	1	
17	E01088	TERMINAL BOARD	1	
20	P24728	FUSE 50A	1	
21	E03828	Rocker Swith	1	
22	E02516	FUSE HOLDER	1	
23	E04782	FUSE	1	
25	E01789	SPACER	18	
26	E02012	CLAMP	4	
27	E02060	RUBBER BUSH	4	
28	E04775	RUBBER BUSHING	2	
29	E04792	FAN BOX	2	
31	E04793	FAN SUPPORT SUBASSY	1	
32	E04794	E-BOX SUB ASSY	1	
34	E04796	ELECTRICA BOX	1	
4	E07173	INSTRUCTION ASSY PCB	1	Before SN 4QE63949
4	E07078	INSTRUCTION ASSY PCB	1	From SN 4QE63949
36	1000012057	THM EBOX ASSY	1	

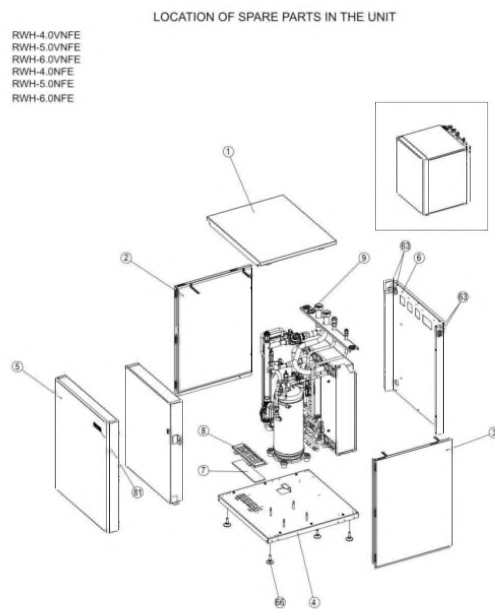 

EPN-201606A

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE


RWH-4.0VNFE

1	E04935	UPPER COVER	1	
2	E04828	SIDE COVER L UNIT	1	
3	E04829	SIDE COVER R UNIT	1	
4	E04830	BASE	1	
5	E04831	SERVICE COVER ASSY	1	
6	E04936	REAR COVER	1	
7	E04833	FILTER	1	
8	E04834	FILTER STAY	1	
9	E03800	MANOMETER	1	
10	E03272	COMPRESSOR H405DHD-64A1	1	
12	E04835	PLATE HEX	1	
13	E04836	PLATE HEX	2	
14	E04837	PUMP	1	
15	E04838	HRN POWER PUMP ASSY	1	
16	E04839	HRN CONTROL PUMP ASSY	1	
17	E03798	Body	2	
18	E04840	FILTER BALL	1	
18-1	E04841	FILTER	1	
18-2	E04842	SEEGER	1	
19	E04843	EXPANSION VESSEL	1	
20	E04844	P-SENSOR	1	
21	E04845	P-SENSOR	1	
22	E04860	HRN SV (COIL)	1	
23	E04861	HRN SV (COIL)	1	
24	E03077	EXPANSION VALVE	1	
25	P24654	EXP. VALVE	1	
26	E04847	PHEX SUPPORT L	1	
27	E04848	PHEX SUPPORT R	1	
28	E03769	ACOUSTICAL COVER 46	1	
29	E03180	EXPANSION VALVE COIL	1	
30	E03291	EXPV COIL	1	
31	E04850	SECURITY VALVE	1	
32	E04852	THERMISTOR ASSY 1	1	
33	E04851	THERMISTOR ASSY 1	1	
34	E04853	THERMISTOR ASSY 2	1	
35	E04854	THERMISTOR ASSY 2	1	
36	E04855	THERMISTOR ASSY 3	1	
37	E04856	THERMISTOR ASSY 3	1	
38	E04857	PHEX INSULATION	1	
39	E04040	AIR PURGE	1	
40	P10777	Check Valve	2	
41	E03276	PRESSURE SWITCH	1	
42	P27887	PGC Joint	2	
43	E04859	UNION	1	
44	E04858	HRN PRESSURE SWITCH	1	
45	E03805	Heater Harness	1	
46	E03806	Heater Harness	1	
47	E03807	Heater Harness	1	
48	E02488	UNION	1	
49	E04846	SHUTDOWN VALVE	2	

MODULE HYDRAULIQUE

RWH-4.0VNFE

50	E04824	GASKET	4	
51	E04862	VESSEL SUPPORT	1	
52	P26400	STRAINER	1	
53	P25041	STRAINER	2	
54	E04069	MINI VALVE	1	
55	E04863	VALVE PORT	1	
56	E04864	VALVE PORT	1	
57	P25932	CHECK JOINT	2	
58	R4206	CHECK JOINT	3	
59	E02487	UNION	1	
60	E02490	FLARE NUT	1	
61	E04865	FLARE NUT	1	
62	E02776	FLARE NUT	1	
63	E02060	RUBBER BUSH	6	
64	P17308	VIBRATION ABSORBER	4	
65	P13109	VIBRATION ABSORBER	4	
66	E04869	FOOT	4	
67	E02507	UNION	1	
68	P24397	Rubber Cap	1	
69	P25037	STRAINER	1	
70	E02489	FLARE NUT	1	
71	E04872	VALVE PORT	1	
72	E03832	Gasket	2	
73	E02528	GASKET	2	
74	E02497	GASKET	2	
75	E04873	GASKET	1	
76	E02444	P-SPRING	1	
77	E02550	P-SPRING	1	
78	E01193	P-SPRING	1	
79	E02551	P-SPRING	2	
80	E02549	P-SPRING	1	
81	E04944	XEK39388 A - YUTAKI FRAME	1	

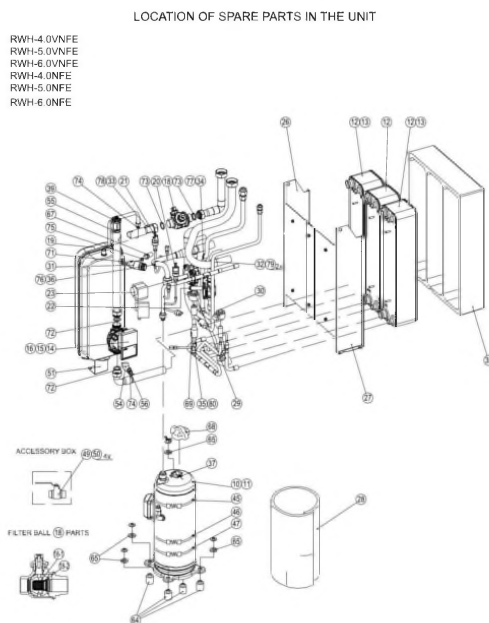 

EPN-201606A

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWH-4.0VNFE

1	E04935	UPPER COVER	1	
2	E04828	SIDE COVER L UNIT	1	
3	E04829	SIDE COVER R UNIT	1	
4	E04830	BASE	1	
5	E04831	SERVICE COVER ASSY	1	
6	E04936	REAR COVER	1	
7	E04833	FILTER	1	
8	E04834	FILTER STAY	1	
9	E03800	MANOMETER	1	
10	E03272	COMPRESSOR H405DHD-64A1	1	
12	E04835	PLATE HEX	1	
13	E04836	PLATE HEX	2	
14	E04837	PUMP	1	
15	E04838	HRN POWER PUMP ASSY	1	
16	E04839	HRN CONTROL PUMP ASSY	1	
17	E03798	Body	2	
17	E06747	SV BODY	2	
18	E04840	FILTER BALL	1	
18-1	E04841	FILTER	1	
18-2	E04842	SEEGER	1	
19	E04843	EXPANSION VESSEL	1	
20	E04844	P-SENSOR	1	
21	E04845	P-SENSOR	1	
22	E04860	HRN SV (COIL)	1	
23	E04861	HRN SV (COIL)	1	
24	E03077	EXPANSION VALVE	1	
25	P24654	EXP. VALVE	1	
26	E04847	PHEX SUPPORT L	1	
27	E04848	PHEX SUPPORT R	1	
28	E03769	ACOUSTICAL COVER 46	1	
29	E03180	EXPANSION VALVE COIL	1	
30	E03291	EXPV COIL	1	
31	E04850	SECURITY VALVE	1	
32	E04852	THERMISTOR ASSY 1	1	
33	E04851	THERMISTOR ASSY 1	1	
34	E04853	THERMISTOR ASSY 2	1	
35	E04854	THERMISTOR ASSY 2	1	
36	E04855	THERMISTOR ASSY 3	1	
37	E04856	THERMISTOR ASSY 3	1	
38	E04857	PHEX INSULATION	1	
39	E04040	AIR PURGE	1	
40	P10777	Check Valve	2	
41	E03276	PRESSURE SWITCH	1	
42	P27887	PGC Joint	2	
43	E04859	UNION	1	
44	E04858	HRN PRESSURE SWITCH	1	
45	E03805	Heater Harness	1	
46	E03806	Heater Harness	1	
47	E03807	Heater Harness	1	
48	E02488	UNION	1	


MODULE HYDRAULIQUE

RWH-4.0VNFE

49	E04846	SHUTDOWN VALVE	2
50	E04824	GASKET	4
51	E04862	VESSEL SUPPORT	1
52	P26400	STRAINER	1
53	P25041	STRAINER	2
54	E04069	MINI VALVE	1
55	E04863	VALVE PORT	1
56	E04864	VALVE PORT	1
57	P25932	CHECK JOINT	2
58	R4206	CHECK JOINT	3
59	E02487	UNION	1
60	E02490	FLARE NUT	1
61	E04865	FLARE NUT	1
62	E02776	FLARE NUT	1
63	E02060	RUBBER BUSH	6
64	P17308	VIBRATION ABSORBER	4
65	P13109	VIBRATION ABSORBER	4
66	E04869	FOOT	4
67	E02507	UNION	1
68	P24397	Rubber Cap	1
69	P25037	STRAINER	1
70	E02489	FLARE NUT	1
71	E04872	VALVE PORT	1
72	E03832	Gasket	2
73	E02528	GASKET	2
74	E02497	GASKET	2
75	E04873	GASKET	1
76	E02444	P-SPRING	1
77	E02550	P-SPRING	1
78	E01193	P-SPRING	1
79	E02551	P-SPRING	2
80	E02549	P-SPRING	1
81	E04944	XEK39388 A - YUTAKI FRAME	1

LOCATION OF SPARE PARTS IN THE UNIT

 RWH-4.0VNFE
RWH-5.0VNFE
RWH-6.0VNFE
RWH-4.0NFE
RWH-5.0NFE
RWH-6.0NFE

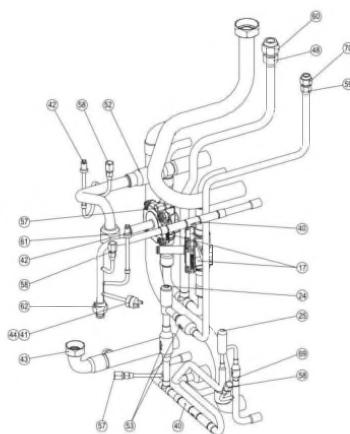

EPN-201606A

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWH-4.0VNFE

40	P10777	Check Valve		
1	E04935	UPPER COVER	1	
2	E04828	SIDE COVER L UNIT	1	
3	E04829	SIDE COVER R UNIT	1	
4	E04830	BASE	1	
5	E04831	SERVICE COVER ASSY	1	
6	E04936	REAR COVER	1	
7	E04833	FILTER	1	
8	E04834	FILTER STAY	1	
9	E03800	MANOMETER	1	
10	E03272	COMPRESSOR H405DHD-64A1	1	
12	E04835	PLATE HEX	1	
13	E04836	PLATE HEX	2	
14	E04837	PUMP	1	
15	E04838	HRN POWER PUMP ASSY	1	
16	E04839	HRN CONTROL PUMP ASSY	1	
17	E03798	Body	2	
17	E06747	SV BODY	1	
18	E04840	FILTER BALL	1	
18-1	E04841	FILTER	1	
18-2	E04842	SEEGER	1	
19	E04843	EXPANSION VESSEL	1	
20	E04844	P-SENSOR	1	
21	E04845	P-SENSOR	1	
22	E04860	HRN SV (COIL)	1	
23	E04861	HRN SV (COIL)	1	
24	E03077	EXPANSION VALVE	1	
25	P24654	EXP. VALVE	1	
26	E04847	PHEX SUPPORT L	1	
27	E04848	PHEX SUPPORT R	1	
28	E03769	ACOUSTICAL COVER 46	1	
29	E03180	EXPANSION VALVE COIL	1	
30	E03291	EXPV COIL	1	
31	E04850	SECURITY VALVE	1	
32	E04852	THERMISTOR ASSY 1	1	
33	E04851	THERMISTOR ASSY 1	1	
34	E04853	THERMISTOR ASSY 2	1	
35	E04854	THERMISTOR ASSY 2	1	
36	E04855	THERMISTOR ASSY 3	1	
37	E04856	THERMISTOR ASSY 3	1	
38	E04857	PHEX INSULATION	1	
39	E04040	AIR PURGE	1	
40	P10777	Check Valve	2	
41	E03276	PRESSURE SWITCH	1	
42	P27887	PGC Joint	2	
43	E04859	UNION	1	
44	E04858	HRN PRESSURE SWITCH	1	
45	E03805	Heater Harness	1	
46	E03806	Heater Harness	1	
47	E03807	Heater Harness	1	

MODULE HYDRAULIQUE

RWH-4.0VNFE

48	E02488	UNION	1	
49	E04846	SHUTDOWN VALVE	2	
50	E04824	GASKET	4	
51	E04862	VESSEL SUPPORT	1	
52	P26400	STRAINER	1	
53	P25041	STRAINER	2	
54	E04069	MINI VALVE	1	
55	E04863	VALVE PORT	1	
56	E04864	VALVE PORT	1	
57	P25932	CHECK JOINT	2	
58	R4206	CHECK JOINT	3	
59	E02487	UNION	1	
60	E02490	FLARE NUT	1	
61	E04865	FLARE NUT	1	
62	E02776	FLARE NUT	1	
63	E02060	RUBBER BUSH	6	
64	P17308	VIBRATION ABSORBER	4	
65	P13109	VIBRATION ABSORBER	4	
66	E04869	FOOT	4	
67	E02507	UNION	1	
68	P24397	Rubber Cap	1	
69	P25037	STRAINER	1	
70	E02489	FLARE NUT	1	
71	E04872	VALVE PORT	1	
72	E03832	Gasket	2	
73	E02528	GASKET	2	
74	E02497	GASKET	2	
75	E04873	GASKET	1	
76	E02444	P-SPRING	1	
77	E02550	P-SPRING	1	
78	E01193	P-SPRING	1	
79	E02551	P-SPRING	2	
80	E02549	P-SPRING	1	
81	E04944	XEK39388 A - YUTAKI FRAME	1	