


MODULE HYDRAULIQUE

RWLT-5.0VNE

Pièces détachées

Main view

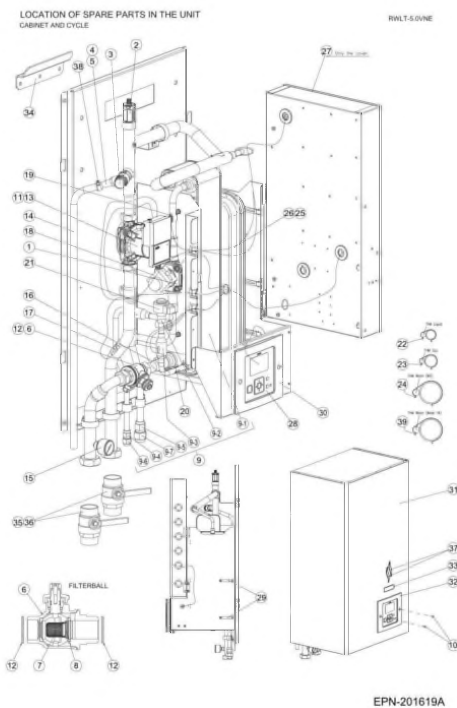

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWLT-5.0VNE

1	E03798	Body	1		
2	E04040	AIR PURGE	1		
3	E02475	SECURITY VALVE	1		
4	E04873	GASKET	1		
5	E02507	UNION	1		
6	E04897	FILTER BALL	1		
7	E04898	FILTER	1		
8	E04899	SEEGER	1		
9	E05250	PHEX UNIT	1		
9-1	E04835	PLATE HEX	1		
9-2	E03078	EXPANSION VALVE	1		
9-3	P25041	STRAINER	2		
9-4	E02487	UNION	1		
9-5	E02488	UNION	1		
9-6	E02489	FLARE NUT	1		
9-7	E02490	FLARE NUT	1		
10	E02501	Screw	2		
11	E03832	Gasket	2		
12	E02528	GASKET	2		
13	E04837	PUMP	1		
14	E02546	DRAIN PIPE	1		
15	E05014	MANOMETER	1		
16	E04984	THERMISTOR ASSY 1	1		
17	E04986	THERMISTOR ASSY 1	1		
18	E05262	HRN SV COIL	1		
19	E04991	THERMISTOR ASSY 2	1		
20	E04994	THERMISTOR ASSY 2	1		
21	E03180	EXPANSION VALVE COIL	1		
22	E02549	P-SPRING	1		
23	E02550	P-SPRING	1		
24	E02551	P-SPRING	1		
25	E02497	GASKET	1		
26	E04893	EXPANSION VESSEL (6L)	1		
27	E05251	E-BOX COVER ASSY	1		
28	E05254	PC-ARFHE ASSY	1		
29	E02504	CLAMP	2		
30	E05022	LCD SUPPORT	1		
31	E05004	SERVICE COVER ASSY	1		
32	E04955	XEK12635 A - LCD FRAME	1		
33	E05245	HYDRO FREE LABEL	1		
34	E02552	WALL SUPPORT	1		
35	E04824	GASKET	4		
36	E04846	SHUTDOWN VALVE	2		
37	E04945	XEK12635 A - LCD FRAME	2		
38	E05026	CLAMP	1		
39	E01193	P-SPRING	1		

MODULE HYDRAULIQUE


RWLT-5.0VNE

Pièces détachées

Main view

LOCATION OF SPARE PARTS IN THE UNIT
ELECTRICAL EQUIPMENT

RWLT-5.0VNE
RWLT-5.0VNE
RWLT-10.0VNE

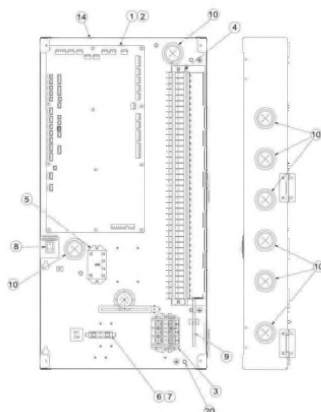

EPN-201619A

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWLT-5.0VNE

1	E05260	PCB MAIN	1
2	E01789	SPACER	12
3	E01088	TERMINAL BOARD	1
4	E04778	TERMINAL BOARD	1
5	E04779	RELAY	1
6	E04782	FUSE	1
7	E02516	FUSE HOLDER	1
8	E03828	Rocker Swith	1
9	E02012	CLAMP	1
10	E02060	RUBBER BUSH	9
12	E05257	ELECTRICAL BOX	1
14	E04791	E-BOX SUBASSY	1