 


CENTRIFUGAL RASC-10HRNME

Pièces détachées

Main view

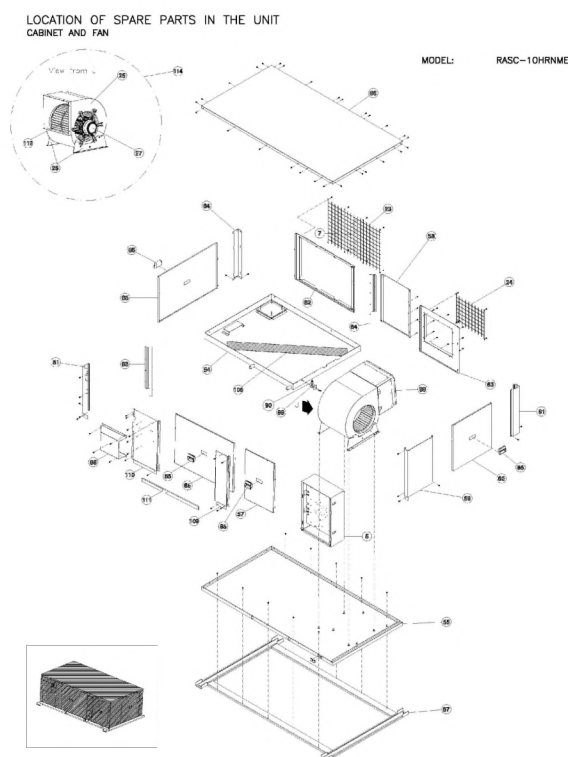

HITACHI

1/13

EPH-2011130-4B

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

CENTRIFUGAL RASC-10HRNME

1	E00705	TERMINAL BOARD	1	
2	E02682	CORD PS	1	PSH (Pressure Switch High)
3	E02683	HARNESS PC	1	PSC (Pressure Switch Control)
4	P24776	Fuse	2	40A
5	E02974	ELECTRICAL BOX	1	Assembly (Components + Harness + Steel Plates)
6	P28496	CAPACITOR	2	4700µ F
7	E02684	THERMISTOR	1	
8	E02685	THERMISTOR	1	
9	E02686	THERMISTOR	1	
10	P23798	NOISE FILTER	1	
11	P26740	NOISE FILTER	1	
12	P27215	TRANSISTOR M	1	For Inverter
13	P27214	DIODE MODULE	1	For Inverter
14	E02024	EXP. VALVE UNIT	1	
14-1	P26009	COIL FOR EXP. VALVE	1	
14-2	P26008	EXP. VALVE	1	
14-3	P26471	STRAINER	2	
14-4	E02079	EXP. VALVE CORD	1	
15	P26002	STOP VALVE (référence du joint seul : P26149)	1	Gas Line
16	E01511	STOP VALVE	1	Liquid Line
17	E01160	CHECK JOINT	1	
18	P21169	DIST. STRAINER	1	
19	P24399	STRAINER	1	
20	P25036	FILTRE DETENDEUR	1	
21	P13109	VIBRATION ABSORBER	4	
22	P17308	VIBRATION ABSORBER	4	
23	E02025	INLET PROTECTOR NET	1	Inlet
24	E02026	OUTLET PROTECTOR NET	1	Outlet
25	E02968	FAN MOTOR	1	Assembly (Fan Casing + Runner + Fan Motor)
26	E02028	FAN UNIT FEET	1	
27	E03026	MOTOR	1	1500W / 6 Poles
28	E02688	CAPILLARY UNIT	1	
29	E02031	FLANGE ASSY	1	
30	E02032	CAPILLARY	1	
31	E02033	CONDENSER ASSY	1	
32	P27310	CHECK VALVE	1	
33	E02689	OIL SEPARATOR	1	
34	E02035	L TANK	1	Assembly
35	E02036	COMPRESSOR E656DHD-65D2	1	E656DHD- 65D2
36	P24721	MAGNETIC CONTACTOR	1	
37	P23796	RESISTOR	1	
38	P23797	RESISTOR	1	
39	P26062	RESISTOR	2	
40	E02690	SVB ASSY	1	
40-1	P24511	SOLENOID VALVE	1	Solenoid Valve
40-2	E02080	HARNESS SVA2	1	SVA2 (Solenoid Valve Coil)
41	E02691	SVB ASSY	1	
41-1	P25246	SOLENOID VALVE	1	Solenoid Valve
41-2	E02081	HARNESS SVF	1	SVF (Solenoid Valve Coil)
42	P26468	FOUR WAY VALVE	1	Reversing Valve

CENTRIFUGAL RASC-10HRNME

43	E02039	HARNES RVR	1	RVR (Reversing Valve Coil)
44	P27217	REACTOR	1	DCL
45	E01294	TRANSFORMER	1	TF
46	E02692	CIRCUIT BREAKER	1	16 A
47	E02041	END CLAMP	2	
48	P27216	PCB	1	For Inverter
49	E01979	PRINTED CIRCUIT BOARD	1	Main (PO052 Assy)
50	P27316	R.P.P RELAY	1	
51	E02042	INVERTER FIN	1	For Inverter
52	E02043	SSR	1	
53	E02044	HEAT SINK	1	
54	E02045	DRAIN PAN ASSY	1	Assembly
55	E02979	B-BASE ASSY	1	Assembly
57	E02048	E-BOX COVER ASSY	1	Assembly
58	E02049	FRONT COVER ASSY	1	Assembly
59	E02050	L-BACK CORNER ASSY	1	Assembly
60	E02051	L-CORNER ASSY	1	Assembly
61	E02052	L-COVER ASSY	1	Assembly
62	E02053	INLET AIR FRAME ASSY	1	Assembly
63	E02054	OUTLET AIR FRAME ASSY	1	Assembly
64	E02055	R-CORNER ASSY	1	Assembly
65	E02056	R-COVER ASSY	2	Assembly
66	E02978	UPPER COVER ASSY	1	Assembly
67	E02058	RAIL	1	
68	P19112	SPACER	8	
69	P20985	PLASTIC MATERIAL	6	
70	E02012	CLAMP	2	
71	P24729	Fuse Holder	2	
72	P17225	SPACER	6	
73	P21189	PUSH SPACER	2	
74	E01617	PUSH SPACER	1	
75	E01616	PUSH SPACER	1	
76	E02059	BAND	4	
77	E02060	RUBBER BUSH	4	
78	P26098	PLASTIC MATERIAL	3	
79	P20986	PLASTIC MATERIAL	3	
80	P26474	THERMISTOR	1	For Inverter
81	E02061	R-BACK COVER ASSY	1	Assembly
82	E02000	SPECIAL NUT	4	
83	E02062	CONDENSER STAY 1	1	
84	E02063	CONDENSER STAY 2	1	
85	P24391	HANDLE	4	
86	E02064	S-VALVE PROTECTION STAY	1	
87	E02065	FOOT ASSY	1	Assembly
88	E03027	FAN DUCT ASSY	1	
89	E02681	FS STAY	1	
90	E01038	FLOAT SW	1	
91	E01082	C-HEATER	1	
92	E02067	PIPE SC1 UNIT	1	
93	E02068	PIPE SC2 UNIT	1	


CENTRIFUGAL RASC-10HRNME

94	E02069	G VALVE ASSY	1	
95	E02070	L VALVE ASSY	1	
96	E02072	PIPE C ASSY	1	
97	E02074	PIPE S ASSY	1	
98	E02695	PIPE E	1	
99	E02076	L-PIPE 3	1	
100	E01900	RUBBER CAP	1	
101	E02082	RC COVER	1	
102	E02078	COVER	1	
103	E02699	PIPE 3 SVF	1	
104	E02699	PIPE 3 SVF	1	
105	E02700	BUTTOM PIPE	1	
106	E02729	CAPACITOR FOR FAN MOTOR	1	
107	E02973	CLAMP	1	
108	E02972	DP Grille	1	
109	E02975	Back Cover R Assy	1	
110	E02976	Back Cover L Assy	1	
111	E02977	L Stay Assy	1	
112	E03028	RUNNER	1	
113	E03030	RUBBER BUSHING	1	Assembly (Fan Casing + Runner + Fan Motor
114	E02027	FAN MOTOR UNIT	1	+ Insulations + Feets)
115	E03045	PIPE D3	1	

CENTRIFUGAL RASC-10HRNME

Pièces détachées

 Main view

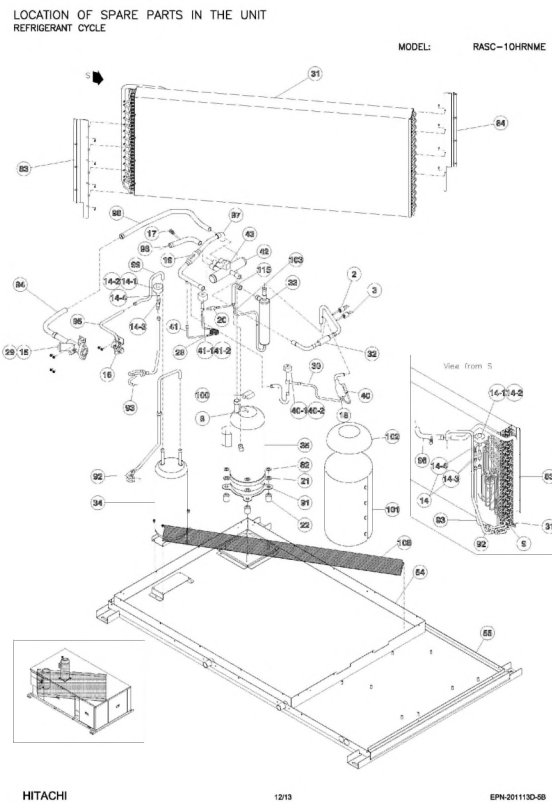

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

CENTRIFUGAL RASC-10HRNME

1	E00705	TERMINAL BOARD	1	
2	E02682	CORD PS	1	PSH (Pressure Switch High)
3	E02683	HARNESS PC	1	PSC (Pressure Switch Control)
4	P24776	Fuse	2	40A
5	E02974	ELECTRICAL BOX	1	Assembly (Components + Harness + Steel Plates)
6	P28496	CAPACITOR	2	4700µ F
7	E02684	THERMISTOR	1	
8	E02685	THERMISTOR	1	
9	E02686	THERMISTOR	1	
10	P23798	NOISE FILTER	1	
11	P26740	NOISE FILTER	1	
12	P27215	TRANSISTOR M	1	For Inverter
13	P27214	DIODE MODULE	1	For Inverter
14	E02024	EXP. VALVE UNIT	1	
14-1	P26009	COIL FOR EXP. VALVE	1	
14-2	P26008	EXP. VALVE	1	
14-3	P26471	STRAINER	2	
14-4	E02079	EXP. VALVE CORD	1	
15	P26002	STOP VALVE (référence du joint seul : P26149)	1	Gas Line
16	E01511	STOP VALVE	1	Liquid Line
17	E01160	CHECK JOINT	1	
18	P21169	DIST. STRAINER	1	
19	P24399	STRAINER	1	
20	P25036	FILTRE DETENDEUR	1	
21	P13109	VIBRATION ABSORBER	4	
22	P17308	VIBRATION ABSORBER	4	
23	E02025	INLET PROTECTOR NET	1	Inlet
24	E02026	OUTLET PROTECTOR NET	1	Outlet
25	E02968	FAN MOTOR	1	Assembly (Fan Casing + Runner + Fan Motor)
26	E02028	FAN UNIT FEET	1	
27	E03026	MOTOR	1	1500W / 6 Poles
28	E02688	CAPILLARY UNIT	1	
29	E02031	FLANGE ASSY	1	
30	E02032	CAPILLARY	1	
31	E02033	CONDENSER ASSY	1	
32	P27310	CHECK VALVE	1	
33	E02689	OIL SEPARATOR	1	
34	E02035	L TANK	1	Assembly
35	E02036	COMPRESSOR E656DHD-65D2	1	E656DHD- 65D2
36	P24721	MAGNETIC CONTACTOR	1	
37	P23796	RESISTOR	1	
38	P23797	RESISTOR	1	
39	P26062	RESISTOR	2	
40	E02690	SVB ASSY	1	
40-1	P24511	SOLENOID VALVE	1	Solenoid Valve
40-2	E02080	HARNESS SVA2	1	SVA2 (Solenoid Valve Coil)
41	E02691	SVB ASSY	1	
41-1	P25246	SOLENOID VALVE	1	Solenoid Valve
41-2	E02081	HARNESS SVF	1	SVF (Solenoid Valve Coil)
42	P26468	FOUR WAY VALVE	1	Reversing Valve

CENTRIFUGAL RASC-10HRNME

43	E02039	HARNES RVR	1	RVR (Reversing Valve Coil)
44	P27217	REACTOR	1	DCL
45	E01294	TRANSFORMER	1	TF
46	E02692	CIRCUIT BREAKER	1	16 A
47	E02041	END CLAMP	2	
48	P27216	PCB	1	For Inverter
49	E01979	PRINTED CIRCUIT BOARD	1	Main (PO052 Assy)
50	P27316	R.P.P RELAY	1	
51	E02042	INVERTER FIN	1	For Inverter
52	E02043	SSR	1	
53	E02044	HEAT SINK	1	
54	E02045	DRAIN PAN ASSY	1	Assembly
55	E02979	B-BASE ASSY	1	Assembly
57	E02048	E-BOX COVER ASSY	1	Assembly
58	E02049	FRONT COVER ASSY	1	Assembly
59	E02050	L-BACK CORNER ASSY	1	Assembly
60	E02051	L-CORNER ASSY	1	Assembly
61	E02052	L-COVER ASSY	1	Assembly
62	E02053	INLET AIR FRAME ASSY	1	Assembly
63	E02054	OUTLET AIR FRAME ASSY	1	Assembly
64	E02055	R-CORNER ASSY	1	Assembly
65	E02056	R-COVER ASSY	2	Assembly
66	E02978	UPPER COVER ASSY	1	Assembly
67	E02058	RAIL	1	
68	P19112	SPACER	8	
69	P20985	PLASTIC MATERIAL	6	
70	E02012	CLAMP	2	
71	P24729	Fuse Holder	2	
72	P17225	SPACER	6	
73	P21189	PUSH SPACER	2	
74	E01617	PUSH SPACER	1	
75	E01616	PUSH SPACER	1	
76	E02059	BAND	4	
77	E02060	RUBBER BUSH	4	
78	P26098	PLASTIC MATERIAL	3	
79	P20986	PLASTIC MATERIAL	3	
80	P26474	THERMISTOR	1	For Inverter
81	E02061	R-BACK COVER ASSY	1	Assembly
82	E02000	SPECIAL NUT	4	
83	E02062	CONDENSER STAY 1	1	
84	E02063	CONDENSER STAY 2	1	
85	P24391	HANDLE	4	
86	E02064	S-VALVE PROTECTION STAY	1	
87	E02065	FOOT ASSY	1	Assembly
88	E03027	FAN DUCT ASSY	1	
89	E02681	FS STAY	1	
90	E01038	FLOAT SW	1	
91	E01082	C-HEATER	1	
92	E02067	PIPE SC1 UNIT	1	
93	E02068	PIPE SC2 UNIT	1	


CENTRIFUGAL RASC-10HRNME

94	E02069	G VALVE ASSY	1	
95	E02070	L VALVE ASSY	1	
96	E02072	PIPE C ASSY	1	
97	E02074	PIPE S ASSY	1	
98	E02695	PIPE E	1	
99	E02076	L-PIPE 3	1	
100	E01900	RUBBER CAP	1	
101	E02082	RC COVER	1	
102	E02078	COVER	1	
103	E02699	PIPE 3 SVF	1	
104	E02699	PIPE 3 SVF	1	
105	E02700	BUTTOM PIPE	1	
106	E02729	CAPACITOR FOR FAN MOTOR	1	
107	E02973	CLAMP	1	
108	E02972	DP Grille	1	
109	E02975	Back Cover R Assy	1	
110	E02976	Back Cover L Assy	1	
111	E02977	L Stay Assy	1	
112	E03028	RUNNER	1	
113	E03030	RUBBER BUSHING	1	Assembly (Fan Casing + Runner + Fan Motor
114	E02027	FAN MOTOR UNIT	1	+ Insulations + Feets)
115	E03045	PIPE D3	1	

CENTRIFUGAL RASC-10HRNME

Pièces détachées

 Main view

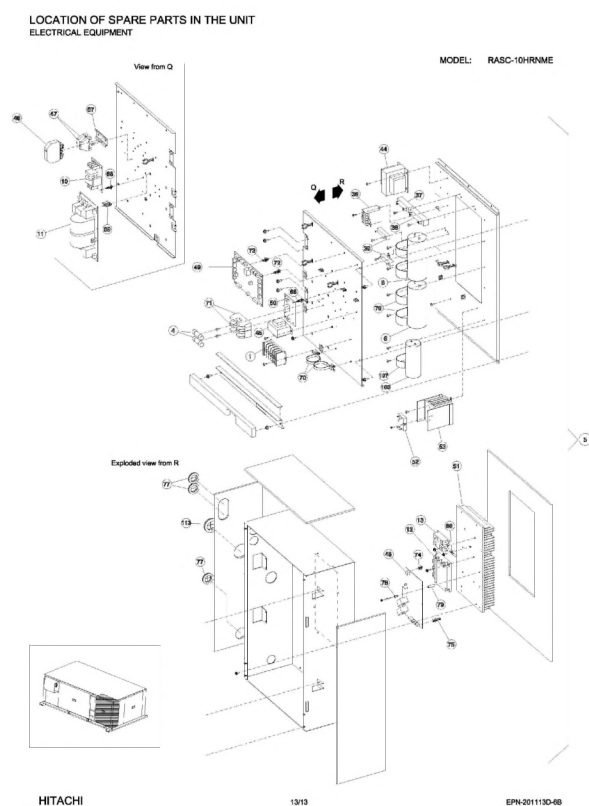

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

CENTRIFUGAL RASC-10HRNME

1	E00705	TERMINAL BOARD	1	
2	E02682	CORD PS	1	PSH (Pressure Switch High)
3	E02683	HARNESS PC	1	PSC (Pressure Switch Control)
4	P24776	Fuse	2	40A
5	E02974	ELECTRICAL BOX	1	Assembly (Components + Harness + Steel Plates)
6	P28496	CAPACITOR	2	4700µ F
7	E02684	THERMISTOR	1	
8	E02685	THERMISTOR	1	
9	E02686	THERMISTOR	1	
10	P23798	NOISE FILTER	1	
11	P26740	NOISE FILTER	1	
12	P27215	TRANSISTOR M	1	For Inverter
13	P27214	DIODE MODULE	1	For Inverter
14	E02024	EXP. VALVE UNIT	1	
14-1	P26009	COIL FOR EXP. VALVE	1	
14-2	P26008	EXP. VALVE	1	
14-3	P26471	STRAINER	2	
14-4	E02079	EXP. VALVE CORD	1	
15	P26002	STOP VALVE (référence du joint seul : P26149)	1	Gas Line
16	E01511	STOP VALVE	1	Liquid Line
17	E01160	CHECK JOINT	1	
18	P21169	DIST. STRAINER	1	
19	P24399	STRAINER	1	
20	P25036	FILTRE DETENDEUR	1	
21	P13109	VIBRATION ABSORBER	4	
22	P17308	VIBRATION ABSORBER	4	
23	E02025	INLET PROTECTOR NET	1	Inlet
24	E02026	OUTLET PROTECTOR NET	1	Outlet
25	E02968	FAN MOTOR	1	Assembly (Fan Casing + Runner + Fan Motor)
26	E02028	FAN UNIT FEET	1	
27	E03026	MOTOR	1	1500W / 6 Poles
28	E02688	CAPILLARY UNIT	1	
29	E02031	FLANGE ASSY	1	
30	E02032	CAPILLARY	1	
31	E02033	CONDENSER ASSY	1	
32	P27310	CHECK VALVE	1	
33	E02689	OIL SEPARATOR	1	
34	E02035	L TANK	1	Assembly
35	E02036	COMPRESSOR E656DHD-65D2	1	E656DHD- 65D2
36	P24721	MAGNETIC CONTACTOR	1	
37	P23796	RESISTOR	1	
38	P23797	RESISTOR	1	
39	P26062	RESISTOR	2	
40	E02690	SVB ASSY	1	
40-1	P24511	SOLENOID VALVE	1	Solenoid Valve
40-2	E02080	HARNESS SVA2	1	SVA2 (Solenoid Valve Coil)
41	E02691	SVB ASSY	1	
41-1	P25246	SOLENOID VALVE	1	Solenoid Valve
41-2	E02081	HARNESS SVF	1	SVF (Solenoid Valve Coil)
42	P26468	FOUR WAY VALVE	1	Reversing Valve

CENTRIFUGAL RASC-10HRNME

43	E02039	HARNES RVR	1	RVR (Reversing Valve Coil)
44	P27217	REACTOR	1	DCL
45	E01294	TRANSFORMER	1	TF
46	E02692	CIRCUIT BREAKER	1	16 A
47	E02041	END CLAMP	2	
48	P27216	PCB	1	For Inverter
49	E01979	PRINTED CIRCUIT BOARD	1	Main (PO052 Assy)
50	P27316	R.P.P RELAY	1	
51	E02042	INVERTER FIN	1	For Inverter
52	E02043	SSR	1	
53	E02044	HEAT SINK	1	
54	E02045	DRAIN PAN ASSY	1	Assembly
55	E02979	B-BASE ASSY	1	Assembly
57	E02048	E-BOX COVER ASSY	1	Assembly
58	E02049	FRONT COVER ASSY	1	Assembly
59	E02050	L-BACK CORNER ASSY	1	Assembly
60	E02051	L-CORNER ASSY	1	Assembly
61	E02052	L-COVER ASSY	1	Assembly
62	E02053	INLET AIR FRAME ASSY	1	Assembly
63	E02054	OUTLET AIR FRAME ASSY	1	Assembly
64	E02055	R-CORNER ASSY	1	Assembly
65	E02056	R-COVER ASSY	2	Assembly
66	E02978	UPPER COVER ASSY	1	Assembly
67	E02058	RAIL	1	
68	P19112	SPACER	8	
69	P20985	PLASTIC MATERIAL	6	
70	E02012	CLAMP	2	
71	P24729	Fuse Holder	2	
72	P17225	SPACER	6	
73	P21189	PUSH SPACER	2	
74	E01617	PUSH SPACER	1	
75	E01616	PUSH SPACER	1	
76	E02059	BAND	4	
77	E02060	RUBBER BUSH	4	
78	P26098	PLASTIC MATERIAL	3	
79	P20986	PLASTIC MATERIAL	3	
80	P26474	THERMISTOR	1	For Inverter
81	E02061	R-BACK COVER ASSY	1	Assembly
82	E02000	SPECIAL NUT	4	
83	E02062	CONDENSER STAY 1	1	
84	E02063	CONDENSER STAY 2	1	
85	P24391	HANDLE	4	
86	E02064	S-VALVE PROTECTION STAY	1	
87	E02065	FOOT ASSY	1	Assembly
88	E03027	FAN DUCT ASSY	1	
89	E02681	FS STAY	1	
90	E01038	FLOAT SW	1	
91	E01082	C-HEATER	1	
92	E02067	PIPE SC1 UNIT	1	
93	E02068	PIPE SC2 UNIT	1	

CENTRIFUGAL RASC-10HRNME

94	E02069	G VALVE ASSY	1	
95	E02070	L VALVE ASSY	1	
96	E02072	PIPE C ASSY	1	
97	E02074	PIPE S ASSY	1	
98	E02695	PIPE E	1	
99	E02076	L-PIPE 3	1	
100	E01900	RUBBER CAP	1	
101	E02082	RC COVER	1	
102	E02078	COVER	1	
103	E02699	PIPE 3 SVF	1	
104	E02699	PIPE 3 SVF	1	
105	E02700	BUTTOM PIPE	1	
106	E02729	CAPACITOR FOR FAN MOTOR	1	
107	E02973	CLAMP	1	
108	E02972	DP Grille	1	
109	E02975	Back Cover R Assy	1	
110	E02976	Back Cover L Assy	1	
111	E02977	L Stay Assy	1	
112	E03028	RUNNER	1	
113	E03030	RUBBER BUSHING	1	Assembly (Fan Casing + Runner + Fan Motor
114	E02027	FAN MOTOR UNIT	1	+ Insulations + Feets)
115	E03045	PIPE D3	1	