

CASSETTE


RCIM-0.4FSRE

Pièces détachées

Main view

LOCATION OF SERVICE PARTS IN THE UNIT

MODEL: RCIM-0.4FSRE
RCIM-0.6FSRE
RCIM-0.8FSRE
RCIM-1.0FSRE
RCIM-1.5FSRE
RCIM-2.0FSRE
RCIM-2.5FSRE

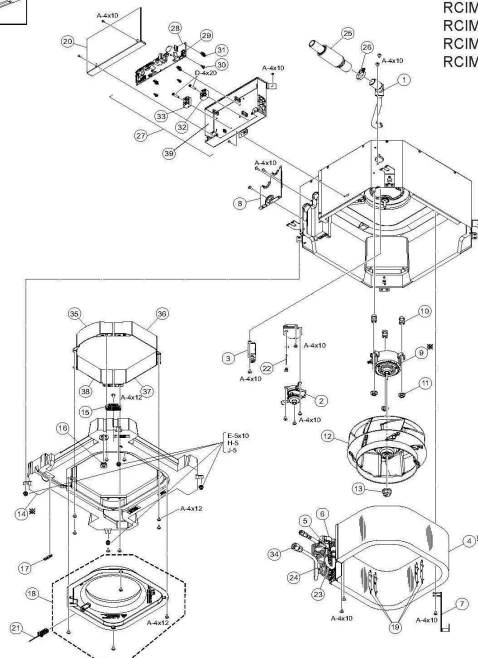

A	Truss Head Tapping Screw		F	Stud Bolt	
B	Round Head Screw		G	Nut	
C	Flat Head Screw		H	Washer	
D	Pan Head Tapping Screw		J	Spring Lock Washer	
E	Hexagon Head Bolt		K	Toothed Lock Washer	

NOTE:

The zinc-plated coating is applied to iron and steel material for the unsupplied materials of the bolt and screw.

Rep. Référence

Description

Qté Remarques

CASSETTE

RCIM-0.4FSRE

1	P30724	DRAIN HOSE ASSY	1	
2	E05332	PUMP ASSY	1	
3	E06200	FLOAT SW	1	Drain Discharge Mechanism
4	E05333	HEAT EXCHANGER ASSY	1	No.5 Expansion Valve x 1, No.34 Flare Nut x 1
5	P28701	EXPANSION VALVE	1	
6	P29142	Expv Motor	1	
8	E05387	PIPE COVER ASSY	1	
9	P30733	FAN MOTOR	1	No.10 Vibration Absorber x 3
10	P30526	VIBRATION ABSORBER	3	
11	P28899	Nut	3	
12	E05351	TURBO FAN	1	
13	P30487	NUT	1	
14	E05338	DRAIN PAN ASSY	1	No.15 Antibacterial Agent Assy x 1, No.16 Rubber Cap x 1
15	P30499	ANTIBACTERIAL AGENT ASSY	1	
16	E05782	RUBBER PLUG	1	
17	E05539	CLAMP	1	
18	E05339	BELL MOUTH ASSY	1	
19	P30536	GUIDE VANE	6	
20	E06786	E-BOX COVER ASSY	1	
21	E05341	THERMISTOR ASSY	1	for Air Inlet, THM1
22	P22436	THERMISTOR	1	for Air Outlet, THM2
23	P29764	THERMISTOR	1	for Freeze Protection, THM3
24	P29020	THERMISTOR	1	for Gas Pipe, THM5
25	P25911	HOSE	1	
26	E05540	Clip	1	
27	E06787	ELECTRIC WIRING DIAGRAM	1	Assy.Includes Plates, Components and Harness
28	P32411	PCB-S	1	PCB1
29	P27957	FUSE	1	EFR1
30	E05349	SPACER	3	for PCB1
31	P28260	Spacer	3	for PCB1
32	E06766	TB ASSY	1	TB1
33	P30498	TERMINAL BLOCK	1	TB2
34	R4226	Flare Nut	1	φ12.7
35	E05354	FAN GUIDE 1	1	
36	E05355	FAN GUIDE 2	1	
37	E05356	FAN GUIDE 3	1	
38	E05357	FAN GUIDE 4	1	
39	E06643	E-BOX UNIT	1	Includes Plates and Rubber Bush