


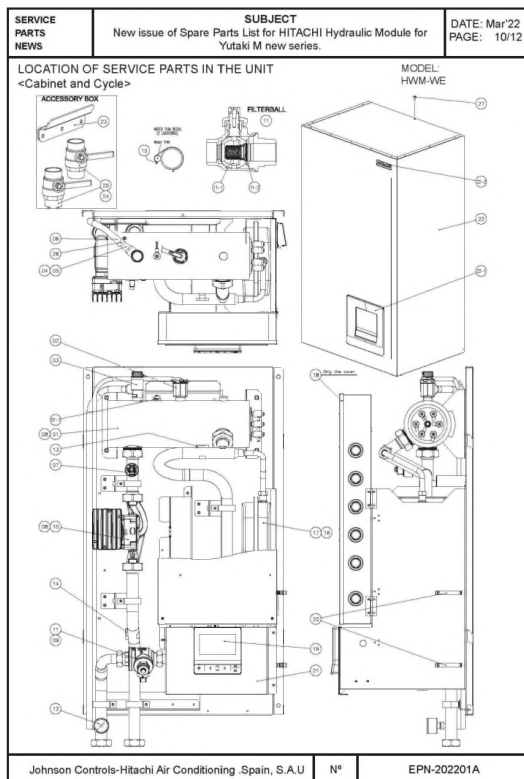


Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

HWM-WE

1	E06155	ELECTRIC HEATER	1		
1-1	E06159	SURFACE THERMOSTAT	1		Part of Electric Heater
2	E06307	Air Purge	1		
3	E02475	SECURITY VALVE	1		
4	E04873	GASKET	1		for Union 5 to Security Valve connection.
5	E02507	UNION	1		
6	E02546	DRAIN PIPE	1		
7	E07224	PRESSURE SENSOR	1		
8	E02496	GASKET	4		for Electric Heater and Water Pump connections.
9	E02528	GASKET	2		for Filter Ball connections.
10	E07689	WATER PUMP	1		
11	E04840	FILTER BALL	1		
11-1	E04841	FILTER	1		
11-2	E04842	SEEGER	1		
12	E05014	MANOMETER	1		
13	E04989	THERMISTOR ASSY 1	1		Water Out HP THM.
14	E04986	THERMISTOR ASSY 1	1		Water Out THM.
15	E02551	P-SPRING	2		
16	E02497	GASKET	1		Vessel connection.
17	E04893	EXPANSION VESSEL (6L)	1		
18	1000011471	E-BOX COVER ASSY	1		Plate + Labels.
19	1000011475	REMOTE CONTROLLER	1		
20	E02504	CLAMP	2		
21	E07665	LCD SUPPORT	1		
22	E07200	SERVICE COVER ASSY	1		Assembly.
22-1	E07132	LCD FRAME	1		
22-2	E07226	HITACHI LABEL	1		
23	E02552	WALL SUPPORT	1		
24	E04824	GASKET	4		for Shutdown Valves connections.
25	E04846	SHUTDOWN VALVE	2		
26	E05026	CLAMP	1		
27	P25678	SUS SCREW	3		

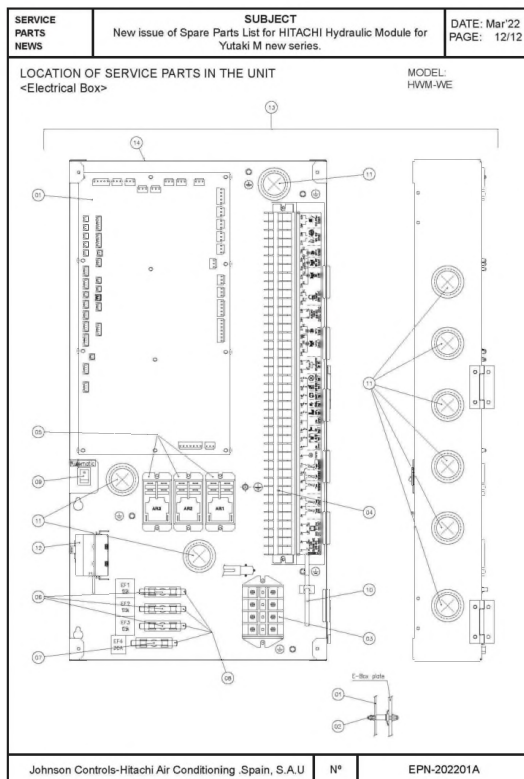

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

HWM-WE

1	1000011412	PCB	1	
2	E01789	SPACER	12	
3	E02519	TERMINAL BOARD	1	
4	E04778	TERMINAL BOARD	1	
5	E04779	RELAY	3	
6	E04781	FUSE	3	12,5A
7	E04782	FUSE	1	20A
8	E02516	FUSE HOLDER	4	
9	E07134	ROCKER SWITCH	1	
10	E02012	CLAMP	1	
11	E02060	RUBBER BUSH	9	
12	E04785	THERMOSTAT	1	
13	1000011430	ELECTRICAL BOX	1	Assembly (Plate + Components + Harness)
14	E07207	E-BOX SUB ASSY	1	Only plate (without components)