


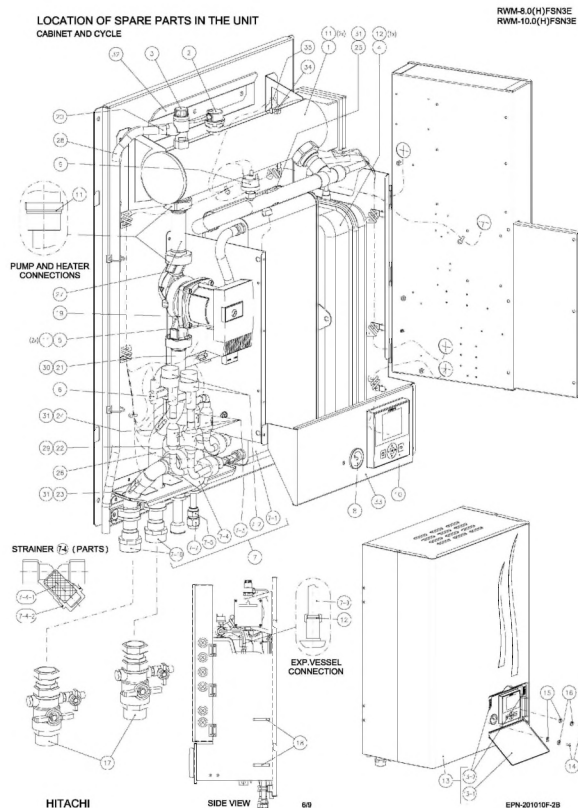

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWM-8.0FSN3E

1	E02768	electric heater assy	1	Gaskets 11 not included
2	E01909	PURGEUR AUTO	1	
3	E02475	SECURITY VALVE	1	
4	E02522	EXPANSION VESSEL 10L	1	Gasket 12 not included
5	E02769	PUMP	1	Gaskets 11 and Pump Insulation 19 not included. Before serial N° 4KE64806 (except S. N° 4KE63217)
5	E04154	PUMP	1	Gaskets 11 and Pump Insulation 19 not included. From Serial N° 4KE64806 (including S. N° 4KE63217)
6	E02770	FLOW SWITCH	1	
7	E02771	PHEX ASSY	1	Assembly (from 7- 1 to 7- 10)
7-1	E02773	PLATE HEX	1	
7-2	E00856	EXPANSION VALVE	2	
7-3	E01206	STRAINER	4	
7-4	E03830	Water Strainer Unit	1	Body + Mesh + Gasket. Before Serial N° 4KE24049
7-4	E03749	Water Strainer	1	Body + Mesh + Gasket. From Serial N° 4KE24049
7-4-1	E02946	MESH	1	A35. 8xL49 Before Serial Number 4JE05436
7-4-1	E02948	MESH	1	Ä31. 5xL46, 5 From SerialNumber 4JE05436 (4JE05436 included) to before SerialN° 4KE24049
7-4-1	E03750	Mesh	1	A36 x L43. From Serial N° 4KE24049
7-4-2	E02947	Gasket	1	A50xA42x1 Before Serial Number 4JE05436
7-4-2	E02949	GASKET	1	A43xA39xA2 From Serial Number 4JE05436 (4JE05436 included) to before Serial N° 4KE24049
7-4-2	E03751	Gasket	1	Ä41, 4 x Ä36, 2 x Ä2, 6. From Serial N° 4KE24049
7-5	E02487	UNION	1	Liquid Connection
7-7	E02489	FLARE NUT	1	Liquid Connection
7-9	E03669	Pipe 4	1	Vessel Connection
7-10	E02492	UNION	2	Water Connection
8	E02493	MANOMETER	1	Before Serial N° 4KE36842
8	E03800	MANOMETER	1	From Serial N° 4KE36842
9	E02494	PRESSURE SW	1	
10	E02777	CONTROL	1	From Serial Number 4HE89240 to 4JE94362
10	E03478	LCD CONTROL	1	After Serial Number 4JE94363
11	E02496	GASKET	4	for Electric Heater and Pump connections
12	E02497	GASKET	1	for Expansion Vessel connection
13	E02778	CAPOT	1	Assembly (Screws and Washers not included)
13-1	E02499	LCD COVER	1	Assembly (LCD Cover + Shaft + Washers)
13-2	E02500	MAGNET	2	
14	E02501	Screw	2	for Cover Assy fixing
15	E02547	NYLON WASHER	2	for Cover Assy fixing (material: nylon)
16	E02548	WASHER	2	for Cover Assy fixing (material: steel)
17	E02503	VANNE D'ISOLEMENT	2	
18	E02504	CLAMP	2	for installer wiring
19	E02779	PUMP INSULATION	1	only insulation around the Pump. Before Serial N° 4KE64806 (except S. N° 4KE63217)
19	E04156	PUMP INSULATION	1	only insulation around the Pump. From Serial N° 4KE64806 (including S. N° 4KE63217)
20	E02507	UNION	1	for Security Valve drain connection
21	E02781	THERMISTOR ASSY	1	THM G (Gas)


MODULE HYDRAULIQUE

RWM-8.0FSN3E

22	E02783	THERMISTOR ASSY	1	THM L (Liquid)
23	E02785	THERMISTOR ASSY	1	THM WI (Water In)
24	E02787	THERMISTOR ASSY	1	THM WO (Water Out)
25	E02789	THERMISTOR ASSY	1	THMWOHP (Water Out PHEX) Before SerialNumber 4JE94362
25	E03671	Thermistor Assy	1	THMWOHP (Water Out PHEX) After Serial Number 4JE94363
26	E02513	PUMP PIPE ASSY 1	1	
27	E02514	PUMP PIPE ASSY 2	1	
28	E02546	DRAIN PIPE	1	Vinyl Tube (diameter 16mm - 1 meter length)
29	E02549	P-SPRING	1	for liquid THM fixing
30	E02444	P-SPRING	1	for gas THM fixing
31	E02551	P-SPRING	3	for water THM fixing
32	E02790	WALL SUPPORT	1	
33	E02791	CONTROL SUPPORT	1	Before Serial N° 4KE36842
33	E03802	CONTROL SUPPORT	1	From Serial N° 4KE36842
34	E02938	THERMOSTAT	1	Thermal cut- off thermostat for Electric heater. RWM- 2. 0/3. 0 FSN3E Before 4JE31999 RWM- 4. 0/5. 0/6. 0 FSN3E Before 4JE22551 From 4JE23251to 4JE24899 From 4JE27512 to 4JE28499 RWM- 8. 0/10. 0 FSN3E Before 4JE56000
34	E02980	Thermostat	1	Thermal cut- off thermostat for Electric heater (Ther. Cap included). RWM- 2. 0/3. 0 FSN3E After 4JE32000 RWM- 4. 0/5. 0/6. 0 FSN3E From 4JE22552 to 4JE23250 From 4JE24900 to 4JE27511 After 4JE28500 RWM- 8. 0/10. 0 FSN3E After 4JE56001
35	E02937	THE CAP	1	Protector Cap forThermostat 34. RWM- 2. 0/3. 0 FSN3E Before 4JE31999 RWM- 4. 0/5. 0/6. 0 FSN3E Before 4JE22551 From 4JE23251 to 4JE24899 From 4JE27512 to 4JE28499 RWM- 8. 0/10. 0 FSN3E Before 4JE56000

LOCATION OF SPARE PARTS IN THE UNIT
ELECTRICAL EQUIPMENT

RWM-8.0(H)FSN3E
RWM-10.0(H)FSN3E

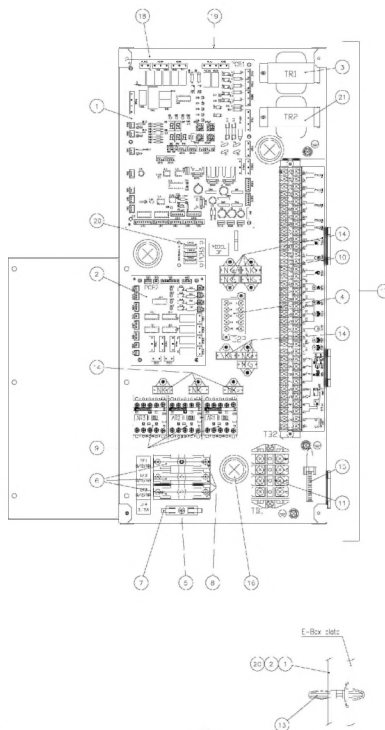

HITACHI

9/9

EPN-201010F-48

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWM-8.0FSN3E

1	E02727	INSTRUCTION ASSY PCB	1		From Serial Number 4HE89240 to 4JE94362
1	E03475	Instruction PCB	1		After Serial Number 4JE94363
2	E03774	PCB	1		
3	E04076	TRANSFORMER 1	1		
4	E01873	MAGNETIC CONTACTOR	1		16 A
5	E00003	FUSE	1		3, 15 A
6	EC00454	FUSE	3		16 A
7	E02516	FUSE HOLDER	1		
8	E01015	FUSE HOLDER	3		
9	E02517	MAGNETIC CONTACTOR	3		12 A
10	E02792	TERMINAL BOARD	1		After Serial Number 4HE89240
11	E02519	TERMINAL BOARD	1		
13	P19112	SPACER	14		
14	P14366	SURGE ABSORBER	10		After Serial Number 4HE89240
15	E02012	CLAMP	1		
16	E02060	RUBBER BUSH	10		
17	E02795	ELECTRICAL BOX	1		Assembly (Components + Harness) Before Serial N° 4KE64806 (except S. N° 4KE63217)
17	E04161	E-BOX	1		Assembly (Components + Harness) From Serial N° 4KE64806 (including S. N° 4KE63217)
18	E02797	E-BOX COVER ASSY	1		(Plate + Labels) Before Serial N° 4KE64806 (except S. N° 4KE63217)
18	E04163	E-BOX COVER ASSY	1		(Plate + Labels) From Serial N° 4KE64806 (including S. N° 4KE63217)
19	E02799	E-BOX SUBASSY	1		Only plate (without components) Before Serial N° 4KE64806 (except S. N° 4KE63217)
19	E04165	E-BOX SUB ASSY	1		Only plate (without components) From Serial N° 4KE64806 (including S. N° 4KE63217)
20	E02800	PCB 3	1		
21	E04077	TRANSFORMER 2	1		