


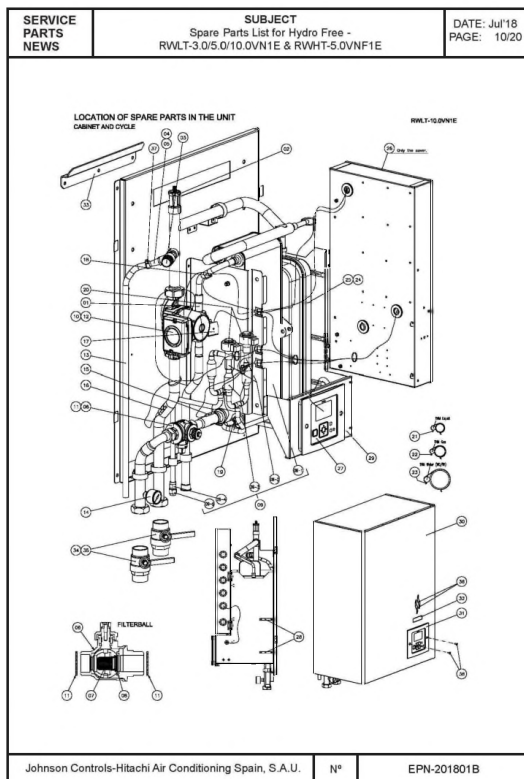

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWLT-10.0VN1E

1	E03798	Body	1		
2	E04040	AIR PURGE	1		
3	E02475	SECURITY VALVE	1		
4	E04873	GASKET	1		for Union 5 to Security Valve connection.
5	E02507	UNION	1		
6	E04840	FILTER BALL	1		
7	E04841	FILTER	1		
8	E04842	SEEGER	1		
9	E05253	PHEX UNIT	1		Assembly.
9-1	E04979	PLATE HEX	1		
9-2	E03078	EXPANSION VALVE	2		
9-3	P25041	STRAINER	4		
9-4	E02487	UNION	1		Liquid connection.
9-5	E02489	FLARE NUT	1		Liquid connection.
10	E02496	GASKET	2		for Pump connection.
11	E02528	GASKET	2		for Filter Ball connections.
12	E04977	PUMP	1		
13	E02546	DRAIN PIPE	1		
14	E05014	MANOMETER	1		
15	E04985	THERMSITOR ASSY 1	1		Water In THM.
16	E04987	THERMISTOR ASSY 1	1		Water Out THM.
17	E05262	HRN SV COIL	1		
18	E04992	THERMSITOR ASSY 2	1		Gas THM.
19	E04995	THERMSITOR ASSY 2	1		Liquid THM.
20	E03180	EXPANSION VALVE COIL	2		
21	E02549	P-SPRING	1		
22	E02444	P-SPRING	1		
23	E02551	P-SPRING	2		
24	E02497	GASKET	1		Vessel connection.
25	E04976	EXPANSION VESSEL (10L)	1		
26	E05251	E-BOX COVER ASSY	1		Plate + Labels.
27	E05254	PC-ARFHE ASSY	1		
28	E02504	CLAMP	2		
29	E05022	LCD SUPPORT	1		
30	E05005	SERVICE COVER ASSY	1		Assembly.
31	E04955	XEK12635 A - LCD FRAME	1		
32	E05245	HYDRO FREE LABEL	1		
33	E02790	WALL SUPPORT	1		
34	E04824	GASKET	4		for Shutdown Valves connections.
35	E04846	SHUTDOWN VALVE	2		
36	E04945	XEK12635 A - LCD FRAME	2		
37	E05026	CLAMP	1		
38	E02501	Screw	2		

Pièces détachées

Main view



Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWLT-10.0VN1E

1	E05784	PCB	1	
2	E01789	SPACER	12	
3	E01088	TERMINAL BOARD	1	
4	E04778	TERMINAL BOARD	1	
5	E04779	RELAY	1	
6	E04782	FUSE	1	20A
7	E02516	FUSE HOLDER	1	
8	E03828	Rocker Swith	1	
9	E02012	CLAMP	1	
10	E02060	RUBBER BUSH	9	
13	E05258	ELECTRICAL BOX	1	Assembly (Plate + Components + Harness)
14	E04791	E-BOX SUBASSY	1	Only plate (without components)