


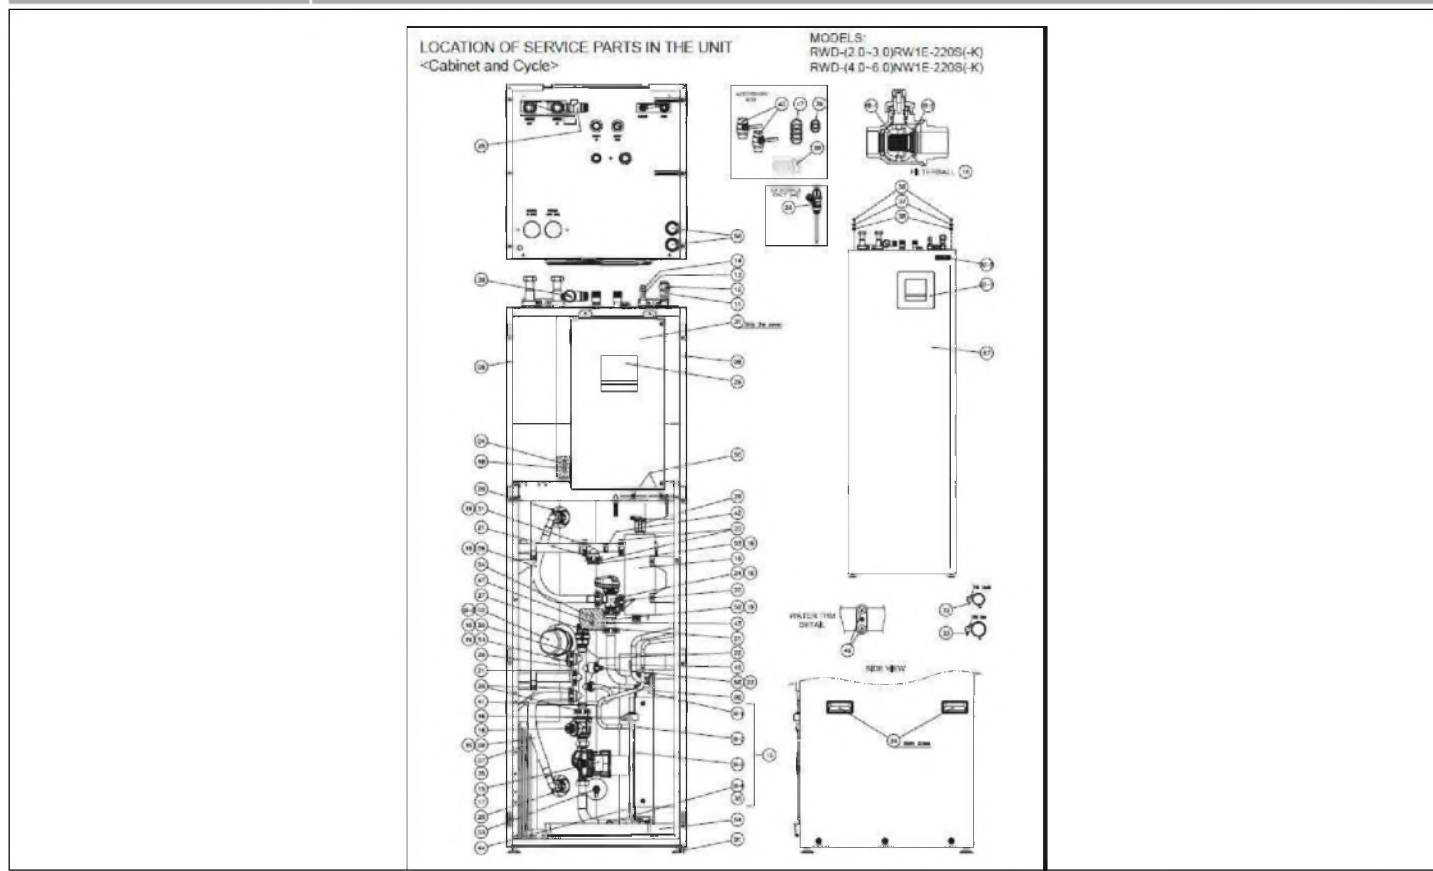

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWD-4.0NW1E-220S-K

1	E04869	FOOT	4	
2	E04088	TANK HEATER	1	Tank Heater + Thermostat + O-Ring.
2-2	E06116	O-Ring	1	Only O-Ring for Tank Heater sealing.
4	E07087	TH INSULATION	2	Cover for tank surface thermistors.
5	E07088	SIDE COVER L	1	
6	E07089	SIDE COVER R	1	
7	E07090	EXPANSION VESSEL 6L	1	
8	E07091	FLEXIBLE PIPE	1	For Expansion Vessel.
9	E07092	FLEXIBLE PIPE	2	For tank coil connections.
10	E07096	PHEx UNIT	1	Assembly.
10-1	E06535	PLATE HEX	1	
10-2	E07100	EXP. VALVE ASSY	1	Exp. Valve + Pipes + Strainers + Silencer.
10-3	E03077	EXPANSION VALVE	1	
10-4	E06198	Seal Nut	1	
11	E02488	UNION	1	Gas connection.
12	R4227	Flare Nut	1	Gas connection.
13	E02487	UNION	1	Liquid connection.
14	R4225	Flare Nut	1	Liquid connection.
15	E07103	WATER PUMP	1	
16	E07105	ELECTRIC HEATER	1	
17	E03832	Gasket	6	For Pump and Shutdown Valves connections.
18	E07106	FILTER BALL	1	
18-1	E04841	FILTER	1	
18-2	E04842	SEEGER	1	
19	E07107	ORING	13	For Quick Connections sealing.
20	E07108	CLAMP	10	
21	E07109	CLAMP	3	
23	E07111	CLAMP	1	For Pressure Sensor connection.
24	E07112	3 WAY VALVE	1	
25	E07113	SECURITY VALVE	1	
26	E02507	UNION	1	
27	E07114	AIR PURGE	1	
28	E06307	Air Purge	1	
29	E07225	GEN 2.5 WRC ASM ASSY	1	
30	E07116	MANOMETER	1	
31	E07117	E-BOX COVER ASSY	1	Plate + Labels.
32	E02549	P-SPRING	1	
33	E02550	P-SPRING	1	
34	E01897	HANDLE	4	
35	E02497	GASKET	2	For Vessel and Seal Nut connections.
36	E02501	Screw	2	
37	E02548	WASHER	2	
38	E02547	NYLON WASHER	2	
39	E04954	GASKET	2	For DHWT In/Out connections.
40	E05019	SHUTDOWN VALVE	2	
41	E07118	THERMISTOR ASSY	1	Water In THM.
42	E07119	THERMISTOR ASSY	1	Water Out THM.
43	E07120	THERMISTOR ASSY	1	Water Out PHEx THM.
44	E07121	THERMISTOR ASSY	1	Liquid THM.

MODULE HYDRAULIQUE

RWD-4.0NW1E-220S-K

45	E04982	THERMISTOR ASSY 2	1	Gas THM.
46	E04965	EXP. VALVE COIL	1	
47	E07122	THERMISTOR ASSY	1	Tank surface.
48	E07123	THERMISTOR ASSY	1	Tank surface.
49	E07124	SCREW (THERMOPLASTIC)	6	For water thermistors.
50	E07125	COMPOSITE 1	1	
51	E07126	COMPOSITE 2	1	
52	E07127	COMPOSITE 3	1	
53	E07128	PLUG	2	
54	E07129	DRAIN PAN	1	
55	E02012	CLAMP	2	
56	E07227	PRESSURE SENSOR	1	
57	E07131	SERVICE COVER ASSY	1	Service Cover + LCD Frame + Label
57-1	E07132	LCD FRAME	1	
57-2	E07226	HITACHI LABEL	1	
58	E01999	RUBBER BUSHING	2	

MODULE HYDRAULIQUE


RWD-4.0NW1E-220S-K

Pièces détachées

Main view

LOCATION OF SERVICE PARTS IN THE UNIT
<Electrical Box>

MODEL:
RWD-(2.0-3.0)RW1E-220S(-K)
RWD-(4.0-6.0)NW1E-220S(-K)

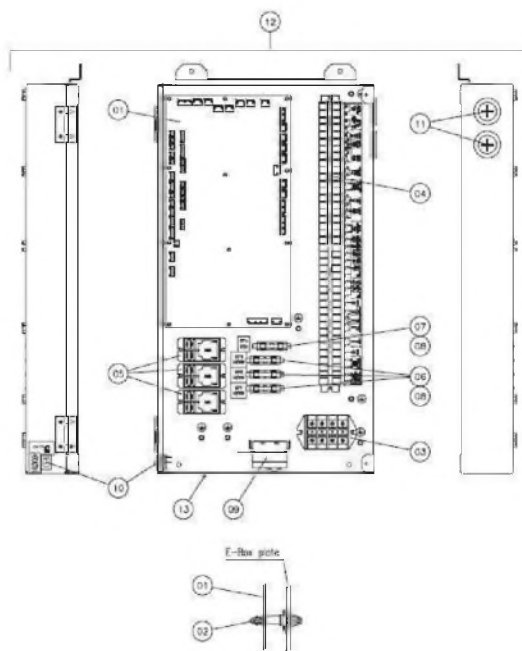

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWD-4.0NW1E-220S-K

1	E07070	INSTRUCTION ASSY PCB	1	
2	E01789	SPACER	12	
3	E02519	TERMINAL BOARD	1	
4	E04778	TERMINAL BOARD	1	
5	E04779	RELAY	3	
6	E04781	FUSE	3	12,5A
7	E04782	FUSE	1	20A
8	E02516	FUSE HOLDER	4	
9	E04785	THERMOSTAT	1	
10	E07134	ROCKER SWITCH	1	
11	E02060	RUBBER BUSH	2	
12	E07136	ELECTRICAL WIRING DIAGRAM	1	Assembly (Components + Harness).
13	E07137	E-BOX SUB ASSY	1	Only plate (without components).