


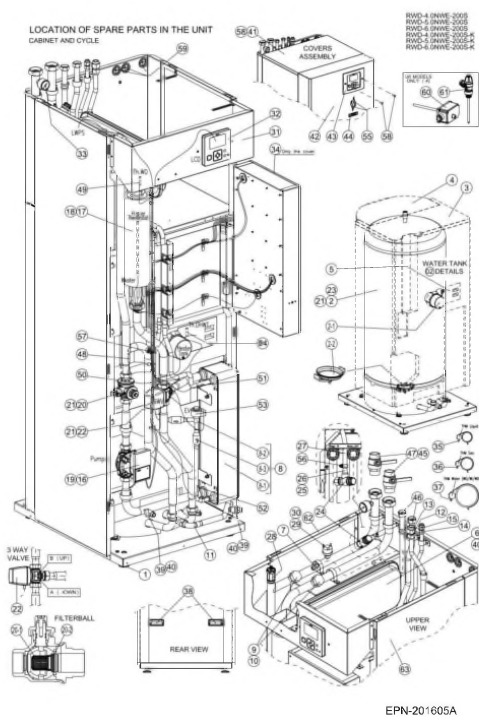

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWD-6.0NWE-200S-K

1	E04869	FOOT	4	
2	E04969	WATER TANK 200L UK	1	
2-1	E04088	TANK HEATER	1	
2-2	E04768	BOTTOM TANK FLANGE	1	
3	E04084	FRONT INSULATION	1	
4	E04085	BACK INSULATION	1	
5	E05028	SQUARE INSULATION	1	
6	E04893	EXPANSION VESSEL (6L)	1	
7	E04048	FLEXIBLE PIPE	1	
8	E05011	PHEX UNIT	1	
8-1	E04835	PLATE HEX	1	
8-2	E03078	EXPANSION VALVE	1	
8-3	P25041	STRAINER	2	
9	E04868	SEAL NUT	2	
10	E04871	SEAL GASKET	2	
11	E04073	UNION	1	
12	E02488	UNION	1	
13	E02490	FLARE NUT	1	
14	E02487	UNION	1	
15	E02489	FLARE NUT	1	
16	E04837	PUMP	1	
17	E05024	E-HEATER UNIT	1	
18	E02496	GASKET	2	
19	E03832	Gasket	2	
20	E04840	FILTER BALL	1	
20-1	E04841	FILTER	1	
20-2	E04842	SEEGER	1	
21	E02528	GASKET	7	
22	E03271	3 WAY VALVE	1	
23	E04052	GASKET	2	
24	E02475	SECURITY VALVE	1	
25	E04873	GASKET	1	
26	E02507	UNION	1	
27	E02546	DRAIN PIPE	1	
28	E04040	AIR PURGE	1	
29	E02494	PRESSURE SW	1	
30	E05017	GASKET	1	
31	E05006	LCD SUPPORT	1	
32	E04960	REMOTE CONTROL AS	1	
33	E05014	MANOMETER	1	
34	E05021	E-BOX COVER ASSY	1	
35	E02549	P-SPRING	1	
36	E02550	P-SPRING	1	
37	E02551	P-SPRING	6	
38	E01897	HANDLE	2	
39	E04069	MINI VALVE	2	
40	E02497	GASKET	3	
41	E05013	UPPER COVER	1	
42	E05012	SERVICE COVER ASSY	1	
43	E04955	XEK12635 A - LCD FRAME	1	

MODULE HYDRAULIQUE

RWD-6.0NWE-200S-K


44	E04944	XEK39388 A - YUTAKI FRAME	1	
45	E04824	GASKET	4	
46	E04954	GASKET	2	
47	E04846	SHUTDOWN VALVE	2	
48	E04928	THERMISTOR ASSY 1	1	
49	E04980	THERMISTOR ASSY 1	1	
50	E04981	THERMISTOR ASSY 1	1	
51	E04982	THERMISTOR ASSY 2	1	
52	E04983	THERMISTOR ASSY 2	1	
53	E04965	EXP. VALVE COIL	1	
54	E05020	THERMISTOR DHWT	1	
55	E04945	XEK12635 A - LCD FRAME	2	
56	E05026	CLAMP	1	
57	E05027	MANUAL AIR PURGE	1	
58	E02501	Screw	4	
59	E02060	RUBBER BUSH	3	
60	E05025	THERMOSTAT	1	
61	E05015	PRES AND TEMP. VALVE	1	
62	E05058	SIDE COVER L	1	
63	E05059	SIDE COVER R	1	

MODULE HYDRAULIQUE
RWD-6.0NWE-200S-K

Pièces détachées

Main view

LOCATION OF SPARE PARTS IN THE UNIT

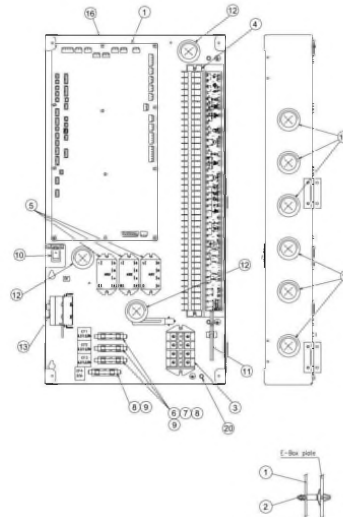

RWD-2.0WAVE-2005G-KJ
RWD-2.5WAVE-2005G-KJ
RWD-3.0WAVE-2005G-KJ
RWD-4.0WAVE-2005G-KJ
RWD-5.0WAVE-2005G-KJ
RWD-6.0WAVE-2005G-KJ
RWD-2.0WAVE-2005G-KJ
RWD-2.5WAVE-2005G-KJ
RWD-3.0WAVE-2005G-KJ
RWD-4.0WAVE-2005G-KJ
RWD-5.0WAVE-2005G-KJ
RWD-6.0WAVE-2005G-KJ
RWD-2.0WAVE-2005G-KJ
RWD-2.5WAVE-2005G-KJ
RWD-3.0WAVE-2005G-KJ
RWD-4.0WAVE-2005G-KJ
RWD-5.0WAVE-2005G-KJ
RWD-6.0WAVE-2005G-KJ
RWD-2.0WAVE-2005G-KJ
RWD-2.5WAVE-2005G-KJ
RWD-3.0WAVE-2005G-KJ
RWD-4.0WAVE-2005G-KJ
RWD-5.0WAVE-2005G-KJ
RWD-6.0WAVE-2005G-KJ

EPN-201605A

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWD-6.0NWE-200S-K

1	E04665	INSTRUCTION ASSY PCB	1	
2	E01789	SPACER	12	
3	E02519	TERMINAL BOARD	1	
4	E04778	TERMINAL BOARD	1	
5	E04779	RELAY	3	
7	E04781	FUSE	3	
8	E04782	FUSE	1	
9	E02516	FUSE HOLDER	4	
10	E03828	Rocker Swith	1	
11	E02012	CLAMP	1	
12	E02060	RUBBER BUSH	9	
13	E04785	THERMOSTAT	1	
15	E04787	ELECTRICAL BOX	1	
16	E04791	E-BOX SUBASSY	1	