 


# MODULE HYDRAULIQUE

## RWM-4FSN2E1

Pièces détachées

Main view

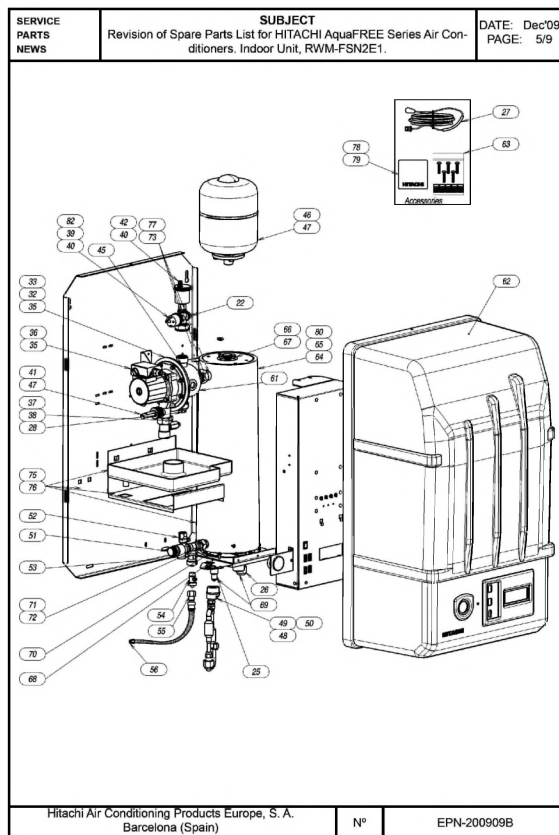

| Rep. | Référence | Description | Qté | Remarques |
|------|-----------|-------------|-----|-----------|
|------|-----------|-------------|-----|-----------|

# MODULE HYDRAULIQUE

## RWM-4FSN2E1

|    |        |                         |   |                          |
|----|--------|-------------------------|---|--------------------------|
| 1  | E01600 | General ON/OFF SW       | 1 | ( SW9)                   |
| 2  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW10)                  |
| 4  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW13)                  |
| 5  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW12)                  |
| 6  | E01479 | FUSE                    | 1 | Power Line ( 2A)( EF1)   |
| 9  | E01452 | ELEC. HEATER RELAY      | 1 | ( AR1)                   |
| 10 | E01518 | ELEC HEATER AUX. RELAY  | 1 | ( AR2)                   |
| 12 | E01295 | TRANSFORMER             | 1 | ( TE)                    |
| 13 | E01687 | PCB                     | 1 | ( PCB1)                  |
| 14 | E02222 | CONTROL PCB             | 1 | ( PCB2)                  |
| 15 | E02223 | SAMLL SETTING PCB       | 1 | ( PCB3)                  |
| 16 | E02224 | AUXILIARY PCB           | 1 | ( PCB4)                  |
| 17 | E01693 | PC-ART                  | 1 | PC- ART ( RCS)           |
| 18 | E02225 | PCB2 - PCB3             | 1 |                          |
| 19 | E01629 | PCB Main Wire           | 1 |                          |
| 20 | E02231 | PCB2 - PCB4 WIRE        | 1 |                          |
| 21 | E01464 | MANOMETRE               | 1 |                          |
| 22 | E01674 | Adapter 1/2M - 1/4F     | 1 |                          |
| 24 | E01466 | RESISTANCE              | 1 |                          |
| 25 | E00934 | THERMISTOR              | 1 | For liquid Pipe          |
| 26 | E00938 | THERMISTOR              | 1 | For Gas Pipe             |
| 27 | E02227 | OUTDOOR SENSOR THM      | 1 |                          |
| 28 | E02228 | WATER SENSOR THM        | 3 | Water Thermistors        |
| 29 | E01640 | TIMER                   | 1 |                          |
| 30 | E02229 | TERMINAL BOARD 1        | 1 |                          |
| 32 | E01657 | WATER PUMP BODY         | 1 |                          |
| 33 | E01632 | Joint 95x115x2          | 1 |                          |
| 34 | E01658 | Joint 76x85x3           | 1 |                          |
| 35 | E01455 | WATER PUMP              | 1 | Pump+ Joint+ Screws( x4) |
| 37 | E01654 | Pump Outlet Pipe        | 1 |                          |
| 38 | E01659 | Joint 26x34             | 1 |                          |
| 39 | E01462 | WATER PRESSURE          | 1 |                          |
| 40 | E01674 | Adapter 1/2M - 1/4F     | 2 |                          |
| 41 | E01463 | WATER FLOW SW           | 1 |                          |
| 42 | E01465 | AIR PURGE               | 1 |                          |
| 45 | E01664 | Xbrass 1/2 FFFF         | 1 |                          |
| 46 | E01458 | EXPANSION VESSEL        | 1 |                          |
| 47 | E01660 | Joint 20x27             | 1 |                          |
| 48 | E00679 | EXP. VALVE CORD         | 1 |                          |
| 49 | E01446 | EXP. VALVE ASSY         | 1 |                          |
| 51 | E01467 | SECURITY VALVE          | 1 |                          |
| 52 | E01665 | Tap                     | 1 |                          |
| 53 | E01663 | Tbrass 1/2 FFF          | 1 |                          |
| 54 | E01468 | WATER SOURCE PORT       | 1 |                          |
| 55 | E01630 | CHECK VALVE             | 1 |                          |
| 56 | E01633 | HOSE                    | 1 |                          |
| 61 | E01669 | DRAIN PUMP              | 1 |                          |
| 62 | E01949 | CASING                  | 1 |                          |
| 63 | E01950 | SET OF SCREWS           | 1 |                          |
| 64 | E01835 | Exchanger Assy          | 1 |                          |

## MODULE HYDRAULIQUE

### RWM-4FSN2E1

 
|    |        |                      |   |                                |
|----|--------|----------------------|---|--------------------------------|
| 65 | E01670 | Exchanger            | 1 |                                |
| 66 | E01671 | Joint 45x54x3        | 1 |                                |
| 67 | E01672 | Brass Connector      | 1 |                                |
| 68 | E01645 | Water Intlet Joint   | 1 | For Water intlet Joint         |
| 69 | E01646 | Liquid&Gas Joint     | 2 | For Liquid /Gas Joint          |
| 70 | E01647 | Heat Exchanger Joint | 1 | For Heat exchanger cover Joint |
| 71 | E01660 | Joint 20x27          | 1 |                                |
| 72 | E01678 | Adapter 3/4F - 1/2M  | 1 |                                |
| 73 | E01673 | Brass connector 1F   | 1 |                                |
| 76 | E01838 | Jacket insulation    | 1 |                                |
| 77 | E01659 | Joint 26x34          | 4 |                                |
| 78 | E01836 | THERMO CASE          | 1 |                                |
| 79 | E01837 | THERMO CASE COVER    | 1 |                                |
| 82 | E01947 | PRESSOSTAT WIRE      | 1 |                                |
| 83 | E02232 | Adapter 1F-1/2F      | 1 |                                |

# MODULE HYDRAULIQUE

## RWM-4FSN2E1

Pièces détachées

Main view

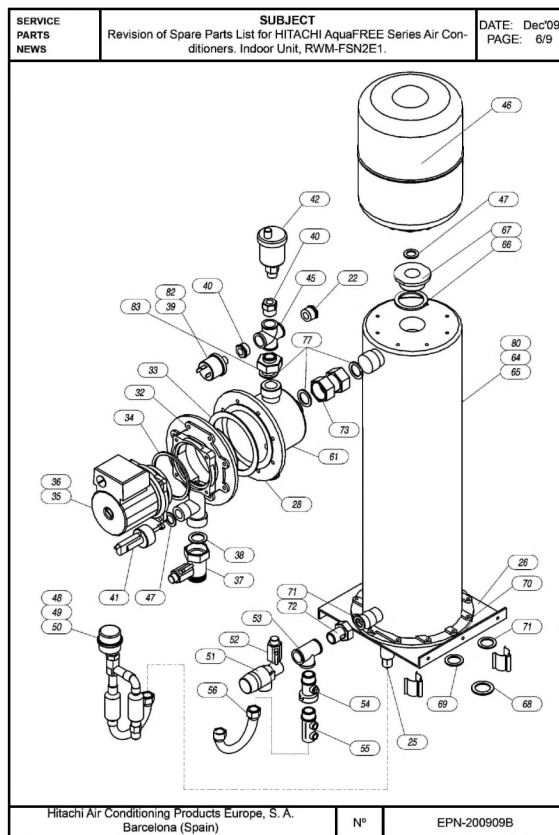

| Rep. | Référence | Description | Qté | Remarques |
|------|-----------|-------------|-----|-----------|
|------|-----------|-------------|-----|-----------|

# MODULE HYDRAULIQUE

## RWM-4FSN2E1

|    |        |                         |   |                          |
|----|--------|-------------------------|---|--------------------------|
| 1  | E01600 | General ON/OFF SW       | 1 | ( SW9)                   |
| 2  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW10)                  |
| 4  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW13)                  |
| 5  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW12)                  |
| 6  | E01479 | FUSE                    | 1 | Power Line ( 2A)( EF1)   |
| 9  | E01452 | ELEC. HEATER RELAY      | 1 | ( AR1)                   |
| 10 | E01518 | ELEC HEATER AUX. RELAY  | 1 | ( AR2)                   |
| 12 | E01295 | TRANSFORMER             | 1 | ( TE)                    |
| 13 | E01687 | PCB                     | 1 | ( PCB1)                  |
| 14 | E02222 | CONTROL PCB             | 1 | ( PCB2)                  |
| 15 | E02223 | SAMLL SETTING PCB       | 1 | ( PCB3)                  |
| 16 | E02224 | AUXILIARY PCB           | 1 | ( PCB4)                  |
| 17 | E01693 | PC-ART                  | 1 | PC- ART ( RCS)           |
| 18 | E02225 | PCB2 - PCB3             | 1 |                          |
| 19 | E01629 | PCB Main Wire           | 1 |                          |
| 20 | E02231 | PCB2 - PCB4 WIRE        | 1 |                          |
| 21 | E01464 | MANOMETRE               | 1 |                          |
| 22 | E01674 | Adapter 1/2M - 1/4F     | 1 |                          |
| 24 | E01466 | RESISTANCE              | 1 |                          |
| 25 | E00934 | THERMISTOR              | 1 | For liquid Pipe          |
| 26 | E00938 | THERMISTOR              | 1 | For Gas Pipe             |
| 27 | E02227 | OUTDOOR SENSOR THM      | 1 |                          |
| 28 | E02228 | WATER SENSOR THM        | 3 | Water Thermistors        |
| 29 | E01640 | TIMER                   | 1 |                          |
| 30 | E02229 | TERMINAL BOARD 1        | 1 |                          |
| 32 | E01657 | WATER PUMP BODY         | 1 |                          |
| 33 | E01632 | Joint 95x115x2          | 1 |                          |
| 34 | E01658 | Joint 76x85x3           | 1 |                          |
| 35 | E01455 | WATER PUMP              | 1 | Pump+ Joint+ Screws( x4) |
| 37 | E01654 | Pump Outlet Pipe        | 1 |                          |
| 38 | E01659 | Joint 26x34             | 1 |                          |
| 39 | E01462 | WATER PRESSURE          | 1 |                          |
| 40 | E01674 | Adapter 1/2M - 1/4F     | 2 |                          |
| 41 | E01463 | WATER FLOW SW           | 1 |                          |
| 42 | E01465 | AIR PURGE               | 1 |                          |
| 45 | E01664 | Xbrass 1/2 FFFF         | 1 |                          |
| 46 | E01458 | EXPANSION VESSEL        | 1 |                          |
| 47 | E01660 | Joint 20x27             | 1 |                          |
| 48 | E00679 | EXP. VALVE CORD         | 1 |                          |
| 49 | E01446 | EXP. VALVE ASSY         | 1 |                          |
| 51 | E01467 | SECURITY VALVE          | 1 |                          |
| 52 | E01665 | Tap                     | 1 |                          |
| 53 | E01663 | Tbrass 1/2 FFF          | 1 |                          |
| 54 | E01468 | WATER SOURCE PORT       | 1 |                          |
| 55 | E01630 | CHECK VALVE             | 1 |                          |
| 56 | E01633 | HOSE                    | 1 |                          |
| 61 | E01669 | DRAIN PUMP              | 1 |                          |
| 62 | E01949 | CASING                  | 1 |                          |
| 63 | E01950 | SET OF SCREWS           | 1 |                          |
| 64 | E01835 | Exchanger Assy          | 1 |                          |

# MODULE HYDRAULIQUE

## RWM-4FSN2E1

 
|    |        |                      |   |                                |
|----|--------|----------------------|---|--------------------------------|
| 65 | E01670 | Exchanger            | 1 |                                |
| 66 | E01671 | Joint 45x54x3        | 1 |                                |
| 67 | E01672 | Brass Connector      | 1 |                                |
| 68 | E01645 | Water Intlet Joint   | 1 | For Water intlet Joint         |
| 69 | E01646 | Liquid&Gas Joint     | 2 | For Liquid /Gas Joint          |
| 70 | E01647 | Heat Exchanger Joint | 1 | For Heat exchanger cover Joint |
| 71 | E01660 | Joint 20x27          | 1 |                                |
| 72 | E01678 | Adapter 3/4F - 1/2M  | 1 |                                |
| 73 | E01673 | Brass connector 1F   | 1 |                                |
| 76 | E01838 | Jacket insulation    | 1 |                                |
| 77 | E01659 | Joint 26x34          | 4 |                                |
| 78 | E01836 | THERMO CASE          | 1 |                                |
| 79 | E01837 | THERMO CASE COVER    | 1 |                                |
| 82 | E01947 | PRESSOSTAT WIRE      | 1 |                                |
| 83 | E02232 | Adapter 1F-1/2F      | 1 |                                |

# MODULE HYDRAULIQUE

## RWM-4FSN2E1

Pièces détachées

Main view

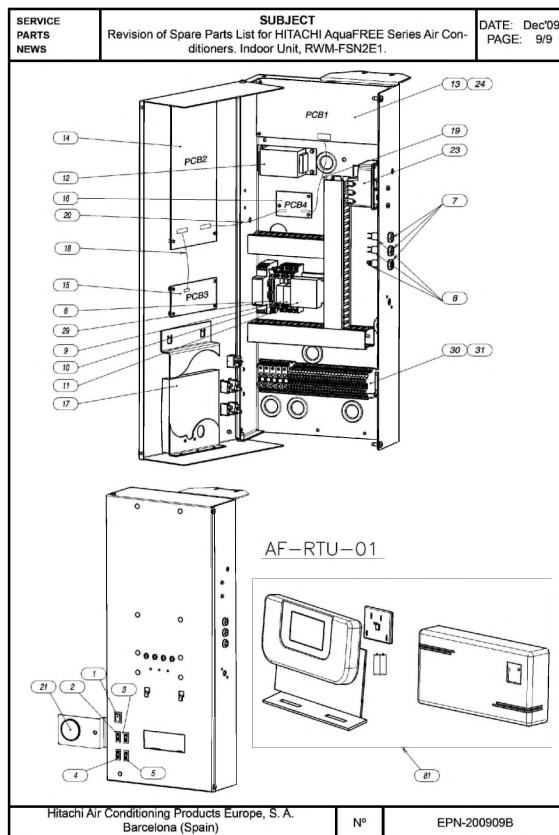

| Rep. | Référence | Description | Qté | Remarques |
|------|-----------|-------------|-----|-----------|
|------|-----------|-------------|-----|-----------|

# MODULE HYDRAULIQUE

## RWM-4FSN2E1

|    |        |                         |   |                          |
|----|--------|-------------------------|---|--------------------------|
| 1  | E01600 | General ON/OFF SW       | 1 | ( SW9)                   |
| 2  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW10)                  |
| 4  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW13)                  |
| 5  | E01602 | ON/OFF Elect. Heater SW | 1 | ( SW12)                  |
| 6  | E01479 | FUSE                    | 1 | Power Line ( 2A)( EF1)   |
| 9  | E01452 | ELEC. HEATER RELAY      | 1 | ( AR1)                   |
| 10 | E01518 | ELEC HEATER AUX. RELAY  | 1 | ( AR2)                   |
| 12 | E01295 | TRANSFORMER             | 1 | ( TE)                    |
| 13 | E01687 | PCB                     | 1 | ( PCB1)                  |
| 14 | E02222 | CONTROL PCB             | 1 | ( PCB2)                  |
| 15 | E02223 | SAMLL SETTING PCB       | 1 | ( PCB3)                  |
| 16 | E02224 | AUXILIARY PCB           | 1 | ( PCB4)                  |
| 17 | E01693 | PC-ART                  | 1 | PC- ART ( RCS)           |
| 18 | E02225 | PCB2 - PCB3             | 1 |                          |
| 19 | E01629 | PCB Main Wire           | 1 |                          |
| 20 | E02231 | PCB2 - PCB4 WIRE        | 1 |                          |
| 21 | E01464 | MANOMETRE               | 1 |                          |
| 22 | E01674 | Adapter 1/2M - 1/4F     | 1 |                          |
| 24 | E01466 | RESISTANCE              | 1 |                          |
| 25 | E00934 | THERMISTOR              | 1 | For liquid Pipe          |
| 26 | E00938 | THERMISTOR              | 1 | For Gas Pipe             |
| 27 | E02227 | OUTDOOR SENSOR THM      | 1 |                          |
| 28 | E02228 | WATER SENSOR THM        | 3 | Water Thermistors        |
| 29 | E01640 | TIMER                   | 1 |                          |
| 30 | E02229 | TERMINAL BOARD 1        | 1 |                          |
| 32 | E01657 | WATER PUMP BODY         | 1 |                          |
| 33 | E01632 | Joint 95x115x2          | 1 |                          |
| 34 | E01658 | Joint 76x85x3           | 1 |                          |
| 35 | E01455 | WATER PUMP              | 1 | Pump+ Joint+ Screws( x4) |
| 37 | E01654 | Pump Outlet Pipe        | 1 |                          |
| 38 | E01659 | Joint 26x34             | 1 |                          |
| 39 | E01462 | WATER PRESSURE          | 1 |                          |
| 40 | E01674 | Adapter 1/2M - 1/4F     | 2 |                          |
| 41 | E01463 | WATER FLOW SW           | 1 |                          |
| 42 | E01465 | AIR PURGE               | 1 |                          |
| 45 | E01664 | Xbrass 1/2 FFFF         | 1 |                          |
| 46 | E01458 | EXPANSION VESSEL        | 1 |                          |
| 47 | E01660 | Joint 20x27             | 1 |                          |
| 48 | E00679 | EXP. VALVE CORD         | 1 |                          |
| 49 | E01446 | EXP. VALVE ASSY         | 1 |                          |
| 51 | E01467 | SECURITY VALVE          | 1 |                          |
| 52 | E01665 | Tap                     | 1 |                          |
| 53 | E01663 | Tbrass 1/2 FFF          | 1 |                          |
| 54 | E01468 | WATER SOURCE PORT       | 1 |                          |
| 55 | E01630 | CHECK VALVE             | 1 |                          |
| 56 | E01633 | HOSE                    | 1 |                          |
| 61 | E01669 | DRAIN PUMP              | 1 |                          |
| 62 | E01949 | CASING                  | 1 |                          |
| 63 | E01950 | SET OF SCREWS           | 1 |                          |
| 64 | E01835 | Exchanger Assy          | 1 |                          |

## MODULE HYDRAULIQUE

### RWM-4FSN2E1

|    |        |                      |   |                                |
|----|--------|----------------------|---|--------------------------------|
| 65 | E01670 | Exchanger            | 1 |                                |
| 66 | E01671 | Joint 45x54x3        | 1 |                                |
| 67 | E01672 | Brass Connector      | 1 |                                |
| 68 | E01645 | Water Intlet Joint   | 1 | For Water intlet Joint         |
| 69 | E01646 | Liquid&Gas Joint     | 2 | For Liquid /Gas Joint          |
| 70 | E01647 | Heat Exchanger Joint | 1 | For Heat exchanger cover Joint |
| 71 | E01660 | Joint 20x27          | 1 |                                |
| 72 | E01678 | Adapter 3/4F - 1/2M  | 1 |                                |
| 73 | E01673 | Brass connector 1F   | 1 |                                |
| 76 | E01838 | Jacket insulation    | 1 |                                |
| 77 | E01659 | Joint 26x34          | 4 |                                |
| 78 | E01836 | THERMO CASE          | 1 |                                |
| 79 | E01837 | THERMO CASE COVER    | 1 |                                |
| 82 | E01947 | PRESSOSTAT WIRE      | 1 |                                |
| 83 | E02232 | Adapter 1F-1/2F      | 1 |                                |