


MODULE HYDRAULIQUE

RWH-4.0FSNFE

Pièces détachées

Main view

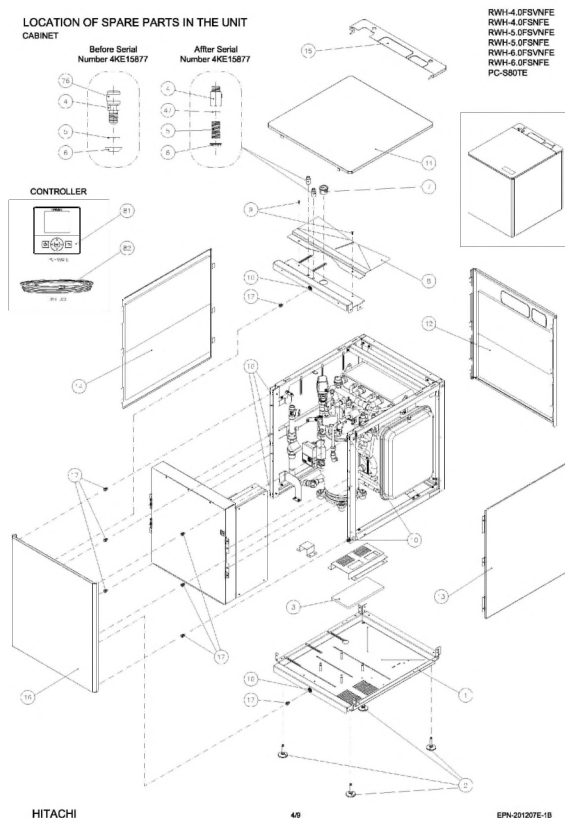

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWH-4.0FSNFE

1	E03246	B-BASE ASSY	1	
2	E03247	FOOT	4	
3	E03248	FILTER	1	
4	E03249	PRESSURE PORT	2	Before Serial Number 4KE15877
4	E03745	Mini Valve	2	After Serial Num 4KE15877
5	E03250	NUT	2	Before Serial Number 4KE15877
5	E03747	Union	2	After Serial Num 4KE15877
6	E02757	GASKET CU	4	Before Serial Number 4KE15877
6	E03746	Nut	2	After Serial Num 4KE15877
7	E02493	MANOMETER	1	Before Serial N° 4KE36842
7	E03800	MANOMETER	1	From Serila N° 4KE36842
8	E03251	PARTITION PLATE	1	
9	E03120	SCREW	2	
10	E03252	COUPLING	8	
11	E03253	UPPER COVER L ASSY	1	Insulation Included.
12	E03254	REAR COVER DOWN ASSY	1	Insulation Included.
13	E03255	SIDE COVER R ASSY	1	Insulation Included.
14	E03256	SIDE COVER L ASSY	1	Insulation Included.
15	E03257	UPPER COVER S	1	
16	E03258	COVER	1	
17	E03259	PIN	8	
18	E03260	PHEX UNIT	1	Assembly from (18- 1 ~ 18- 7).
18-1	E03262	INSULATION	3	
18-3	E02485	PLATE HEX	1	
18-4	E02484	PLATE HEX	2	
18-5	E03263	INSULATION	2	
18-6	E03264	INSULATION	1	
18-7	E03265	INSULATION	3	
19	E01909	PURGEUR AUTO	1	
20	E02475	SECURITY VALVE	1	
21	E03266	UNION	1	
22	E03267	DRAIN PIPE	1	
23	E03268	EXPANSION VESSEL 12L	1	Gasket 47 not included.
24	E03269	POMPE	1	Gaskets 45 not included. Before Serial N° 4KE64806 (except S. N° 4KE63218)
24	E04155	PUMP	1	Gaskets 45 not included. From Serial N° 4KE64806 (including S. N° 4KE63218)
25	E03270	PIPE 1 ASSY	1	Before Serial Number 4KE15877
25	E03748	PIPE 1 ASSY	1	After Serial Num 4KE15877
26	E03271	3 WAY VALVE	1	Gaskets 46 and 75 not included.
27	E03273	COMPRESSOR H405DHD-64D1	1	
28	E02494	PRESSURE SW	1	Before Serial Number 4KE27700
29	P26013	P-SENSOR	1	Pd
30	P26014	P-SENSOR	1	Ps
31	E03830	Water Strainer Unit	1	Before Serial Number 4KE15877
31	E03749	Water Strainer	1	After Serial Num 4KE15877
31-1	E02948	MESH	1	Before Serial Number 4KE15877
31-1	E03750	Mesh	1	After Serial Num 4KE15877
31-2	E02949	GASKET	1	Before Serial Number 4KE15877
31-2	E03751	Gasket	1	After Serial Num 4KE15877

MODULE HYDRAULIQUE

RWH-4.0FSNFE

32	E01716	EXP. VALVE	1	1st Cycle.
33	P24691	EXP. VALVE	1	2nd Cycle.
34	E01206	STRAINER	2	
35	P25037	STRAINER	1	
36	P26467	STRAINER	1	
37	E02489	FLARE NUT	1	Liquid Connection.
38	E02487	UNION	1	Liquid Connection.
39	E01160	CHECK JOINT	2	R410A
40	E03274	CHECK JOINT	3	R134a
41	E03275	SOLENOID VALVE	2	Before Serial Number 4KE37824
41	E03798	Body	2	From Serial Num 4KE37824
42	E02490	FLARE NUT	1	Gas Connection.
43	E02488	UNION	1	Gas Connection.
44	E03276	PRESSURE SWITCH	1	
45	E02496	GASKET	2	For Pump connections.
46	E02528	GASKET	1	3 Way Valve
47	E02497	GASKET	2	For Expansion Vessel and Mini Valve connection. After Serial Num 4KE15877
48	E03277	PRESSURE PORT HOSE	1	Before Serial Number 4KE15877
48	E03752	Flexible Pipe	1	Water. After Serial Num 4KE15877
49	E03278	PRESSURE PORT HOSE	1	Before Serial Number 4KE15877
49	E03753	Flexible Pipe	1	Water. After Serial Num 4KE15877
50	E03279	HEATER HARNESS	1	Before Serial Number 4KE27700
50	E03805	Heater Harness	1	After Serial Num 4KE27700
51	E03280	HEATER HARNESS	1	Before Serial Number 4KE27700
51	E03806	Heater Harness	1	After Serial Num 4KE27700
52	E03281	HEATER HARNESS	1	Before Serial Number 4KE27700
52	E03807	Heater Harness	1	After Serial Num 4KE27700
53	E03282	HRN DHWT SWITCH	1	Switch for emergency operation. Before Serial Number 4KE27700
54	E03283	THERMISTOR ASSY	1	THML (Liquid). Before Serial Number 4KE27700
54	E03811	Thermistor Assy 2	1	THML (Liquid). After Serial Num 4KE27700
55	E03284	THERMISTOR ASSY	1	THMG (Gas). Before Serial Number 4KE27700
55	E03810	Thermistor Assy 2	1	THMG (Gas). After Serial Num 4KE27700
56	E03285	THERMISTOR ASSY	1	THMWO (Water Out). Before Serial Number 4KE27700
56	E03809	Thermistor Assy 1	1	THMWO (Water Out). After Serial Num 4KE27700
57	E03286	THERMISTOR ASSY	1	THMWI (Water In). Before Serial Number 4KE27700
57	E03808	Thermistor Assy 1	1	THMWI (Water In). After Serial Num 4KE27700
58	E03287	THERMISTOR ASSY	1	THMD (Compressor Discharge). Before Serial Number 4KE27700
58	E03813	Thermistor Assy 3	1	THMD (Compressor Discharge). After Serial Num 4KE27700
59	E03288	THERMISTOR ASSY	1	THMEH (Evaporating Heating). Before Serial Number 4KE27700
60	E03289	THERMISTOR ASSY	1	THMEC (Evaporating Cooling). Before Serial Number 4KE27700
61	E03290	THERMISTOR ASSY	1	THMS (Compressor Suction). Before Serial Number 4KE27700
61	E03812	Thermistor Assy 3	1	THMS (Compressor Suction). After Serial Num 4KE27700
62	E02551	P-SPRING	4	
63	E02444	P-SPRING	1	

MODULE HYDRAULIQUE

RWH-4.0FSNFE

64	E02549	P-SPRING	1	
65	E02550	P-SPRING	1	
66	E03291	EXPV COIL	1	
67	E03292	HOSE W OUT	1	
68	E03293	HOSE W IN	1	
69	E02479	FLOW SWITCH	1	
70	E03769	ACOUSTICAL COVER 46	1	
71	P17308	VIBRATION ABSORBER	4	
72	P13109	VIBRATION ABSORBER	4	
73	E01900	RUBBER CAP	1	
74	E01230	COIL FOR SOLENOID VALVE	2	Before Serial Number 4KE37824
74	E03836	Coil SV	2	From Serial Number 4KE37824
75	E03294	SPECIAL GASKET	1	For 3 Way Valve reduction union.
76	E03295	PRESSURE PORT CAP	2	Water. Before Serial Number 4KE15877
77	E03832	Gasket	5	(4x) Hose connections, (1x) Extra.
78	E03837	Harness CN 22	1	Pump wire connection. From Serial N° 4KE27700 to after Serial N° 4KE64806
78	E04217	HARNESS CN22	1	From Serial N° 4KE64806 (including S. N° 4KE63218) to before S. N° 4KE92744
78	E04354	HARNESS CN22	1	From Serial N° 4KE92744
79	E01585	EXP. VALVE CORD	1	Expansion Valve Wire (MV1). After Serial Number 4KE27700
80	E03839	Harness 63H	1	High Pressure Switch wire connection (63H). After Serial Num 4KE27700
83	E04216	POWER PUMP ASSY	1	From Serial N° 4KE64806 (including S. N° 4KE63218)
81	XEK37855 C	LCD CONTROL	1	

 
MODULE HYDRAULIQUE

RWH-4.0FSNFE


Pièces détachées

Main view

LOCATION OF SPARE PARTS IN THE UNIT
CYCLE



RWH-4.0FSVNF
RWH-4.0FSNFE
RWH-5.0FSVNF
RWH-5.0FSNFE
RWH-6.0FSVNF
RWH-6.0FSNFE
PC-S80TE

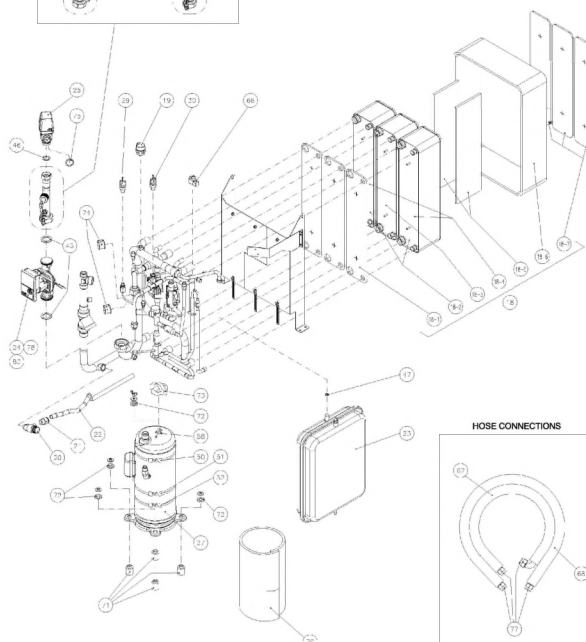

HITACHI

59

EPN-201207E-26

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWH-4.0FSNFE

1	E03246	B-BASE ASSY	1	
2	E03247	FOOT	4	
3	E03248	FILTER	1	
4	E03249	PRESSURE PORT	2	Before Serial Number 4KE15877
4	E03745	Mini Valve	2	After Serial Num 4KE15877
5	E03250	NUT	2	Before Serial Number 4KE15877
5	E03747	Union	2	After Serial Num 4KE15877
6	E02757	GASKET CU	4	Before Serial Number 4KE15877
6	E03746	Nut	2	After Serial Num 4KE15877
7	E02493	MANOMETER	1	Before Serial N° 4KE36842
7	E03800	MANOMETER	1	From Serila N° 4KE36842
8	E03251	PARTITION PLATE	1	
9	E03120	SCREW	2	
10	E03252	COUPLING	8	
11	E03253	UPPER COVER L ASSY	1	Insulation Included.
12	E03254	REAR COVER DOWN ASSY	1	Insulation Included.
13	E03255	SIDE COVER R ASSY	1	Insulation Included.
14	E03256	SIDE COVER L ASSY	1	Insulation Included.
15	E03257	UPPER COVER S	1	
16	E03258	COVER	1	
17	E03259	PIN	8	
18	E03260	PHEX UNIT	1	Assembly from (18- 1 ~ 18- 7).
18-1	E03262	INSULATION	3	
18-3	E02485	PLATE HEX	1	
18-4	E02484	PLATE HEX	2	
18-5	E03263	INSULATION	2	
18-6	E03264	INSULATION	1	
18-7	E03265	INSULATION	3	
19	E01909	PURGEUR AUTO	1	
20	E02475	SECURITY VALVE	1	
21	E03266	UNION	1	
22	E03267	DRAIN PIPE	1	
23	E03268	EXPANSION VESSEL 12L	1	Gasket 47 not included.
24	E03269	POMPE	1	Gaskets 45 not included. Before Serial N° 4KE64806 (except S. N° 4KE63218)
24	E04155	PUMP	1	Gaskets 45 not included. From Serial N° 4KE64806 (including S. N° 4KE63218)
25	E03270	PIPE 1 ASSY	1	Before Serial Number 4KE15877
25	E03748	PIPE 1 ASSY	1	After Serial Num 4KE15877
26	E03271	3 WAY VALVE	1	Gaskets 46 and 75 not included.
27	E03273	COMPRESSOR H405DHD-64D1	1	
28	E02494	PRESSURE SW	1	Before Serial Number 4KE27700
29	P26013	P-SENSOR	1	Pd
30	P26014	P-SENSOR	1	Ps
31	E03830	Water Strainer Unit	1	Before Serial Number 4KE15877
31	E03749	Water Strainer	1	After Serial Num 4KE15877
31-1	E02948	MESH	1	Before Serial Number 4KE15877
31-1	E03750	Mesh	1	After Serial Num 4KE15877
31-2	E02949	GASKET	1	Before Serial Number 4KE15877
31-2	E03751	Gasket	1	After Serial Num 4KE15877

MODULE HYDRAULIQUE

RWH-4.0FSNFE

32	E01716	EXP. VALVE	1	1st Cycle.
33	P24691	EXP. VALVE	1	2nd Cycle.
34	E01206	STRAINER	2	
35	P25037	STRAINER	1	
36	P26467	STRAINER	1	
37	E02489	FLARE NUT	1	Liquid Connection.
38	E02487	UNION	1	Liquid Connection.
39	E01160	CHECK JOINT	2	R410A
40	E03274	CHECK JOINT	3	R134a
41	E03275	SOLENOID VALVE	2	Before Serial Number 4KE37824
41	E03798	Body	2	From Serial Num 4KE37824
42	E02490	FLARE NUT	1	Gas Connection.
43	E02488	UNION	1	Gas Connection.
44	E03276	PRESSURE SWITCH	1	
45	E02496	GASKET	2	For Pump connections.
46	E02528	GASKET	1	3 Way Valve
47	E02497	GASKET	2	For Expansion Vessel and Mini Valve connection. After Serial Num 4KE15877
48	E03277	PRESSURE PORT HOSE	1	Before Serial Number 4KE15877
48	E03752	Flexible Pipe	1	Water. After Serial Num 4KE15877
49	E03278	PRESSURE PORT HOSE	1	Before Serial Number 4KE15877
49	E03753	Flexible Pipe	1	Water. After Serial Num 4KE15877
50	E03279	HEATER HARNESS	1	Before Serial Number 4KE27700
50	E03805	Heater Harness	1	After Serial Num 4KE27700
51	E03280	HEATER HARNESS	1	Before Serial Number 4KE27700
51	E03806	Heater Harness	1	After Serial Num 4KE27700
52	E03281	HEATER HARNESS	1	Before Serial Number 4KE27700
52	E03807	Heater Harness	1	After Serial Num 4KE27700
53	E03282	HRN DHWT SWITCH	1	Switch for emergency operation. Before Serial Number 4KE27700
54	E03283	THERMISTOR ASSY	1	THML (Liquid). Before Serial Number 4KE27700
54	E03811	Thermistor Assy 2	1	THML (Liquid). After Serial Num 4KE27700
55	E03284	THERMISTOR ASSY	1	THMG (Gas). Before Serial Number 4KE27700
55	E03810	Thermistor Assy 2	1	THMG (Gas). After Serial Num 4KE27700
56	E03285	THERMISTOR ASSY	1	THMWO (Water Out). Before Serial Number 4KE27700
56	E03809	Thermistor Assy 1	1	THMWO (Water Out). After Serial Num 4KE27700
57	E03286	THERMISTOR ASSY	1	THMWI (Water In). Before Serial Number 4KE27700
57	E03808	Thermistor Assy 1	1	THMWI (Water In). After Serial Num 4KE27700
58	E03287	THERMISTOR ASSY	1	THMD (Compressor Discharge). Before Serial Number 4KE27700
58	E03813	Thermistor Assy 3	1	THMD (Compressor Discharge). After Serial Num 4KE27700
59	E03288	THERMISTOR ASSY	1	THMEH (Evaporating Heating). Before Serial Number 4KE27700
60	E03289	THERMISTOR ASSY	1	THMEC (Evaporating Cooling). Before Serial Number 4KE27700
61	E03290	THERMISTOR ASSY	1	THMS (Compressor Suction). Before Serial Number 4KE27700
61	E03812	Thermistor Assy 3	1	THMS (Compressor Suction). After Serial Num 4KE27700
62	E02551	P-SPRING	4	
63	E02444	P-SPRING	1	

MODULE HYDRAULIQUE

RWH-4.0FSNFE


64	E02549	P-SPRING	1	
65	E02550	P-SPRING	1	
66	E03291	EXPV COIL	1	
67	E03292	HOSE W OUT	1	
68	E03293	HOSE W IN	1	
69	E02479	FLOW SWITCH	1	
70	E03769	ACOUSTICAL COVER 46	1	
71	P17308	VIBRATION ABSORBER	4	
72	P13109	VIBRATION ABSORBER	4	
73	E01900	RUBBER CAP	1	
74	E01230	COIL FOR SOLENOID VALVE	2	Before Serial Number 4KE37824
74	E03836	Coil SV	2	From Serial Number 4KE37824
75	E03294	SPECIAL GASKET	1	For 3 Way Valve reduction union.
76	E03295	PRESSURE PORT CAP	2	Water. Before Serial Number 4KE15877
77	E03832	Gasket	5	(4x) Hose connections, (1x) Extra.
78	E03837	Harness CN 22	1	Pump wire connection. From Serial N° 4KE27700 to after Serial N° 4KE64806
78	E04217	HARNESS CN22	1	From Serial N° 4KE64806 (including S. N° 4KE63218) to before S. N° 4KE92744
78	E04354	HARNESS CN22	1	From Serial N° 4KE92744
79	E01585	EXP. VALVE CORD	1	Expansion Valve Wire (MV1). After Serial Number 4KE27700
80	E03839	Harness 63H	1	High Pressure Switch wire connection (63H). After Serial Num 4KE27700
83	E04216	POWER PUMP ASSY	1	From Serial N° 4KE64806 (including S. N° 4KE63218)

MODULE HYDRAULIQUE

RWH-4.0FSNFE

Pièces détachées

Main view

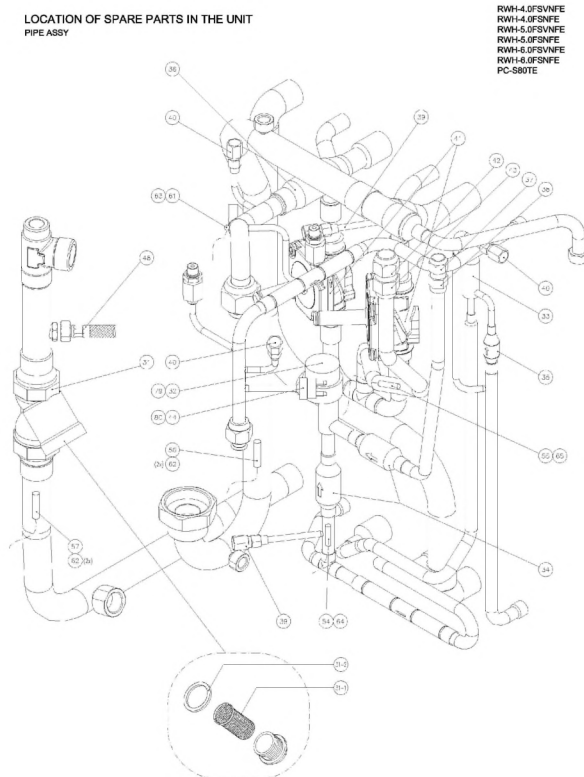

HITACHI

50

FP3-201072-30

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWH-4.0FSNFE

1	E03246	B-BASE ASSY	1	
2	E03247	FOOT	4	
3	E03248	FILTER	1	
4	E03249	PRESSURE PORT	2	Before Serial Number 4KE15877
4	E03745	Mini Valve	2	After Serial Num 4KE15877
5	E03250	NUT	2	Before Serial Number 4KE15877
5	E03747	Union	2	After Serial Num 4KE15877
6	E02757	GASKET CU	4	Before Serial Number 4KE15877
6	E03746	Nut	2	After Serial Num 4KE15877
7	E02493	MANOMETER	1	Before Serial N° 4KE36842
7	E03800	MANOMETER	1	From Serila N° 4KE36842
8	E03251	PARTITION PLATE	1	
9	E03120	SCREW	2	
10	E03252	COUPLING	8	
11	E03253	UPPER COVER L ASSY	1	Insulation Included.
12	E03254	REAR COVER DOWN ASSY	1	Insulation Included.
13	E03255	SIDE COVER R ASSY	1	Insulation Included.
14	E03256	SIDE COVER L ASSY	1	Insulation Included.
15	E03257	UPPER COVER S	1	
16	E03258	COVER	1	
17	E03259	PIN	8	
18	E03260	PHEX UNIT	1	Assembly from (18- 1 ~ 18- 7).
18-1	E03262	INSULATION	3	
18-3	E02485	PLATE HEX	1	
18-4	E02484	PLATE HEX	2	
18-5	E03263	INSULATION	2	
18-6	E03264	INSULATION	1	
18-7	E03265	INSULATION	3	
19	E01909	PURGEUR AUTO	1	
20	E02475	SECURITY VALVE	1	
21	E03266	UNION	1	
22	E03267	DRAIN PIPE	1	
23	E03268	EXPANSION VESSEL 12L	1	Gasket 47 not included.
24	E03269	POMPE	1	Gaskets 45 not included. Before Serial N° 4KE64806 (except S. N° 4KE63218)
24	E04155	PUMP	1	Gaskets 45 not included. From Serial N° 4KE64806 (including S. N° 4KE63218)
25	E03270	PIPE 1 ASSY	1	Before Serial Number 4KE15877
25	E03748	PIPE 1 ASSY	1	After Serial Num 4KE15877
26	E03271	3 WAY VALVE	1	Gaskets 46 and 75 not included.
27	E03273	COMPRESSOR H405DHD-64D1	1	
28	E02494	PRESSURE SW	1	Before Serial Number 4KE27700
29	P26013	P-SENSOR	1	Pd
30	P26014	P-SENSOR	1	Ps
31	E03830	Water Strainer Unit	1	Before Serial Number 4KE15877
31	E03749	Water Strainer	1	After Serial Num 4KE15877
31-1	E02948	MESH	1	Before Serial Number 4KE15877
31-1	E03750	Mesh	1	After Serial Num 4KE15877
31-2	E02949	GASKET	1	Before Serial Number 4KE15877
31-2	E03751	Gasket	1	After Serial Num 4KE15877

MODULE HYDRAULIQUE

RWH-4.0FSNFE

32	E01716	EXP. VALVE	1	1st Cycle.
33	P24691	EXP. VALVE	1	2nd Cycle.
34	E01206	STRAINER	2	
35	P25037	STRAINER	1	
36	P26467	STRAINER	1	
37	E02489	FLARE NUT	1	Liquid Connection.
38	E02487	UNION	1	Liquid Connection.
39	E01160	CHECK JOINT	2	R410A
40	E03274	CHECK JOINT	3	R134a
41	E03275	SOLENOID VALVE	2	Before Serial Number 4KE37824
41	E03798	Body	2	From Serial Num 4KE37824
42	E02490	FLARE NUT	1	Gas Connection.
43	E02488	UNION	1	Gas Connection.
44	E03276	PRESSURE SWITCH	1	
45	E02496	GASKET	2	For Pump connections.
46	E02528	GASKET	1	3 Way Valve
47	E02497	GASKET	2	For Expansion Vessel and Mini Valve connection. After Serial Num 4KE15877
48	E03277	PRESSURE PORT HOSE	1	Before Serial Number 4KE15877
48	E03752	Flexible Pipe	1	Water. After Serial Num 4KE15877
49	E03278	PRESSURE PORT HOSE	1	Before Serial Number 4KE15877
49	E03753	Flexible Pipe	1	Water. After Serial Num 4KE15877
50	E03279	HEATER HARNESS	1	Before Serial Number 4KE27700
50	E03805	Heater Harness	1	After Serial Num 4KE27700
51	E03280	HEATER HARNESS	1	Before Serial Number 4KE27700
51	E03806	Heater Harness	1	After Serial Num 4KE27700
52	E03281	HEATER HARNESS	1	Before Serial Number 4KE27700
52	E03807	Heater Harness	1	After Serial Num 4KE27700
53	E03282	HRN DHWT SWITCH	1	Switch for emergency operation. Before Serial Number 4KE27700
54	E03283	THERMISTOR ASSY	1	THML (Liquid). Before Serial Number 4KE27700
54	E03811	Thermistor Assy 2	1	THML (Liquid). After Serial Num 4KE27700
55	E03284	THERMISTOR ASSY	1	THMG (Gas). Before Serial Number 4KE27700
55	E03810	Thermistor Assy 2	1	THMG (Gas). After Serial Num 4KE27700
56	E03285	THERMISTOR ASSY	1	THMWO (Water Out). Before Serial Number 4KE27700
56	E03809	Thermistor Assy 1	1	THMWO (Water Out). After Serial Num 4KE27700
57	E03286	THERMISTOR ASSY	1	THMWI (Water In). Before Serial Number 4KE27700
57	E03808	Thermistor Assy 1	1	THMWI (Water In). After Serial Num 4KE27700
58	E03287	THERMISTOR ASSY	1	THMD (Compressor Discharge). Before Serial Number 4KE27700
58	E03813	Thermistor Assy 3	1	THMD (Compressor Discharge). After Serial Num 4KE27700
59	E03288	THERMISTOR ASSY	1	THMEH (Evaporating Heating). Before Serial Number 4KE27700
60	E03289	THERMISTOR ASSY	1	THMEC (Evaporating Cooling). Before Serial Number 4KE27700
61	E03290	THERMISTOR ASSY	1	THMS (Compressor Suction). Before Serial Number 4KE27700
61	E03812	Thermistor Assy 3	1	THMS (Compressor Suction). After Serial Num 4KE27700
62	E02551	P-SPRING	4	
63	E02444	P-SPRING	1	

MODULE HYDRAULIQUE

RWH-4.0FSNFE


64	E02549	P-SPRING	1	
65	E02550	P-SPRING	1	
66	E03291	EXPV COIL	1	
67	E03292	HOSE W OUT	1	
68	E03293	HOSE W IN	1	
69	E02479	FLOW SWITCH	1	
70	E03769	ACOUSTICAL COVER 46	1	
71	P17308	VIBRATION ABSORBER	4	
72	P13109	VIBRATION ABSORBER	4	
73	E01900	RUBBER CAP	1	
74	E01230	COIL FOR SOLENOID VALVE	2	Before Serial Number 4KE37824
74	E03836	Coil SV	2	From Serial Number 4KE37824
75	E03294	SPECIAL GASKET	1	For 3 Way Valve reduction union.
76	E03295	PRESSURE PORT CAP	2	Water. Before Serial Number 4KE15877
77	E03832	Gasket	5	(4x) Hose connections, (1x) Extra.
78	E03837	Harness CN 22	1	Pump wire connection. From Serial N° 4KE27700 to after Serial N° 4KE64806
78	E04217	HARNESS CN22	1	From Serial N° 4KE64806 (including S. N° 4KE63218) to before S. N° 4KE92744
78	E04354	HARNESS CN22	1	From Serial N° 4KE92744
79	E01585	EXP. VALVE CORD	1	Expansion Valve Wire (MV1). After Serial Number 4KE27700
80	E03839	Harness 63H	1	High Pressure Switch wire connection (63H). After Serial Num 4KE27700
83	E04216	POWER PUMP ASSY	1	From Serial N° 4KE64806 (including S. N° 4KE63218)

MODULE HYDRAULIQUE

RWH-4.0FSNFE

Pièces détachées

Main view

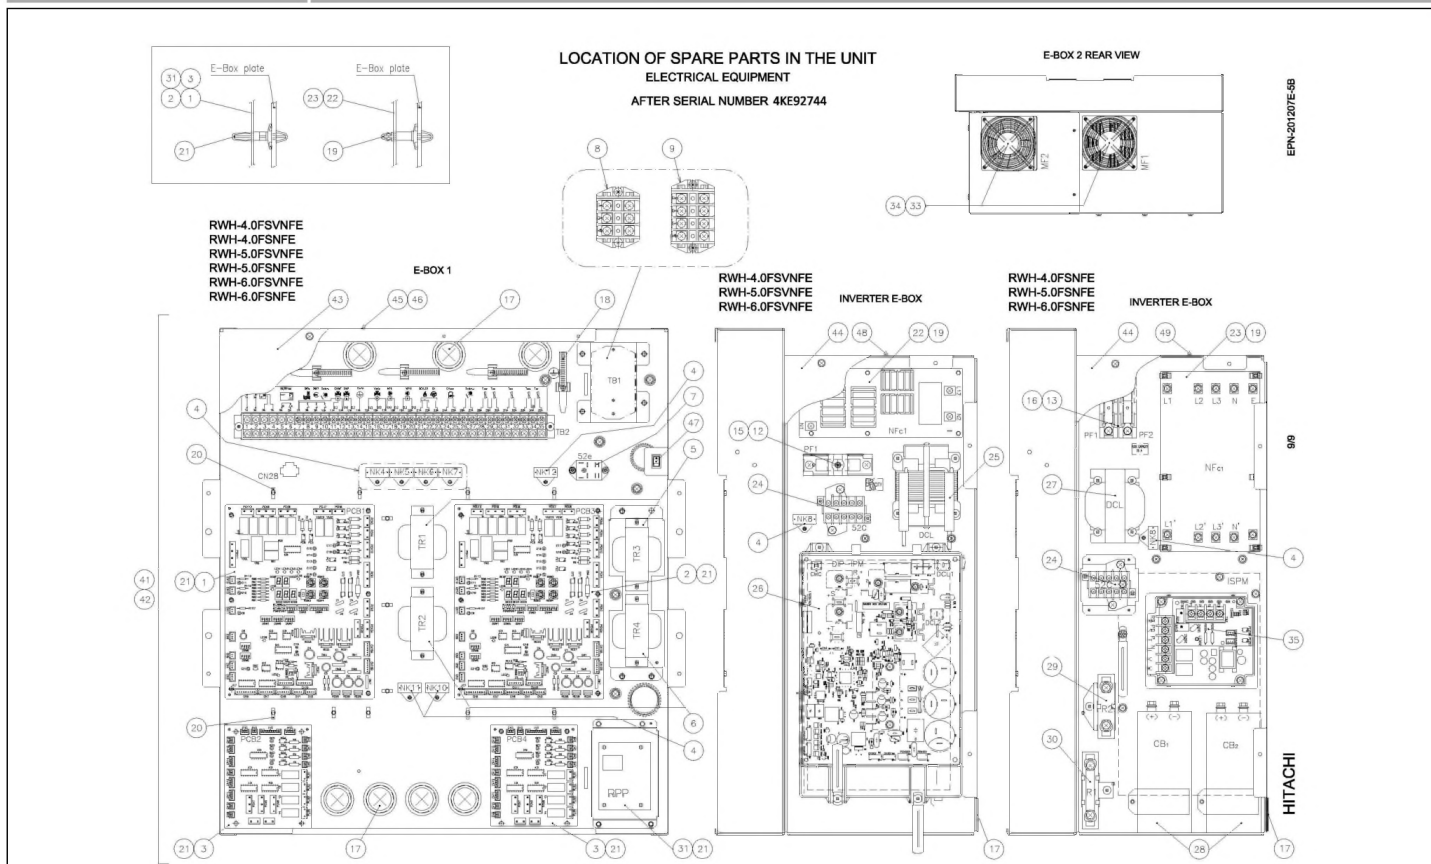

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWH-4.0FSNFE

1	E03215	PCB 1	1	
2	E03216	PCB 3	1	
3	E03774	PCB	2	
4	P14366	SURGE ABSORBER	9	Before Serial Number 4KE92744
4	P14366	SURGE ABSORBER	8	After Serial Number 4KE92744
5	E03814	Transformer	2	
6	E03815	Transformer	2	
7	E02198	RELAY	1	15 A
9	E02519	TERMINAL BOARD	1	
10	E01873	MAGNETIC CONTACTOR	1	(16 A) Before Serial Number 4KE92744
11	E00003	FUSE	1	(3, 15 A) Before Serial Number 4KE92744
13	E00810	FUSE	2	20 A
14	E02516	FUSE HOLDER	1	Before Serial Number 4KE92744
16	E01015	FUSE HOLDER	2	
17	E02060	RUBBER BUSH	9	
18	E02012	CLAMP	4	
19	E01789	SPACER	6	
20	E03816	Harness Lifter	12	
21	P19112	SPACER	24	
23	E01430	NOISE FILTER	1	
24	P24721	MAGNETIC CONTACTOR	1	
27	P24381	REACTOR	1	Before Serial Number 4KE27700
27	E03818	Reactor Assy	1	After Serial Number 4KE27700
28	P23970	CAPACITOR	2	
29	P23797	RESISTOR	1	
30	P23796	RESISTOR	1	
31	E01367	R.P.P RELAY	1	
32	E03221	Capacitor	1	Before Serial Number 4KE27700
33	E03823	Fan Box	2	
34	E03824	GUARD GRILLE	2	
35	P28331	PCB	1	Before Serial Number 4KE27700
35	E03825	INV. ASSY	1	After Serial Number 4KE27700
36	E03296	HARNESS CN26	1	Wire to wire cable. Before Serial Number 4KE27700
37	E03297	HARNESS CN27	1	Harness with sensors included. Before Serial Number 4KE27700
38	E03298	HARNESS CN24	1	Harness with valves included. Before Serial Number 4KE27700
39	E03299	HARNESS PS SENSOR	1	Wire to wire cable. Before Serial Number 4KE27700
40	E03300	HARNESS PS SENSOR	1	Wire to wire cable. Before Serial Number 4KE27700
42	E03224	ELECTRICAL WIRING DIAGRAM	1	Assembly (Components + Harness). Before Serial Number 4KE27700
42	E03820	Electrical Wiring Diagram	1	Assembly (Components + Harness). From Serial N° 4KE27700 to before 4KE64806 (except S. N° 4KE63218)
42	E04215	ELECTRIC WIRING DIAGRAM	1	Assembly (Components + Harness) From Serial N° 4KE64806 (including S. N° 4KE63218) to before S. N° 4KE92744
42	E04215	ELECTRIC WIRING DIAGRAM	1	Assembly (Components + Harness) From Serial N° 4KE92744
43	E03225	E-BOX COVER ASSY	1	(Plate+ Labels). Before Serial Number 4KE27700

MODULE HYDRAULIQUE

RWH-4.0FSNFE

43	E04218	E-BOX COVER ASSY	1	(Plate+ Labels). From Serial Number 4KE27700 to before 4KE64806 (except S. N° 4KE63218)
43	E04220	E-BOX COVER ASSY	1	(Plate+ Labels). From Serial Number 4KE64806 (including S. N° 4KE63218) to before S. N° 4KE92744
43	E04353	E-BOX COVER ASSY	1	(Plate+ Labels). From Serial Number 4KE92744
44	E03226	INV E-BOX COVER ASSY	1	(Plate+ Labels). Before Serial Number 4KE27700
44	E03822	INV. Assy E-Box Cover	1	(Plate+ Labels). After Serial Number 4KE27700
46	E03228	E-BOX SUBASSY	1	Only plate (without components). Before Serial Number 4KE27700
46	E03827	E-Box 1 SubAssy	1	Only plate (without components). After Serial Number 4KE27700
47	E03828	Rocker Swith	1	After Serial Number 4KE27700
49	E03858	INV. E-BOX SUBASSY	1	After Serial Number 4KE27700
35	P30843	INVERTER MODULE	1	
35	E04646	INV MODULE ASSY	1	