


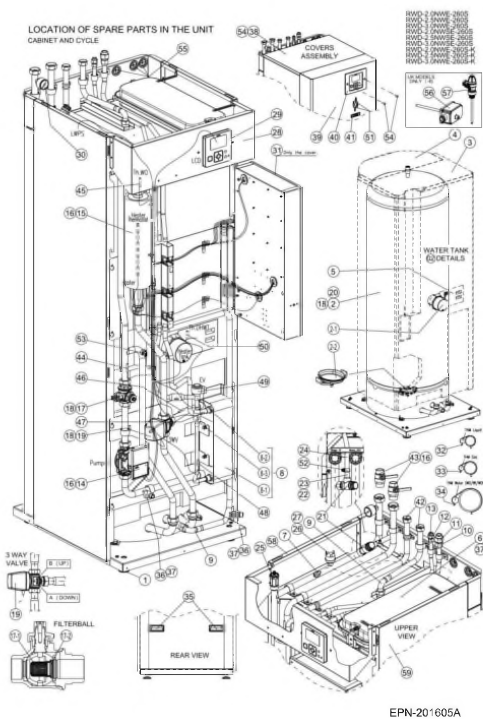

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWD-3.0NWE-260S-K

1	E04869	FOOT	4	
2	E04970	WATER TANK 260L UK	1	
2-1	E04088	TANK HEATER	1	
2-2	E04768	BOTTOM TANK FLANGE	1	
3	E04066	FRONT INSULATION	1	
4	E04067	BACK INSULATION	1	
5	E05028	SQUARE INSULATION	1	
6	E04893	EXPANSION VESSEL (6L)	1	
7	E04048	FLEXIBLE PIPE	1	
8	E05009	PHEx UNIT	1	
8-1	E04896	PLATE HEX	1	
8-2	E03077	EXPANSION VALVE	1	
8-3	P25041	STRAINER	2	
9	E04073	UNION	2	
10	E02488	UNION	1	
11	E02490	FLARE NUT	1	
12	E02487	UNION	1	
13	E02489	FLARE NUT	1	
14	E04894	CIRCULATEUR	1	
15	E05023	E-Heater Unit	1	
16	E03832	Gasket	8	
17	E04897	FILTER BALL	1	
17-1	E04898	FILTER	1	
17-2	E04899	SEEGER	1	
18	E02528	GASKET	7	
19	E03271	3 WAY VALVE	1	
20	E04052	GASKET	2	
21	E02475	SECURITY VALVE	1	
22	E04873	GASKET	1	
23	E02507	UNION	1	
24	E02546	DRAIN PIPE	1	
25	E04040	AIR PURGE	1	
26	E02494	PRESSURE SW	1	
27	E05017	GASKET	1	
28	E05006	LCD SUPPORT	1	
29	E04960	REMOTE CONTROL AS	1	
30	E05014	MANOMETER	1	
31	E05021	E-BOX COVER ASSY	1	
32	E02549	P-SPRING	1	
33	E02550	P-SPRING	1	
34	E01193	P-SPRING	3	
35	E01897	HANDLE	2	
36	E04069	MINI VALVE	2	
37	E02497	GASKET	3	
38	E05013	UPPER COVER	1	
39	E05012	SERVICE COVER ASSY	1	
40	E04955	XEK12635 A - LCD FRAME	1	
41	E04944	XEK39388 A - YUTAKI FRAME	1	
42	E04954	GASKET	2	
43	E05019	SHUTDOWN VALVE	2	

MODULE HYDRAULIQUE


RWD-3.0NWE-260S-K

44	E04928	THERMISTOR ASSY 1	1
45	E04980	THERMISTOR ASSY 1	1
46	E04981	THERMISTOR ASSY 1	1
47	E04982	THERMISTOR ASSY 2	1
48	E04983	THERMISTOR ASSY 2	1
49	E04965	EXP. VALVE COIL	1
50	E05020	THERMISTOR DHWT	1
51	E04945	XEK12635 A - LCD FRAME	2
52	E05026	CLAMP	1
53	E05027	MANUAL AIR PURGE	1
54	E02501	Screw	4
55	E02060	RUBBER BUSH	3
56	E05025	THERMOSTAT	1
57	E05015	PRES AND TEMP. VALVE	1
58	E05058	SIDE COVER L	1
59	E05059	SIDE COVER R	1

MODULE HYDRAULIQUE
RWD-3.0NWE-260S-K

LOCATION OF SPARE PARTS IN THE UNIT

ELECTRICAL EQUIPMENT

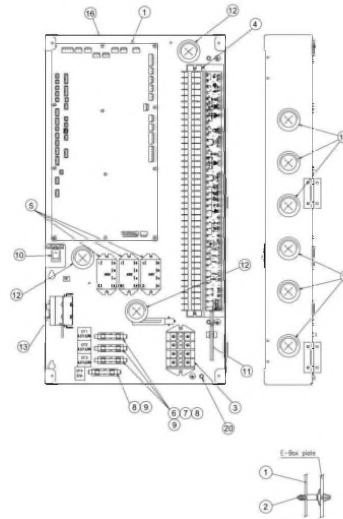

RWD-2.0WAVE-2005G-KJ
RWD-2.5WAVE-2005G-KJ
RWD-3.0WAVE-2005G-KJ
RWD-4.0WAVE-2005G-KJ
RWD-5.0WAVE-2005G-KJ
RWD-6.0WAVE-2005G-KJ
RWD-2.0WAVE-2005G-KJ
RWD-2.5WAVE-2005G-KJ
RWD-3.0WAVE-2005G-KJ
RWD-4.0WAVE-2005G-KJ
RWD-5.0WAVE-2005G-KJ
RWD-6.0WAVE-2005G-KJ
RWD-2.0WAVE-2005G-KJ
RWD-2.5WAVE-2005G-KJ
RWD-3.0WAVE-2005G-KJ
RWD-4.0WAVE-2005G-KJ
RWD-5.0WAVE-2005G-KJ
RWD-6.0WAVE-2005G-KJ
RWD-2.0WAVE-2005G-KJ
RWD-2.5WAVE-2005G-KJ
RWD-3.0WAVE-2005G-KJ
RWD-4.0WAVE-2005G-KJ
RWD-5.0WAVE-2005G-KJ
RWD-6.0WAVE-2005G-KJ

EPN-201605A

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWD-3.0NWE-260S-K

1	E04665	INSTRUCTION ASSY PCB	1	
2	E01789	SPACER	12	
3	E02519	TERMINAL BOARD	1	
4	E04778	TERMINAL BOARD	1	
5	E04779	RELAY	3	
6	E04780	FUSE	3	
8	E04782	FUSE	1	
9	E04783	HARNESS LIFTER	4	
10	E04784	ENDLING SADDLE	1	
11	E02012	CLAMP	1	
12	E02060	RUBBER BUSH	9	
13	E04785	THERMOSTAT	1	
14	E04786	ELECTRICAL BOX	1	
16	E04791	E-BOX SUBASSY	1	