

Pièces détachées

Main view



Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWLT-3.0VN1E

1	E05261	SOLENOID VALVE BODY	1	
2	E04040	AIR PURGE	1	
3	E02475	SECURITY VALVE	1	
4	E04873	GASKET	1	for Union 5 to Security Valve connection.
5	E02507	UNION	1	
6	E04897	FILTER BALL	1	
7	E04898	FILTER	1	
8	E04899	SEEGER	1	
9	E05249	PHEX UNIT	1	Assembly.
9-1	E04896	PLATE HEX	1	
9-2	E03077	EXPANSION VALVE	1	
9-3	P25041	STRAINER	2	
9-4	E02487	UNION	1	Liquid connection.
9-5	E02488	UNION	1	Gas connection
9-6	E02489	FLARE NUT	1	Liquid connection.
9-7	E02490	FLARE NUT	1	Gas connection
10	E03832	Gasket	6	for Pump and Shutdown Valves connections.
11	E02528	GASKET	2	for FilterBall connections.
12	E04894	CIRCULATEUR	1	
13	E02546	DRAIN PIPE	1	
14	E05014	MANOMETER	1	
15	E04903	THERMISTOR ASSY 1	1	Water In THM.
16	E04904	THERMISTOR ASSY 1	1	Water Out THM.
17	E05262	HRN SV COIL	1	
18	E04930	THERMISTOR ASSY 2	1	Gas THM.
19	E04993	THERMISTOR ASSY 2	1	Liquid THM.
20	E03180	EXPANSION VALVE COIL	1	
21	E02549	P-SPRING	1	
22	E02550	P-SPRING	1	
23	E01193	P-SPRING	2	
24	E02501	Screw	2	
25	E02497	GASKET	1	Vessel connection.
26	E04893	EXPANSION VESSEL (6L)	1	
27	E05247	E-BOX COVER ASSY	1	Plate + Labels.
28	E05254	PC-ARFHE ASSY	1	
29	E02504	CLAMP	2	
30	E04999	XEK25411 A - SERVICE COVER ASSY	1	Assembly.
31	E04955	XEK12635 A - LCD FRAME	1	
32	E05245	HYDRO FREE LABEL	1	
33	E05019	SHUTDOWN VALVE	2	
34	E05018	WALL SUPPORT	1	
35	E04945	XEK12635 A - LCD FRAME	2	
36	E05026	CLAMP	1	

Pièces détachées

Main view



Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

MODULE HYDRAULIQUE

RWLT-3.0VN1E

1	E05784	PCB	1	
2	E01789	SPACER	12	
3	E01088	TERMINAL BOARD	1	
4	EC4778	TERMINAL BOARD	1	
5	EC4779	RELAY	1	
6	EC4782	FUSE	1	20A
7	E02516	FUSE HOLDER	1	
8	E03828	Rocker Switch	1	
9	E02012	CLAMP	1	
10	E02060	RUBBER BUSH	9	
11	E05256	ELECTRICAL BOX	1	Assembly (Plate + Components + Harness)
14	EC4791	E-BOX SUBASSY	1	Only plate (without components)