
SPARE PARTS EXPLODED VIEW SOLARSYSTEM

Model

SOLAR MANAGER IZY/PRO

R8217591-02 - 06/09/2016

Col	Reference	Model type	Begin	End
5	3024275	PROBE PT1K PRO - PIPE	06-2014	-
4	3024274	PROBE PT1K PRO - STORAGE	06-2014	-
3	3024273	PROBE PT1K PRO - COLLECTOR	06-2014	-
2	3024253	SOLAR MANAGER PRO - CHX	06-2014	-
2	3024252	SOLAR MANAGER PRO - AR	06-2014	-
1	3024340	SOLAR MANAGER IZY	06-2015	-

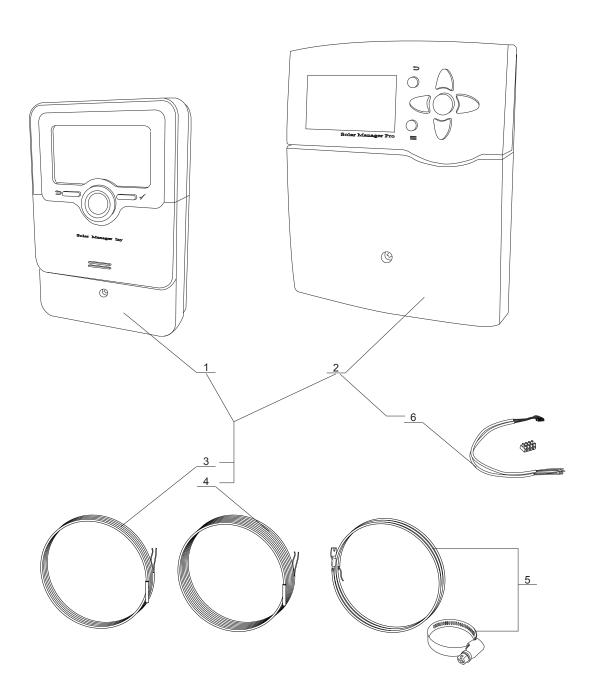

						/	/	\ \gamma^2/	6 7 8 9 10 11 12 13 14 15 16 17 18		
$\overline{}$					/	/2		//	///	/r	
© =	Description	Manf. Pt. N	Туре	1	143/2S	143°C)	MIX.	ari)	ndit.	31	
0001	SOLAR MANAGER IZY	65116117		1	2	3	4	5	6 7 8 9 10 11 12 13 14 15 16 17 18	From	to
0002	SOLAR MANAGER PRO	65116118			•						
	COLLECTOR SOLAR SONDE SOLAR TANK SENSOR	65116119 65116120		•	•	•	•				
	SOLAR SONDE WITH SCREWED CLAMP	65116121						•			
0006	PWM/0-10V ADAPTER CABLE WITH TERM. 4-PIN	65116213			•						

LIST OF THE ABBREVIATIONS

HW : Hot water.

CW : Cold water.

C : Ceramic resistance (normal heating).

Ca : Ceramic resistance (accelerated heating)

TP : Immersion heater.

1F : With fittings.

2F : Without fittings.

3F : With fittings and another outlet connection.

AMI : With mixing valve.

SMI : Without mixing valve.

PUISS : Power of th appliance.

PN : Appliance with normal pression.

LP : Appliance with low pression.

PV : Appliance with variable power.

PF : Appliance with fixed power.

The indications mentionned on the prices, commercial or technical literature and the scheme are written for your guidance and are available at a given time. The CONSTRUCTOR retains the power to modify the presentation, the form, the size, ϑ the conception or the material of the products.