


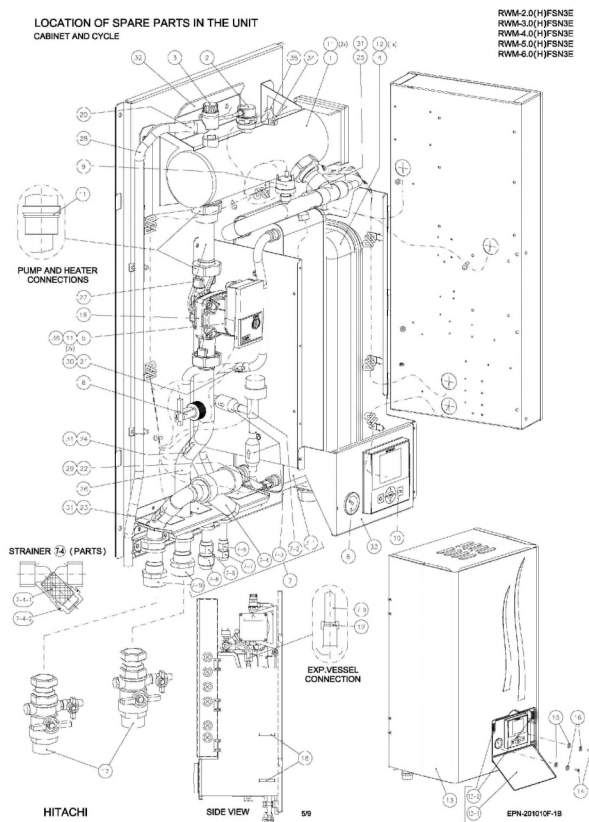

| Rep. | Référence | Description | Qté | Remarques |
|------|-----------|-------------|-----|-----------|
|------|-----------|-------------|-----|-----------|

# MODULE HYDRAULIQUE

## RWM-6.0FSN3E

|       |        |                      |   |                                                                                                                      |
|-------|--------|----------------------|---|----------------------------------------------------------------------------------------------------------------------|
| 1     | E02474 | ELECTRIC HEATER ASSY | 1 | Gaskets 11 not included                                                                                              |
| 2     | E01909 | PURGEUR AUTO         | 1 |                                                                                                                      |
| 3     | E02475 | SECURITY VALVE       | 1 |                                                                                                                      |
| 4     | E02476 | EXPANSION VESSEL 6L  | 1 | Gasket 12 not included                                                                                               |
| 5     | E02478 | POMPE                | 1 | Gaskets 11 and Pump Ins. 19 not included ( Equivalent to E03705), Before serial N° 4KE64806 ( except S. N° 4KE63216) |
| 5     | E04152 | PUMP                 | 1 | Gaskets 11 and Pump Ins. 19 not included. From Serial N° 4KE64806 ( including S. N° 4KE63216)                        |
| 6     | E02479 | FLOW SWITCH          | 1 |                                                                                                                      |
| 7     | E02482 | PHEX UNIT            | 1 | Assembly ( from 7- 1 to 7- 10)                                                                                       |
| 7-1   | E02485 | PLATE HEX            | 1 |                                                                                                                      |
| 7-2   | E01716 | EXP. VALVE           | 1 |                                                                                                                      |
| 7-3   | E01206 | STRAINER             | 2 |                                                                                                                      |
| 7-4   | E03830 | Water Strainer Unit  | 1 | Body + Mesh + Gasket. Before Serial N° 4KE24049                                                                      |
| 7-4   | E03749 | Water Strainer       | 1 | Body + Mesh + Gasket. From Serial N° 4KE24049                                                                        |
| 7-4-1 | E02946 | MESH                 | 1 | A35, 6xL49 Before Serial Number 4JE05436                                                                             |
| 7-4-1 | E02948 | MESH                 | 1 | Å31, 5xL46, 5 From SerialNumber 4JE05436 ( 4JE05436 included) to before SerialN° 4KE24049                            |
| 7-4-1 | E03750 | Mesh                 | 1 | A36 x L43, From Serial N° 4KE24049                                                                                   |
| 7-4-2 | E02947 | Gasket               | 1 | Å50xÅ42x1 Before Serial Number 4JE05436                                                                              |
| 7-4-2 | E02949 | GASKET               | 1 | Å43xÅ39xÅ2 From Serial Number 4JE05436 ( 4JE05436 included) to before Serial N° 4KE24049                             |
| 7-4-2 | E03751 | Gasket               | 1 | Å41, 4 x Å36, 2 x Å2, 6, From Serial N° 4KE24049                                                                     |
| 7-5   | E02487 | UNION                | 1 | Liquid Connection                                                                                                    |
| 7-6   | E02488 | UNION                | 1 | Gas Connection                                                                                                       |
| 7-7   | E02489 | FLARE NUT            | 1 | Liquid Connection                                                                                                    |
| 7-8   | E02490 | FLARE NUT            | 1 | Gas Connection                                                                                                       |
| 7-9   | E03668 | Pipe 4               | 1 | Vessel Connection                                                                                                    |
| 7-10  | E02492 | UNION                | 2 | Water Connection                                                                                                     |
| 8     | E02493 | MANOMETER            | 1 | Before Serial N° 4KE36842                                                                                            |
| 8     | E03800 | MANOMETER            | 1 | From Serila N° 4KE36842                                                                                              |
| 9     | E02494 | PRESSURE SW          | 1 |                                                                                                                      |
| 10    | E02495 | CONTROL              | 1 | Before Serial Number 4HE87914                                                                                        |
| 10    | E02777 | CONTROL              | 1 | From Serial Number 4HE89240 to 4JE94362                                                                              |
| 10    | E03478 | LCD CONTROL          | 1 | After Serial Number 4JE94363                                                                                         |
| 11    | E02496 | GASKET               | 4 | for Electric Heater and Pump connections                                                                             |
| 12    | E02497 | GASKET               | 1 | for Expansion Vessel connection                                                                                      |
| 13    | E02498 | COVER ASSY           | 1 | Assembly ( Screws and Washers not included)                                                                          |
| 13-1  | E02499 | LCD COVER            | 1 | Assembly ( LCD Cover + Shaft + Washers)                                                                              |
| 13-2  | E02500 | MAGNET               | 2 |                                                                                                                      |
| 14    | E02501 | Screw                | 2 | for Cover Assy fixing                                                                                                |
| 15    | E02547 | NYLON WASHER         | 2 | for Cover Assy fixing ( material: nylon)                                                                             |
| 16    | E02548 | WASHER               | 2 | for Cover Assy fixing ( material: steel)                                                                             |
| 17    | E02503 | VANNE D'ISOLEMENT    | 2 |                                                                                                                      |
| 18    | E02504 | CLAMP                | 2 | for installer wiring                                                                                                 |
| 19    | E02506 | PUMP INSULATION      | 1 | only insulation around the Pump. Before Serial N° 4KE64806 ( except S. N° 4KE63216)                                  |

# MODULE HYDRAULIQUE

## RWM-6.0FSN3E

|    |        |                         |   |                                                                                                                                                                                                                                             |
|----|--------|-------------------------|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 19 | E04056 | PUMP INSULATION         | 1 | only insulation around the Pump. From Serial N° 4KE64806 ( including S. N° 4KE63215 and 4KE63216)                                                                                                                                           |
| 20 | E02507 | UNION                   | 1 | for Security Valve drain connection                                                                                                                                                                                                         |
| 21 | E02780 | THERMISTOR ASSY         | 1 | THM G ( Gas)                                                                                                                                                                                                                                |
| 22 | E02782 | THERMISTOR ASSY         | 1 | THM L ( Liquid)                                                                                                                                                                                                                             |
| 23 | E02784 | THERMISTOR ASSY         | 1 | THM WI ( Water In)                                                                                                                                                                                                                          |
| 24 | E02786 | THERMISTOR ASSY         | 1 | THM WO ( Water Out)                                                                                                                                                                                                                         |
| 25 | E02788 | THERMISTOR ASSY         | 1 | THMWOHP ( Water Out PHEX) Before SerialNumber 4JE94362                                                                                                                                                                                      |
| 25 | E03670 | Thermistor Assy         | 1 | THMWOHP ( Water Out PHEX) After Serial Number 4JE94363                                                                                                                                                                                      |
| 26 | E02513 | PUMP PIPE ASSY 1        | 1 |                                                                                                                                                                                                                                             |
| 27 | E02514 | PUMP PIPE ASSY 2        | 1 |                                                                                                                                                                                                                                             |
| 28 | E02546 | DRAIN PIPE              | 1 | Vinyl Tube ( diameter 16mm - 1 meter length)                                                                                                                                                                                                |
| 29 | E02549 | P-SPRING                | 1 | for liquid THM fixing                                                                                                                                                                                                                       |
| 30 | E02550 | P-SPRING                | 1 | for gas THM fixing                                                                                                                                                                                                                          |
| 31 | E02551 | P-SPRING                | 3 | for water THM fixing                                                                                                                                                                                                                        |
| 32 | E02552 | WALL SUPPORT            | 1 |                                                                                                                                                                                                                                             |
| 33 | E02553 | CONTROL SUPPORT         | 1 | Before Serial N° 4KE36842                                                                                                                                                                                                                   |
| 33 | E03801 | CONTROL SUPPORT         | 1 | From Serial N° 4KE36842                                                                                                                                                                                                                     |
| 34 | E02938 | THERMOSTAT              | 1 | Thermal cut- off thermostat for Electric heater. RWM- 2. 0/3. 0 FSN3E Before 4JE31999 RWM- 4. 0/5. 0/6. 0 FSN3E Before 4JE22551 From 4JE23251to 4JE24899 From 4JE27512 to 4JE28499 RWM- 8. 0/10. 0 FSN3E Before 4JE56000                    |
| 34 | E02980 | Thermostat              | 1 | Thermal cut- off thermostat for Electric heater ( Ther. Cap included). RWM- 2. 0/3. 0 FSN3E After 4JE32000 RWM- 4. 0/5. 0/6. 0 FSN3E From 4JE22552 to 4JE23250 From 4JE24900 to4JE27511 After 4JE28500 RWM- 8. 0/10. 0 FSN3E After 4JE56001 |
| 35 | E02937 | THE CAP                 | 1 | Protector Cap forThermostat 34. RWM- 2. 0/3. 0 FSN3E Before 4JE31999 RWM- 4. 0/5. 0/6. 0 FSN3E Before 4JE22551 From 4JE23251 to 4JE24899 From 4JE27512 to 4JE28499 RWM- 8. 0/10. 0 FSN3E Before 4JE56000                                    |
| 36 | E04221 | HARNESS POWER PUMP ASSY | 1 | From Serial N° 4KE64806                                                                                                                                                                                                                     |

# MODULE HYDRAULIQUE


## RWM-6.0FSN3E

Pièces détachées

Main view

LOCATION OF SPARE PARTS IN THE UNIT  
ELECTRICAL EQUIPMENT

RWM-2.0(H)FSN3E  
RWM-3.0(H)FSN3E  
RWM-4.0(H)FSN3E  
RWM-5.0(H)FSN3E  
RWM-6.0(H)FSN3E

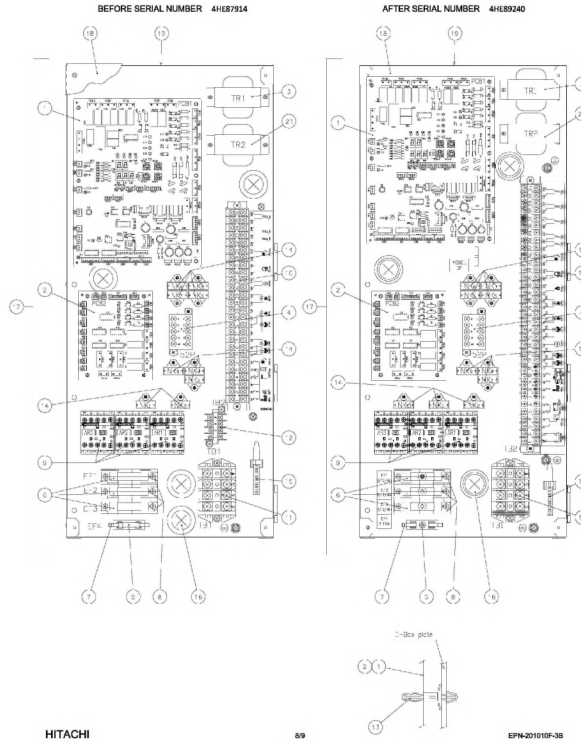

HITACHI

89

EPH-201010F-38

| Rep. | Référence | Description | Qté | Remarques |
|------|-----------|-------------|-----|-----------|
|------|-----------|-------------|-----|-----------|

# MODULE HYDRAULIQUE

## RWM-6.0FSN3E

|    |         |                      |    |                                                                                                                    |
|----|---------|----------------------|----|--------------------------------------------------------------------------------------------------------------------|
| 1  | E02515  | INSTRUCTION ASSY PCB | 1  | Before Serial Number 4HE87914                                                                                      |
| 1  | E02727  | INSTRUCTION ASSY PCB | 1  | From Serial Number 4HE89240 to 4JE94362                                                                            |
| 1  | E03475  | Instruction PCB      | 1  | After Serial Number 4JE94363                                                                                       |
| 2  | E03774  | PCB                  | 1  |                                                                                                                    |
| 3  | E04076  | TRANSFORMER 1        | 1  |                                                                                                                    |
| 4  | E01873  | MAGNETIC CONTACTOR   | 1  | 16 A                                                                                                               |
| 5  | E00003  | FUSE                 | 1  | 3, 15 A                                                                                                            |
| 6  | EC00071 | FUSE                 | 3  | 12 A                                                                                                               |
| 7  | E02516  | FUSE HOLDER          | 1  |                                                                                                                    |
| 8  | E01015  | FUSE HOLDER          | 3  |                                                                                                                    |
| 9  | E02517  | MAGNETIC CONTACTOR   | 3  | 12 A                                                                                                               |
| 10 | E02518  | TERMINAL BOARD       | 1  | Before Serial Number 4HE87914                                                                                      |
| 10 | E02792  | TERMINAL BOARD       | 1  | After Serial Number 4HE89240                                                                                       |
| 11 | E02519  | TERMINAL BOARD       | 1  |                                                                                                                    |
| 12 | E01089  | TERMINAL BOARD       | 1  | Before Serial Number 4HE87914, ( After Serial Number 4HE89240 not necessary)                                       |
| 13 | P19112  | SPACER               | 10 |                                                                                                                    |
| 14 | P14366  | SURGE ABSORBER       | 9  | Before Serial Number 4HE87914                                                                                      |
| 14 | P14366  | SURGE ABSORBER       | 10 | After Serial Number 4HE89240                                                                                       |
| 15 | E02012  | CLAMP                | 1  |                                                                                                                    |
| 16 | E02060  | RUBBER BUSH          | 10 |                                                                                                                    |
| 17 | E02794  | POWER UNIT           | 1  | Assembly ( Components + Harness) Before Serial N° 4KE64806 ( except S. N° 4KE63216)                                |
| 17 | E04160  | E-BOX                | 1  | Assembly ( Components + Harness) From Serial N° 4KE64806 ( including S. N° 4KE63216)                               |
| 18 | E02554  | E-BOX COVER ASSY     | 1  | ( Plate + Labels) Before Serial Number 4HE87914                                                                    |
| 18 | E02796  | E-BOX COVER ASSY     | 1  | ( Plate + Labels) From Serial N° 4HE89240 to before S. N° 4KE64806 ( except S. N° 4KE63215 and 4KE63216)           |
| 18 | E04162  | E-BOX COVER ASSY     | 1  | ( Plate + Labels) From Serial N° 4KE64806 ( including S. N° 4KE63215 and 4KE63216)                                 |
| 19 | E02555  | E-BOX SUBASSY        | 1  | Only plate ( without components), Before Serial Number 4HE87914                                                    |
| 19 | E02798  | E-BOX SUBASSY        | 1  | Only plate ( without components), From Serial N° 4HE89240 to before 4KE64806 ( except S. N° 4KE63215 and 4KE63216) |
| 19 | E04164  | E-BOX SUB ASSY       | 1  | Only plate ( without components), From Serial N° 4KE64806 ( including S. N° 4KE63215 and 4KE63216)                 |
| 21 | E04077  | TRANSFORMER 2        | 1  |                                                                                                                    |