


CASSETTE

RCD-2.5FSR

Pièces détachées

Main view

LOCATION OF SERVICE PARTS IN THE UNIT

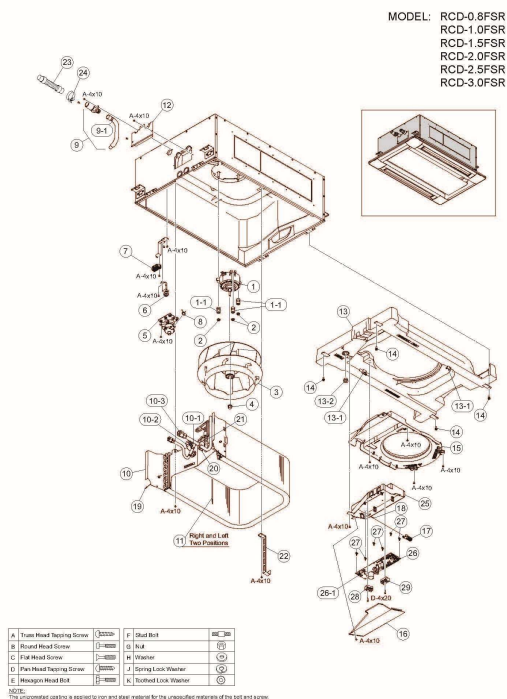

- 2 -

Rep.	Référence	Description	Qté	Remarques
------	-----------	-------------	-----	-----------

CASSETTE

RCD-2.5FSR

1	P30483	FAN MOTOR	1	No.1-1 Vibration Absorber x 3
1-1	P30485	VIBRATION ABSORBER	3	
2	P28899	Nut	3	
3	P30486	TURBO FAN	1	
4	P30487	NUT	1	
5	P30488	DRAIN PUMP	1	
6	P32073	FLOAT SWITCH ASSY	1	
7	P30499	ANTIBACTERIAL AGENT ASSY	1	except for Turkey
8	P21284	WIRE CLAMP	1	
9	P29753	DRAIN HOSE ASSY	1	
9-1	P21271	DRAIN HOSE	1	
10	P30505	HEAT EXCHANGER ASSY	1	No.10-1 Expansion Valve x 1, No.10-2 Motor for EXPV. x 1, No.10-3 Flare Nut x 1
10-1	P28702	EXPANSION VALVE	1	
10-2	P29142	Expv Motor	1	for Expansion Valve
10-3	R4227	Flare Nut	1	15.88
11	P30500	WIND DIRECTION PLATE	2	
13	P30494	Drain Pan Assy	1	except for Turkey No.13-1 Hook x 2, No.13-2 Rubber Cap x 1
13-1	17H26225 A	Hook	2	
13-2	P28881	RUBBER PLUG	1	
14	17G09328 A	M6 BOLT	4	
15	P30496	BELL MOUTH ASSY	1	
16	17F15064 B	Electrical Box Cover	1	
17	P30501	THERMISTOR CASE	1	for THM1
18	P24017	THERMISTOR	1	for Air Inlet, THM1
19	P23588	THERMISTOR	1	for Air Outlet, THM2
20	P28901	Thermistor	1	for Gas Pipe, THM5
21	P28902	Thermistor	1	for Freeze Protection, THM3
22	17H25097 B	Support Plate	1	
23	P25911	HOSE	1	
24	P28308	Clip	1	
25	17F15063 B	Electrical Box	1	
26	P32411	PCB-S	1	PCB1, PI153, No.26-1 Fuse x 1
26-1	P27957	FUSE	1	EFR1, 5A
27	P19516	SPACER	6	for PCB1
28	P29234	Terminal Board	1	TB1
29	P30498	TERMINAL BLOCK	1	TB2